5 Port Solenoid Valve

VQC1000/2000 Series

The EX250/500 series is to be discontinued. When designing new equipment and facilities, consider using another series (EX260/EX600) instead.

Metal Seal | Rubber Seal **Connector Type Manifold**


Power saving

Standard: 0.4 W

(Reduced by **60%** compared to current model)

High-pressure (1 MPa, Metal seal): **0.95 W**

IP67 enclosure compatible

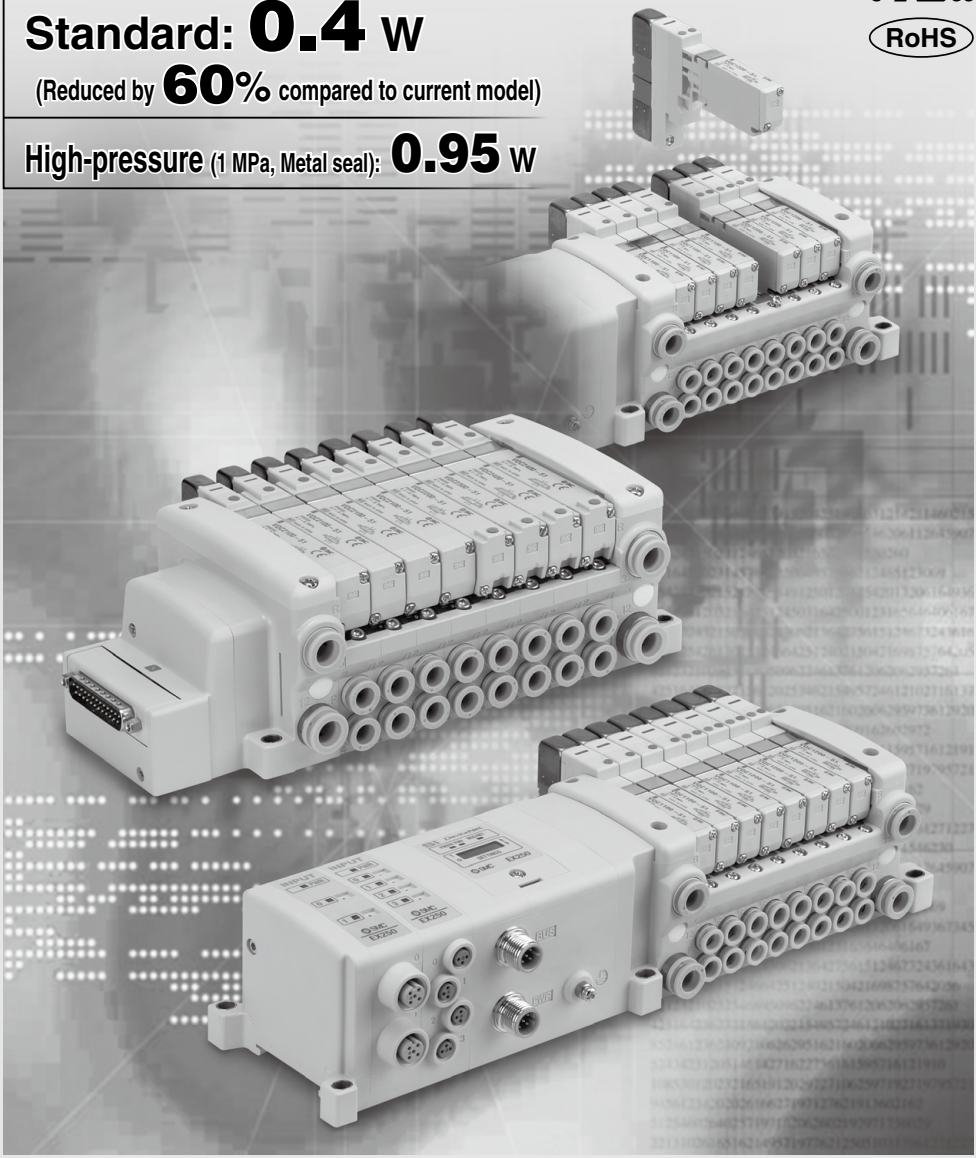

VQC1000/2000 Series

Power saving


Standard: 0.4 W (Reduced by 60% compared to current model)
High-pressure (1 MPa, Metal seal): 0.95 W

IP67 enclosure compatible Dust-tight, Immersion-proof

(Based on IEC60529) (S/T/L/M kit)

Applicable to EX600 (Input/Output) serial transmission system (Fieldbus system)

- Available for DeviceNet®, PROFIBUS DP, CC-Link, EtherNet/IP™, EtherCAT and PROFINET Fieldbus protocols
- **Max. 9 units** Note) **can be connected in any order.**
  The unit to connect input device such as an auto switch, pressure switch and flow switch, and the unit to connect output device such as a solenoid valve, relay and indicator light can be connected in any order.
  Note) Except SI unit
- **Analog unit can be connected with analog input device or analog output device.**
  As well as a Digital (switch) Input/Output Unit, a unit applicable to analog signal is provided, and can be connected with various device for control.
- **Self-diagnosis function**
  It is possible to ascertain the maintenance period and identify the parts that require maintenance, by an input (sensor) open circuit detecting function and an input/output signal of ON/OFF counter function. Also, the monitoring of input/output signal and the setting of parameters can be performed with a Handheld Terminal.

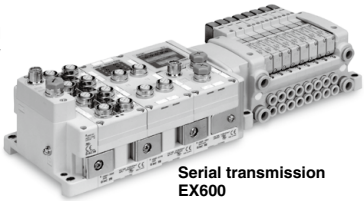

Serial transmission EX600

The EX260 and EX600 series support safety communication.

- **This is a Fieldbus unit which supports safety standard ISO 13849-compliant safety circuit constructions.**
  The safety communication protocol is a communication protocol that transmits safety-related data by network communication and can be used up until safety standards ISO 13849-1 PL e and IEC 61508/IEC 62061 SIL 3.
- **Using the safety communication protocol**
  Refer to the EX260 and EX600 series catalogs for details on units that support the safety communication protocol.
  When using a manifold valve within an ISO 13849-compliant safety system, the device needs to be considered from both the pneumatic circuit and the electric side.
  Devices (including valves) need to be selected based on whether their functions are in line with the safety level of the equipment as a whole.
  The use of valves that have been validated as being compliant with ISO 13849-2 may be required.
  For details on valves that have been validated, please contact SMC.
  In addition, refer to “Safety Instructions” for precautions on model selection.


Compact and high flow

Series	Manifold pitch (mm)	Flow rate characteristics Note)						Applicable cylinder bore size (mm)
		Metal seal			Rubber seal			
		C [dm³/(s·bar)]	b	Cv	C [dm³/(s·bar)]	b	Cv	
VQC1000	10.5	0.72	0.25	0.18	1.0	0.30	0.25	Up to ø50
VQC2000	16	2.6	0.15	0.60	3.2	0.30	0.80	Up to ø80


Note) Flow rate characteristics: 2-position single, 4/2 → 5/3 (A/B → R1/R2)

Connector entry direction can be changed with a single push. (F/P kit)

The connector entry direction can be changed from the top to the side by simply pressing the manual release button.
It is not necessary to use the manual release button when switching from the side to the top.

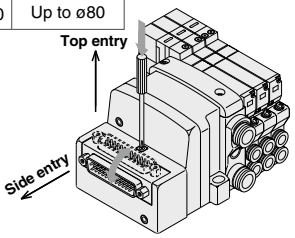


A wide variety of prepackaged wiring configurations

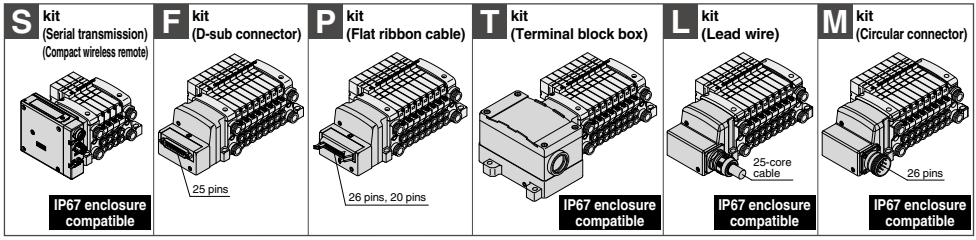


- Our six standard wiring packages bring a world of ease to wiring and maintenance work, while the protective enclosures of four of them conform to IP67 standards.
- The serial transmission is compatible with a combined I/O unit. (Not applicable to Gateway unit)

Connector type manifold

- The use of multi-pin connectors to replace wiring inside manifold blocks provides flexibility when adding stations or changing manifold configuration.
- All kits use multi-pin connectors, so switching from the F kit (D-sub connector) to the S kit (serial transmission) can be done simply by changing the kit section.

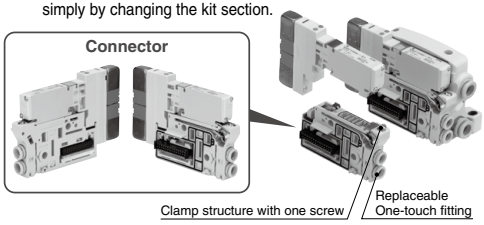

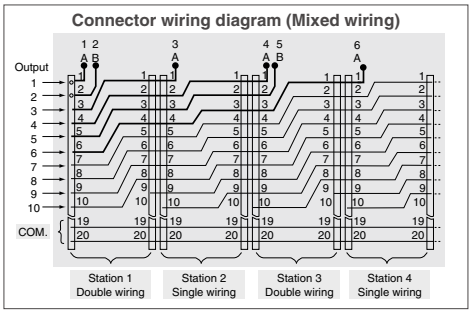


(Refer to the connector wiring diagram.)
Printed circuit board patterns between connectors are shifted at every station. This allows for viable connections to take place without necessarily specifying whether the manifold station is double, single, or mixed wiring.




Dual 3-port valves, 4 positions

VQC1000/2000 (Rubber seal only)

- Two 3-port valves built into one body
- The 3-port valves on the A and B sides can operate independently.
- When used as 3-port valves, only half the number of stations is required.
- Can also be used as a 4-position, 5-port type valve.

Exhaust center : **VQC1A01**
: **VQC2A01**
Pressure center : **VQC1B01**
: **VQC2B01**

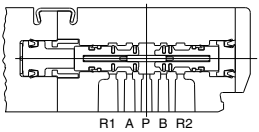







Model	Symbol
VQC1A01 **VQC2A01**	
VQC1B01 **VQC2B01**	
VQC1C01 **VQC2C01**	

VQC Series/Base Mounted: Variations





			Sonic conductance C [dm³/(s·bar)] (CYL → EXH 4/2 → 5/3)		Applicable cylinder bore size	S kit — Serial transmission					
						Gateway-type	Integrated-type (I/O)			Integrated-type (for output)	
			Single/Double	3-position (Closed center)		EX500	EX600	EX245	EX250	EX260	EX126
						Compatible protocol • EtherNet/IP™ • PROFINET	Compatible protocol • DeviceNet® • PROFIBUS DP • CC-Link • EtherNet/IP™ • PROFINET • EtherCAT • CIP Safety	Compatible protocol • PROFINET	Compatible protocol • DeviceNet® • AS-Interface • EtherNet/IP™	Compatible protocol • DeviceNet® • PROFIBUS DP • CC-Link • EtherCAT • PROFINET • EtherNet/IP™ • Ethernet POWERLINK • IO-Link • PROFIsafe • CC-Link IE TSN • Safety over EtherCAT	Compatible protocol • CC-Link
						IP67 compliant	IP67 compliant	IP65 compliant	IP67 compliant	IP67 compliant	IP67 compliant
VQC1000 Series P. 1084	Metal seal	VQC1□00	0.72	0.72	Up to ø50	●	●	—	●	●	●
	Rubber seal	VQC1□01	1.0	0.65							
VQC2000 Series P. 1090	Metal seal	VQC2□00	2.6	2.0	Up to ø80	●	●	●	●	●	●
	Rubber seal	VQC2□01	3.2	2.2							

Manifold Optional Parts P.1134

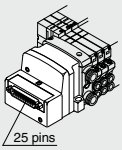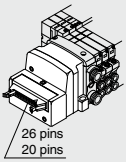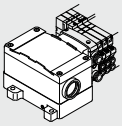		F kit	P kit	T kit	L kit	M kit	Port size	
		D-sub connector	Flat ribbon cable	Terminal block box	Electrical entry	Circular connector		
	Compact wireless remote	D-sub connector	Flat ribbon cable	Terminal block box	Lead wire	Circular connector		
	EXW1 Compatible protocol	Conforming to MIL D-sub connector	Conforming to MIL flat ribbon cable connector	(Terminal block) Terminal block is compactly arranged on one side.	IP67 enclosure with use of multiple wire cable with sheath and waterproof connector	IP67 enclosure with use of waterproof circular connector	SUP EXH port 1, 3 (P, R)	Cylinder port 2, 4 (A, B)
	 IP67 compliant	 25 pins	 26 pins 20 pins	 IP67 compliant	 25-core cable IP67 compliant	 26 pins IP67 compliant		
	●	●	●	●	●	●	C8 (ø8) N9 (ø5/16")	C3 (ø3.2) C4 (ø4) C6 (ø6) M5 (M5 thread) N1 (ø1/8") N3 (ø5/32") N7 (ø1/4")
	●	●	●	●	●	●	C10 (ø10) N11 (ø3/8") In case of branch type C12 (ø12) N13 (ø1/2")	C4 (ø4) C6 (ø6) C8 (ø8) N3 (ø5/32") N7 (ø1/4") N9 (ø5/16")

Cylinder Speed Chart

This chart is provided as guidelines only.
For performance under various conditions, use SMC's Model Selection Program before making a judgment.

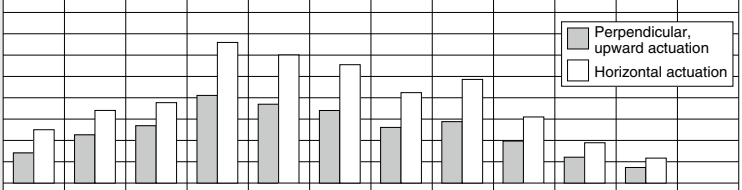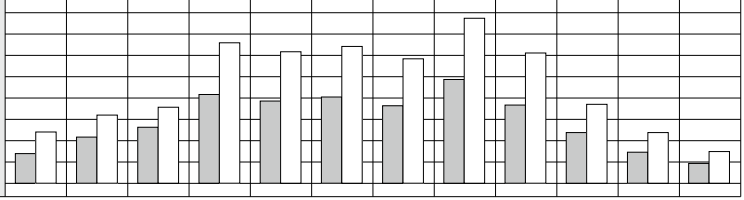Series	Average speed (mm/s)	Bore size											
		CJ2 series Pressure 0.5 MPa Load factor 50% Stroke 60 mm			CM2 series Pressure 0.5 MPa Load factor 50% Stroke 300 mm				MB, CA2 series Pressure 0.5 MPa Load factor 50% Stroke 500 mm				
		ø6	ø10	ø16	ø20	ø25	ø32	ø40	ø40	ø50	ø63	ø80	ø100
VQC1101	800 700 600 500 400 300 200 100 0												
VQC2101	800 700 600 500 400 300 200 100 0												


∗ It is when the cylinder is extending that is meter-out controlled by speed controller which is directly connected with cylinder, and its needle valve with being fully open.
∗ The average velocity of the cylinder is what the stroke is divided by the total stroke time.
∗ Load factor: ((Load mass x 9.8)/Theoretical force) x 100%

Conditions

Series	Conditions	CJ2 series	CM2 series	MB, CA2 series
VQC1101	Tube x Length	T0604 (O.D. ø6/I.D. ø4) x 1 m		
	Speed controller	AS3002F-06		
	Silencer	AN15-C08		
VQC2101	Tube x Length	T0806 (O.D. ø8/I.D. ø6) x 1 m		
	Speed controller	AS3002F-08		
	Silencer	AN20-C10		

INDEX

Features **P.1078**
Variations **P.1080**
Cylinder Speed Chart **P.1082**
VQC1000 How to Order, Manifold Options..... **P.1084**
VQC2000 How to Order, Manifold Options..... **P.1090**
VQC1000/2000 Model, Standard/Manifold Specifications..... **P.1100**

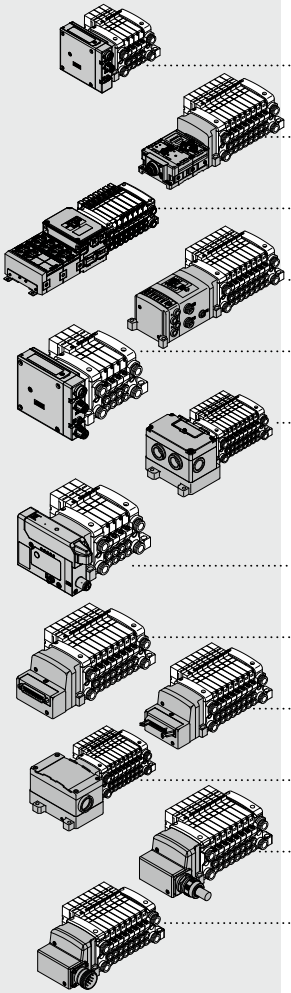

VQC1000/2000
S kit (Serial transmission)
EX500 Gateway Decentralized System 2 (128 points) **P.1102**

VQC1000/2000
S kit (Serial transmission) EX600 ..... **P.1106**

VQC2000
S kit (Serial transmission) EX245 ..... **P.1110**

VQC1000/2000
S kit (Serial transmission) EX250 ..... **P.1111**

VQC1000/2000
S kit (Serial transmission) EX260 ..... **P.1113**

VQC1000/2000
S kit (Serial transmission) EX126 ..... **P.1115**

VQC1000/2000
S kit [Safety communication protocol] EX600 ..... **P.1116-01**

VQC1000/2000
S kit (Compact wireless remote) EXW1 ..... **P.1116-1**

VQC1000/2000
F kit (D-sub connector) **P.1118**

VQC1000/2000
P kit (Flat ribbon cable) **P.1120**

VQC1000/2000
T kit (Terminal block box) **P.1122**

VQC1000/2000
L kit (Lead wire) **P.1124**

VQC1000/2000
M kit (Circular connector) **P.1126**

VQC1000/2000 Construction **P.1128**
VQC1000/2000 Exploded View of Manifold..... **P.1130**
VQC1000/2000 Manifold Optional Parts..... **P.1134**
VQC1000/2000 Specific Product Precautions **P.1141**

Base Mounted
Plug-in Unit
VQC1000 Series

For serial units, refer to the Reduced-wiring Fieldbus System.

RoHS

Refer to pages 1098 (EX260) and 1099-01 (EX600) for details on manifolds that support safety communication.

The EX250/500 series is to be discontinued. When designing new equipment and facilities, consider using another series (EX260/EX600) instead.

How to Order Manifold

VV5QC 1 1 – 08 C6 FD1 ····· F · L · M

VV5QC 1 1 – 08 C6 SDQ ····· S kit

P · T kit

VQC1000 series • • Base mounted plug-in

❶ ❷ ❸ ❿

❹ ❺ ❻ ❼ ❽ ❾ ····· Enter EX250-compliant S kit only.

Enter EX600-compliant S kit only. ····· ❹ ····· ❻

❶ Valve stations

01	1 station
⋮	⋮

The maximum number of stations differs depending on the electrical entry. (Refer to ❸ Kit type/Electrical entry/Cable length.)

Note) In case of compatibility with the S kit/AS-Interface, the maximum number of solenoids is as shown below, so please be careful of the number of stations.
- 8 in/8 out: Maximum 8 solenoids
- 4 in/4 out: Maximum 4 solenoids

❷ Cylinder port size

C3	With ø3.2 One-touch fitting
C4	With ø4 One-touch fitting
C6	With ø6 One-touch fitting
M5	M5 thread
CM	Mixed sizes and with port plug
L3	Top ported elbow with ø3.2 One-touch fitting
L4	Top ported elbow with ø4 One-touch fitting
L6	Top ported elbow with ø6 One-touch fitting
L5	M5 thread
B3	Bottom ported elbow with ø3.2 One-touch fitting
B4	Bottom ported elbow with ø4 One-touch fitting
B6	Bottom ported elbow with ø6 One-touch fitting
B5	M5 thread
LM	Elbow port, mixed sizes (Including upward, downward piping and mixed)
MM Note 2)	Mixed size for different types of piping, option installed

Note 1) Indicate the size by means of the manifold specification sheet in case of "CM", "LM", "NM".

Note 2) When selecting the mixed size for different types of piping or dual flow fitting assembly, enter "MM" and give instructions in the manifold specification sheet.

Note 3) Symbols for inch sizes are as follows:
- N1: ø1/8" • N3: ø5/32"
- N7: ø1/4" • NM: Mixed

The top ported elbow is LN□ and the bottom ported elbow is BN□.

❹ End plate type (Enter EX600-compliant S kit only.)

Nil	Without end plate
2	M12 power supply connector, B-coded
3	7/8 inch power supply connector
4	M12 power supply connector IN/OUT, A-coded, Pin arrangement 1
5	M12 power supply connector IN/OUT, A-coded, Pin arrangement 2

Note) Without SI unit, the symbol is nil.

∗ The pin layout for "4" and "5" pin connector is different.

❻ I/O unit stations (Enter EX600-compliant S kit only.)

Nil	None
1	1 station
⋮	⋮
9	9 stations

Note 1) Without SI unit, the symbol is nil.

Note 2) SI unit is not included in I/O unit stations.

Note 3) When I/O unit is selected, it is shipped separately, and assembled by customer. Refer to the attached operation manual for mounting method.

❼ Number of input blocks (Enter EX250-compliant S kit only.)

Nil	Without SI unit/input block (SD0)
0	Without input block
1	With 1 input block
⋮	⋮
8	With 8 input blocks

Note) For the S kit compatible with AS-Interface, the maximum number of stations is limited. Refer to page 1364 for details.

❽ Input block type (Enter EX250-compliant S kit only.)

Nil	Without input block
1	M12, 2 inputs
2	M12, 4 inputs
3	M8, 4 inputs (3 pins)

❾ Input block specification (Enter EX250-compliant S kit only.)

Nil	PNP sensor input or without input block
N	NPN sensor input

❿ Option

Nil	None
B Note 2)	All stations with back pressure check valve
D	With DIN rail (Rail length: Standard) Note 7)
D□ Note 3)	With DIN rail (Rail length: Special) Note 7)
K Note 4)	Special wiring spec. (Except double wiring)
N Note 10)	With name plate
R Note 5)	External pilot
S Note 6)	Direct EXH outlet with built-in silencer

Note 1) When two or more symbols are specified, indicate them alphabetically. Example: -BRS

Note 2) When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) For special DIN rail length, indicate "D□". (Enter the number of stations inside □.)
Example: -D08
In this case, stations will be mounted on a DIN rail for 8 stations regardless of the actual number of manifold stations.
The specified number of stations must be larger than the number of stations on the manifold. Indicate "-D0" for the option without DIN rail.

Note 4) When single wiring and double wiring are mixed, specify wiring type of each station by means of the manifold specification sheet.

Note 5) For external pilot option, "-R", indicate the external pilot specification "R" for the applicable valves as well.


Note 6) Built-in silencer type does not satisfy IP67.

Note 7) When "Without SI unit (SD0, SD60)" is specified, "With DIN rail (D)" cannot be selected.

Note 8) When changing the specifications of the EX600 from no DIN rail to DIN rail mounting, please consult SMC.

Note 9) DIN rail is not attached (but shipped together) on the manifold in case of the EX600 with DIN rail. Refer to back page 1143 for mounting method.

Note 10) When mounting the blanking plate with connector and the slide locking manual type valve by ordering only the manifold, order the name plate separately. For details, refer to page 1135.

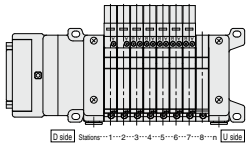

∗ Stations are counted from station 1 on the D-side.

❺ SI unit output polarity

SI unit output polarity		EX250 integrated-type (I/O) serial transmission system		
		DeviceNet®	AS-Interface	EtherNet/IP™
Nil	Positive common	—	—	—
N	Negative common	○	○	○

SI unit output polarity		EX500 Gateway Decentralized System 2 (128 points)	EX260 integrated-type (for output) serial transmission system									EX126 integrated-type (for output) serial transmission system
			DeviceNet®	PROFIBUS DP	CC-Link	EtherCAT	PROFINET	EtherNet/IP™	Ethernet POWERLINK	IO-Link	CC-Link IE TSN	CC-Link
Nil	Positive common	—	○	○	○	○	○	○	—	—	—	○
N	Negative common	○	○	○	○	○	○	○	○	○	○	—

SI unit output polarity		EX600 integrated-type (I/O) serial transmission system (Fieldbus system)						
		DeviceNet®	PROFIBUS DP	CC-Link	EtherNet/IP™	EtherCAT	PROFINET	Wireless remote
Nil	Positive common	○	○	○	○	○	○∗2	○
N	Negative common	○	○	○	○	○	○	○

∗1 Select "Nil" for without SI unit (SD0□).

∗2 Only negative common is available for PROFINET (OPC UA).


Refer to the **Web Catalog** and the Operation Manual for the details of EX600 Integrated-type (For I/O) Serial Transmission System. Please download the Operation Manual via our website, https://www.smcworld.com

SMC

❸ Kit type/Electrical entry/Cable length

∗ Numbers in parentheses represent the maximum number of solenoids in case of mixed single and double wiring. The maximum number of stations is determined by the total number of solenoids. When ordering mixed wiring, please add the option symbol "-K".

S kit (Serial transmission: EX500 gateway-type)

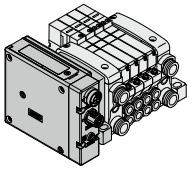


Note) A separate gateway unit and communication cable are required.

IP67 compliant

SI unit: **EX500**

SD0	Without SI unit	—	—
SDA3	EX500 Gateway Decentralized System 2 (128 points)	32 outputs Note 1)	1 to 12 stations (24)

S kit (Serial transmission (Fieldbus system): EX600 integrated-type (I/O))

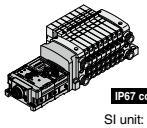


IP67 compliant

SI unit: **EX600**

SD60	Without SI unit	1 to 12 stations (24)
SD6Q	DeviceNet®	
SD6N	PROFIBUS DP	
SD6V	CC-Link	
SD6FA	PROFINET (IO-Link unit)	
SD6FB	PROFINET (OPC UA, IO-Link unit) Note 6)	
SD6EB	EtherNet/IP™ (IO-Link unit)	
SD6DA	EtherCAT (IO-Link unit)	
SD6WS	Wireless remote Note 5)	

S kit (Serial transmission: EX250 integrated-type (I/O))

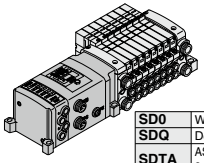


IP67 compliant

SI unit: **EX250**

SD0	Without SI unit	1 to 12 stations (24)
SDQ	DeviceNet®	
SDTA	AS-Interface, 8 in/8 out, 2 power supply systems	1 to 4 stations (8)
SDTB	AS-Interface, 4 in/4 out, 2 power supply systems	1 to 2 stations (4)
SDTC Note 2)	AS-Interface, 8 in/8 out, 1 power supply systems	1 to 4 stations (8)
SDTD Note 2)	AS-Interface, 4 in/4 out, 1 power supply systems	1 to 2 stations (4)
SDZEN	EtherNet/IP™	1 to 12 stations (24)

S kit (Serial transmission: EX260 integrated-type (for output))

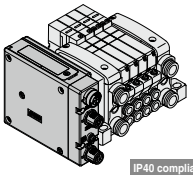


IP40 compliant

SI unit: **EX260** IP67 compliant

Symbol	Protocol	Number of outputs	Communication connector	Stations
SD0		Without SI unit		1 to 12 stations (24)
SQA	DeviceNet®	32	M12	
SQB		16		1 to 8 stations (16)
SNA	PROFIBUS DP	32	M12	1 to 12 stations (24)
SNB		16		1 to 8 stations (16)
SNC		32	D-sub Note 3)	1 to 12 stations (24)
SND		16		1 to 8 stations (16)
SVA	CC-Link	32	M12	1 to 12 stations (24)
SVB		16		1 to 8 stations (16)
SDA	EtherCAT	32	M12	1 to 12 stations (24)
SDB		16		1 to 8 stations (16)
SFA	PROFINET	32	M12	1 to 12 stations (24)
SFB		16		1 to 8 stations (16)
SEA	EtherNet/IP™	32	M12	1 to 12 stations (24)
SEB		16		1 to 8 stations (16)
SGA	Ethernet POWERLINK	32	M12	1 to 12 stations (24)
SGB		16		1 to 8 stations (16)
SKA	IO-Link	32	M12	1 to 12 stations (24)
SCA	CC-Link IE TSN	32	RJ45 Note 3)	1 to 12 stations (24)

S kit (Serial transmission: EX126 integrated-type (for output))

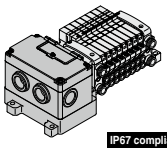


IP67 compliant

SI unit: **EX126**

SDVB	CC-Link	1 to 8 stations (16)

F kit (D-sub connector)

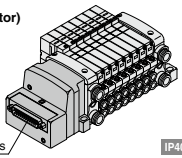


25 pins

IP40 compliant

FD0	D-sub connector (25P) without cable	1 to 12 stations (24)
FD1	D-sub connector (25P) with 1.5 m cable	
FD2	D-sub connector (25P) with 3.0 m cable	
FD3	D-sub connector (25P) with 5.0 m cable	

P kit (Flat ribbon cable)

Note) For a 20P flat ribbon cable, the cable assembly must be ordered separately.

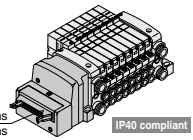


26 pins
20 pins

IP40 compliant

PD0	Flat ribbon cable (26P) without cable	1 to 12 stations (24)
PD1	Flat ribbon cable (26P) with 1.5 m cable	
PD2	Flat ribbon cable (26P) with 3.0 m cable	
PD3	Flat ribbon cable (26P) with 5.0 m cable	
PDC	Flat ribbon cable (20P) without cable	1 to 9 stations (18)


T kit (Terminal block box)

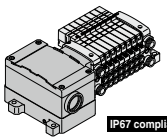

IP67 compliant

TD0	Terminal block box	1 to 10 stations (20)

L kit (Lead wire)

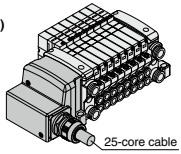


25-core cable

IP67 compliant

LD0	Lead wire (25 cores) 0.6 m lead wire	1 to 12 stations (24)
LD1	Lead wire (25 cores) 1.5 m lead wire	
LD2	Lead wire (25 cores) 3.0 m lead wire	

M kit (Circular connector)

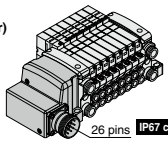

26 pins

IP67 compliant

MD0	Circular connector (26P) without cable	1 to 12 stations (24)
MD1	Circular connector (26P) with 1.5 m cable	
MD2	Circular connector (26P) with 3.0 m cable	
MD3	Circular connector (26P) with 5.0 m cable	

∗ The maximum number of stations displayed in parentheses is applied to the special wiring specifications. (Option "-K")

Note 1) When using the SI unit with 32 outputs, use the GW unit compatible with the EX500 Gateway Decentralized System 2 (128 points).

Note 2) When selecting SI units with SDTC or SDTD specifications, there are limits to the supply current from the SI unit to the input block or valve. Refer to page 1364 for details.

Note 3) IP40 only when selecting a D-sub or RJ45 S kit (All other SI units are IP67 compliant.)

Note 4) For the SI unit part no., refer to page 1086.

Note 5) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

Note 6) Only negative common (PNP) is available.

SI Unit Part No.

EX500 Gateway Decentralized System 2 (128 points)

Symbol	SI unit part no.	Page
	Negative common (PNP)	
SDA3	EX500-S103	P.1131

EX600

Symbol	Compatible protocol	SI unit part no.		Page
		Positive common (NPN)	Negative common (PNP)	
SD6Q	DeviceNet®	EX600-SDN2A	EX600-SDN1A	P.1131
SD6N	PROFIBUS DP	EX600-SPR2A	EX600-SPR1A	
SD6V	CC-Link	EX600-SMJ2	EX600-SMJ1	
SD6FA	PROFINET (IO-Link unit)	EX600-SPN4	EX600-SPN3	
SD6FB	PROFINET (OPC UA, IO-Link unit)	—	EX600-SPN31	
SD6EB	EtherNet/IP™ (IO-Link unit)	EX600-SEN8	EX600-SEN7	
SD6DA	EtherCAT (IO-Link unit)	EX600-SEC4	EX600-SEC3	
SD6WS	Wireless remote Note)	EX600-WSV2	EX600-WSV1	

Note) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

EX260

Symbol	Compatible protocol	Number of outputs	SI unit part no.		Communication connector	Page
			Positive common (NPN)	Negative common (PNP)		
SQA	DeviceNet®	32	EX260-SDN2	EX260-SDN1	M12	P.1132
SQB		16	EX260-SDN4	EX260-SDN3		
SNA	PROFIBUS DP	32	EX260-SPR2	EX260-SPR1		
SNB		16	EX260-SPR4	EX260-SPR3		
SNC		32	EX260-SPR6	EX260-SPR5	D-sub Note)	
SND		16	EX260-SPR8	EX260-SPR7		
SVA	CC-Link	32	EX260-SMJ2	EX260-SMJ1	M12	
SVB		16	EX260-SMJ4	EX260-SMJ3		
SDA	EtherCAT	32	EX260-SEC2	EX260-SEC1	M12	
SDB		16	EX260-SEC4	EX260-SEC3		
SFA	PROFINET	32	EX260-SPN2	EX260-SPN1	M12	
SFB		16	EX260-SPN4	EX260-SPN3		
SEA	EtherNet/IP™	32	EX260-SEN2	EX260-SEN1	M12	
SEB		16	EX260-SEN4	EX260-SEN3		
SGA	Ethernet POWERLINK	32	—	EX260-SPL1	M12	
SGB		16	—	EX260-SPL3		
SKA	IO-Link	32	—	EX260-SIL1	M12	
SCA	CC-Link IE TSN	32	—	EX260-SCT1	RJ45 Note)	

Note) The enclosure is IP40 when the communication connector is a D-sub connector or an RJ45 connector. (IP67 for other specifications)

EX250

Symbol	Compatible protocol	SI unit part no.	Page
SDQ	DeviceNet®	EX250-SDN1	P.1132
SDTA	AS-Interface, 8 in/8 out, 2 power supply systems	EX250-SAS3	
SDTB	AS-Interface, 4 in/4 out, 2 power supply systems	EX250-SAS5	
SDTC	AS-Interface, 8 in/8 out, 1 power supply systems	EX250-SAS7	
SDTD	AS-Interface, 4 in/4 out, 1 power supply systems	EX250-SAS9	
SDZEN	EtherNet/IP™	EX250-SEN1	

EX126

Symbol	Compatible protocol	SI unit part no.	Page
SDVB	CC-Link	EX126D-SMJ1	P.1132

For details about the EX series (Serial transmission system), refer to the **Web Catalog** and the Operation Manual. Please download the Operation Manual via SMC website, https://www.smcworld.com

How to Order Valves

VQC 1 1 0 0 [ ] – 5 [ ] [ ] 1

VQC1000 series

Ⓐ Ⓑ Ⓒ Ⓓ Ⓔ Ⓕ

Ⓐ Type of actuation

1	2-position single (A)4 2(B) (R1)5 1 3(R2) (P)	Note) A	4-position dual 3-port valve (A) 4(A) 2(B) 5(R1) 1(P) 3(R2) N.C. N.C.
2	2-position double (Metal) (A)4 2(B) (R1)5 1 3(R2) (P)	Note) B	4-position dual 3-port valve (B) 4(A) 2(B) 5(R1) 1(P) 3(R2) N.O. N.O.
	2-position double (Rubber) (A)4 2(B) (R1)5 1 3(R2) (P)	Note) C	4-position dual 3-port valve (C) 4(A) 2(B) 5(R1) 1(P) 3(R2) N.C. N.O.
3	3-position closed center (A)4 2(B) (R1)5 1 3(R2) (P)	Note) Rubber seal only	
4	3-position exhaust center (A)4 2(B) (R1)5 1 3(R2) (P)		
5	3-position pressure center (A)4 2(B) (R1)5 1 3(R2) (P)		

Ⓑ Seal

0	Metal seal
1	Rubber seal

Ⓒ Function

Nil	Standard (0.4 W)
B	High-speed response type (0.95 W)
K Note 1)	High-pressure type (1.0 MPa, 0.95 W)
N Note 2)	Negative common
R Note 3)	External pilot

∗ When two or more symbols are specified, indicate them alphabetically. However, combination of "B" and "K" is not possible.
Note 1) Metal seal only
Note 2) When "-COM." is specified for the SI unit, select and mount the valve of negative common.
Note 3) Dual 3-port is not applicable.

Ⓓ Coil voltage

5 Note)	24 VDC
6	12 VDC

Note) Only 24 VDC is available with the S kit.


Ⓔ Light/surge voltage suppressor

Nil	Yes
E Note1, 2)	None (Non-polar)

Note 1) Not applicable to the S kit.
Note 2) A combination of "Function N (Negative common)" and "E" is unavailable.
Since "E" has no polarity, it can also be used as a negative common. Selection of "Function N" is not required.

Ⓕ Manual override


Nil	Non-locking push type (Tool required)
B	Push-turn locking type (Tool required)
C	Turn locking type (Manual)
D	Slide locking type (Manual)

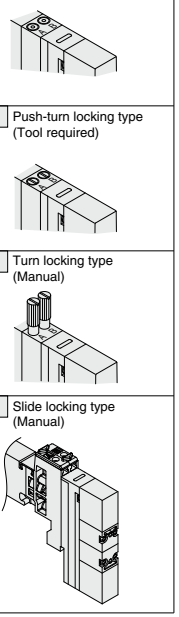

How to Order Manifold Assembly

Example

Manifold
Power supply with
M12 connector

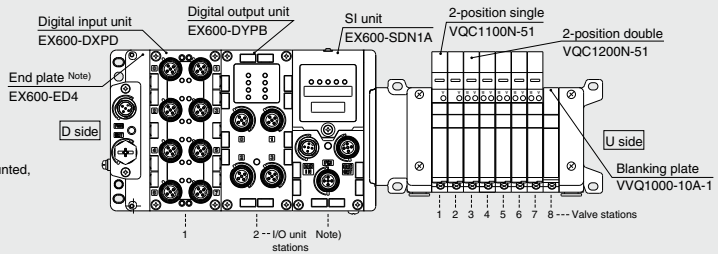

For the I/O unit part number mounted, click here for details.
• Digital unit
• Analog unit

Serial transmission kit

VV5QC11-08C6SD6Q4N2 ···· 1 set Manifold base part number
∗ **VQC1100N-51 ····· 2 sets Valve part number (Stations 1 to 2)**
∗ **VQC1200N-51 ····· 5 sets Valve part number (Stations 3 to 7)**
∗ **VVQ1000-10A-1 ····· 1 set Blanking plate number (Station 8)**

Enter in order starting from the first station on the D-side. When entry of part numbers becomes complicated, indicate with the manifold specification sheet.

∗ **EX600-DXPD ····· 1 set I/O unit part number (Station 1)**
∗ **EX600-DYPB ····· 1 set I/O unit part number (Station 2)**

Enter in order starting from the first station on the D-side. When entry of part numbers becomes complicated, indicate with the manifold specification sheet.


The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Note) Do not enter the SI unit part number and the end plate part number together.


Manifold Options

Refer to pages 1134 through to 1137 for details.


Blanking plate assembly
VVQ1000-10A-1

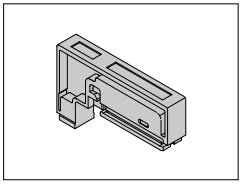


Individual SUP spacer
VVQ1000-P-1-C6 N7

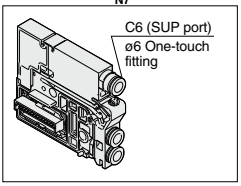


Individual EXH spacer
VVQ1000-R-1-C6 N7

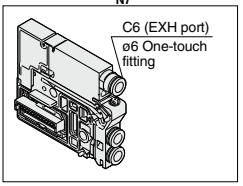


SUP block plate
VVQ1000-16A

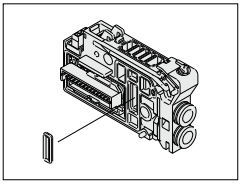


Blanking plate with connector
VVQ1000-1C□-□

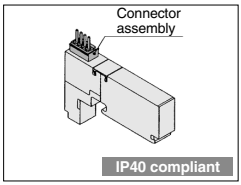


EXH block plate assembly
VVQC1000-19A-S-D C3, C4 C6, M5 N1, N3 N7

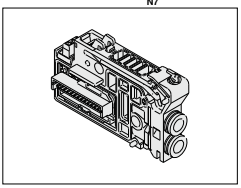


Back pressure check valve assembly [-B]
VVQ1000-18A

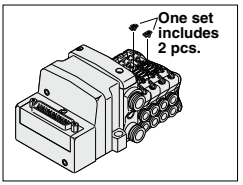


Name plate [-N]
VVQ1000-N NC-(1 to Max. stations) (-X4)

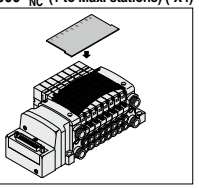


Blanking plug
KQ2P-□

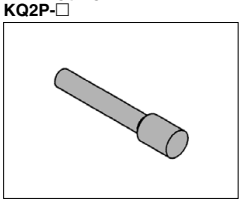


Port plug
VVQ0000-58A

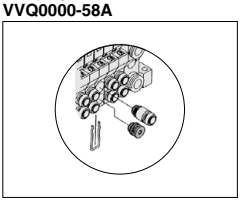


Elbow fitting assembly
VVQ1000-F-L□

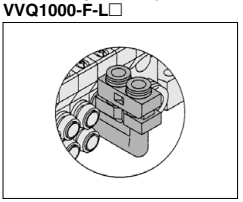


DIN rail mounting bracket [-D]
VVQ1000-57A
{For F/L/M/P/S (EX500) kit}
VVQC1000-57A-S
{For S (EX250) kit}
VVQC1000-57A-T (For T kit)

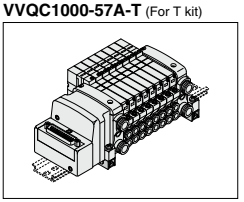


Direct EXH outlet with built-in silencer [-S]

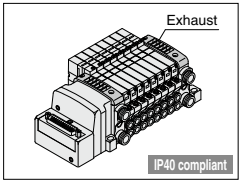


Dual flow fitting assembly
VVQ1000-52A-C8 N9

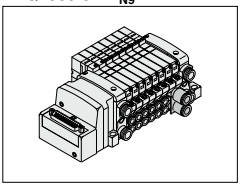


Special electrical wiring specifications [-K]

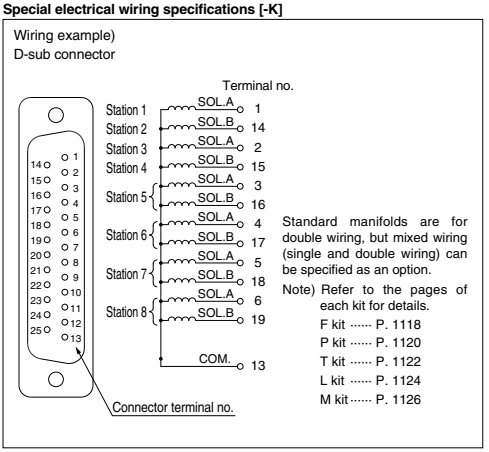

Silencer (For EXH port)
AN15-C08

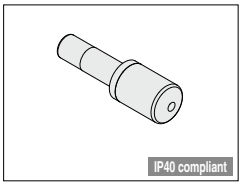

Double check block
VVQ1000-FPG-□□-□

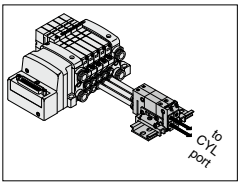

Base Mounted


Plug-in Unit
VQC2000 Series

For serial units, refer to the Reduced-wiring Fieldbus System.

The EX250/500 series is to be discontinued. When designing new equipment and facilities, consider using another series (EX260/EX600) instead.

Refer to pages 1098 (EX260) and 1099-01 (EX600) for details on manifolds that support safety communication.

How to Order Manifold

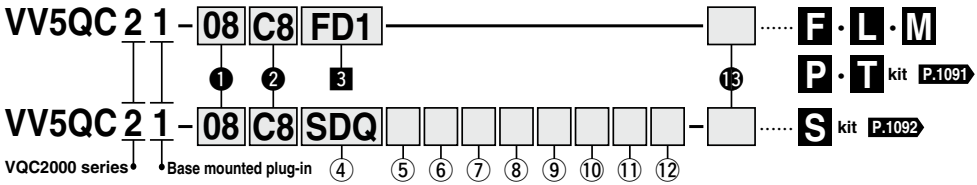

S kit

The selectable items vary for each series. Select from the applicable item numbers in the table below.

Series	Item number (Refer to pages 1090, 1091 and 1092)
EX600	❶, ❷, ④, ⑦, ⑧, ⑨, ⓭
EX245	❶, ❷, ④, ⑤, ⑥, ⓭
EX250	❶, ❷, ④, ⑧, ⑩, ⑪, ⑫, ⓭
EX500,260,126	❶, ❷, ④, ⑧, ⓭

❶ Valve stations

01	1 station
⋮	⋮

The maximum number of stations differs depending on the electrical entry. (Refer to 3 ④ Kit type/Electrical entry/Cable length.)

Note) In case of compatibility with the S kit/AS-Interface, the maximum number of solenoids is as shown below, so please be careful of the number of stations.
- 8 in/8 out: Maximum 8 solenoids
- 4 in/4 out: Maximum 4 solenoids

❷ Cylinder port size

C4	With ø4 One-touch fitting
C6	With ø6 One-touch fitting
C8	With ø8 One-touch fitting
CM	Mixed sizes and with port plug
L4	Top ported elbow with ø4 One-touch fitting
L6	Top ported elbow with ø6 One-touch fitting
L8	Top ported elbow with ø8 One-touch fitting
B4	Bottom ported elbow with ø4 One-touch fitting
B6	Bottom ported elbow with ø6 One-touch fitting
B8	Bottom ported elbow with ø8 One-touch fitting
LM	Elbow port, mixed sizes (Including upward, downward piping and mixed)
MM Note 2)	Mixed size for different types of piping, option installed

Note 1) Indicate the size by means of the manifold specification sheet in case of "CM", "LM", "NM".

Note 2) When selecting the mixed size for different types of piping or dual flow fitting assembly, enter "MM" and give instructions in the manifold specification sheet.

Note 3) Symbols for inch sizes are as follows:
- N3: ø5/32" • N7: ø1/4"
- N9: ø5/16" • NM: Mixed

The top ported elbow is LN□ and the bottom ported elbow is BN□.

⑤ With or without I/O modules (Enter EX245-compliant S kit only.)

Nil	Without I/O module
Y	With I/O module

⑥ Number of I/O modules (Enter EX245-compliant S kit only.)

Nil	Without I/O module (Without SI Unit)
1	1 station
⋮	⋮
8	8 stations

⑦ End plate type (Enter EX600-compliant S kit only.)

Nil	Without end plate
2	M12 power supply connector, B-coded
3	7/8 inch power supply connector
4	M12 power supply connector IN/OUT, A-coded, Pin arrangement 1
5	M12 power supply connector IN/OUT, A-coded, Pin arrangement 2

Note) Without SI unit, the symbol is nil.
∗ The pin layout for "4" and "5" pin connector is different.

⑨ I/O unit sations (Enter EX600-compliant S kit only.)

Nil	None
1	1 station
⋮	⋮
9	9 stations

Note 1) Without SI unit, the symbol is nil.
Note 2) SI unit is not included in I/O unit stations.
Note 3) When I/O unit is selected, it is shipped separately, and assembled by customer. Refer to the attached operation manual for mounting method.

⑩ Number of input blocks (Enter EX250-compliant S kit only.)

Nil	Without SI unit/input block (SD0)
0	Without input block
1	With 1 input block
⋮	⋮
8	With 8 input blocks

Note) For the S kit compatible with AS-Interface, the maximum number of stations is limited. Refer to page 1364 for details.

⑪ Input block type (Enter EX250-compliant S kit only.)

Nil	Without input block
1	M12, 2 inputs
2	M12, 4 inputs
3	M8, 4 inputs (3 pins)

⑫ Input block specification (Enter EX250-compliant S kit only.)

Nil	PNP sensor input or without input block
N	NPN sensor input

⓭ Option

Nil	None
B Note 2)	All stations with back pressure check valve
D	With DIN rail (Rail length: Standard) Note 9)
D□ Note 4)	With DIN rail (Rail length: Special) Note 9)
K Note 5)	Special wiring spec. (Except double wiring)
N Note 12)	With name plate
R Note 6)	External pilot
S Note 7)	Direct EXH outlet with built-in silencer
T Note 8)	Branched P and R ports on U-side

Note 1) When two or more symbols are specified, indicate them alphabetically. Example: -BRS

Note 2) When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) When DIN rail mounting (with DIN rail) is selected with a power supply 7/8 inch connector for end plate of the VQC2000 series, and I/O unit station number is 9, and max. valve station number is 23. DIN rail mount cannot be specified for 24 stations. (Refer to the DIN rail full length on page 1109.)

Note 4) For special DIN rail length, indicate "D□". (Enter the number of stations inside □.) Example: -D08
In this case, stations will be mounted on a DIN rail for 8 stations regardless of the actual number of manifold stations.
The specified number of stations must be larg-er than the number of stations on the manifold. Indicate "-D0" for the option without DIN rail.

Note 5) When single wiring and double wiring are mixed, specify wiring type of each station by means of the manifold specification sheet.

Note 6) For external pilot option, "-R", indicate the external pilot specification "R" for the applicable valves as well.

Note 7) Built-in silencer type does not satisfy IP67.

Note 8) SUP and EXH ports on the U-side (on cylinder port side and coil side is branched.) Port is equipped with One-touch fitting for ø12.

Note 9) When "Without SI unit (SD0, SD60)" and EX245 series are specified, "With DIN rail (D)" cannot be selected.

Note 10) When changing the specifications of the EX600 from no DIN rail to DIN rail mounting, please consult SMC.


Note 11) DIN rail is not attached (but shipped together) on the manifold in case of the EX600 with DIN rail. Refer to page 1143 for mounting method.

Note 12) When mounting the slide locking manual type valve by ordering only the manifold, order the name plate separately. For details, refer to page 1139.

3 Kit type/Electrical entry/Cable length

* Numbers in parentheses represent the maximum number of solenoids in case of mixed single and double wiring. The maximum number of stations is determined by the total number of solenoids. When ordering mixed wiring, please add the option symbol "-K".

F kit (D-sub connector)

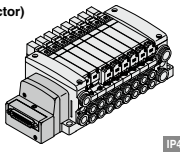


IP40 compliant

FD0	D-sub connector (25P) without cable	1 to 12 stations (24)
FD1	D-sub connector (25P) with 1.5 m cable	
FD2	D-sub connector (25P) with 3.0 m cable	
FD3	D-sub connector (25P) with 5.0 m cable	

P kit (Flat ribbon cable)


Note) For a 20P flat ribbon cable, the cable assembly must be ordered separately.

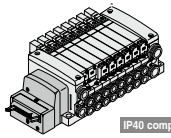

IP40 compliant

PD0	Flat ribbon cable (26P) without cable	1 to 12 stations (24)
PD1	Flat ribbon cable (26P) with 1.5 m cable	
PD2	Flat ribbon cable (26P) with 3.0 m cable	
PD3	Flat ribbon cable (26P) with 5.0 m cable	
PDC	Flat ribbon cable (20P) without cable	1 to 9 stations (18)


T kit (Terminal block box)

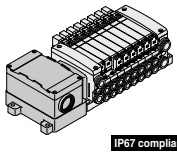

IP67 compliant

TD0	Terminal block box	1 to 10 stations (20)


L kit (Lead wire)

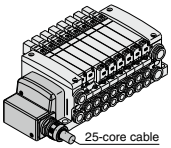

IP67 compliant


LD0	Lead wire (25 cores) 0.6 m lead wire	1 to 12 stations (24)
LD1	Lead wire (25 cores) 1.5 m lead wire	
LD2	Lead wire (25 cores) 3.0 m lead wire	

M kit (Circular connector)

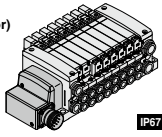

IP67 compliant

MD0	Circular connector (26P) without cable	1 to 12 stations (24)
MD1	Circular connector (26P) with 1.5 m cable	
MD2	Circular connector (26P) with 3.0 m cable	
MD3	Circular connector (26P) with 5.0 m cable	

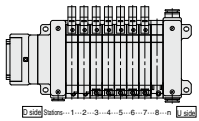


* Stations are counted from station 1 on the D-side.

④ Kit type

∗ **Numbers in parentheses represent the maximum number of solenoids in case of mixed single and double wiring. The maximum number of stations is determined by the total number of solenoids. When ordering mixed wiring, please add the option symbol "-K".**

S kit (Serial transmission: EX500 gateway-type)

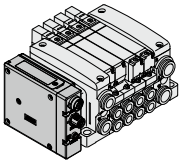


IP67 compliant

SI unit: **EX500**

Note) A separate gateway unit and communication cable are required.

SD0	Without SI unit	—	—
SDA3	EX500 Gateway Decentralized System 2 (128 points)	32 outputs Note 1)	1 to 12 stations (24)

S kit (Serial transmission: EX600 integrated-type (I/O))

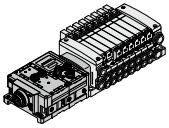


IP67 compliant

SI unit: **EX600**

SD60	Without SI unit	1 to 12 stations (24)
SD6Q	DeviceNet®	
SD6N	PROFIBUS DP	
SD6V	CC-Link	
SD6FA	PROFINET (IO-Link unit)	
SD6FB	PROFINET (OPC UA, IO-Link unit) Note 6)	
SD6EB	EtherNet/IP™ (IO-Link unit)	
SD6DA	EtherCAT (IO-Link unit)	
SD6WS	Wireless remote Note 5)	

S kit (Serial transmission: EX245 integrated-type (I/O))

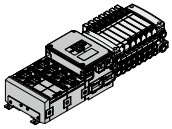


IP65 compliant

SI unit: **EX245**

Symbol	Protocol	Communication connector	Power supply connector	Stations
SD0	Without SI unit			1 to 12 stations (24)
SDAAN	PROFINET	Push/Pull (SCRJ): 2 pcs.	Push/Pull (24 V): 2 pcs.	
SDABN		Push/Pull (RJ45): 2 pcs.	Push/Pull (24 V): 2 pcs.	
SDACN		M12: 2 pcs.	7/8 inch: 2 pcs.	

S kit (Serial transmission: EX250 integrated-type (I/O))

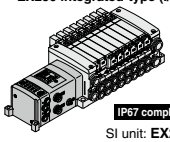


IP67 compliant

SI unit: **EX250**

SD0	Without SI unit	1 to 12 stations (24)
SDQ	DeviceNet®	
SDTA	AS-Interface, 8 in/8 out, 2 power supply systems	1 to 4 stations (8)
SDTB	AS-Interface, 4 in/4 out, 2 power supply systems	1 to 2 stations (4)
SDTC Note 2)	AS-Interface, 8 in/8 out, 1 power supply systems	1 to 4 stations (8)
SDTD Note 2)	AS-Interface, 4 in/4 out, 1 power supply systems	1 to 2 stations (4)
SDZEN	EtherNet/IP™	1 to 12 stations (24)

S kit (Serial transmission: EX260 integrated-type (for output))

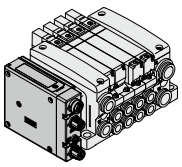


IP40 compliant

SI unit: **EX260** **IP67 compliant**

Symbol	Protocol	Number of outputs	Communication connector	Stations
SD0	Without SI unit			1 to 12 stations (24)
SQA	DeviceNet®	32	M12	
SQB		16		1 to 8 stations (16)
SNA	PROFIBUS DP	32	M12	1 to 12 stations (24)
SNB		16		1 to 8 stations (16)
SNC		32	D-sub Note 3)	1 to 12 stations (24)
SND		16		1 to 8 stations (16)
SVA	CC-Link	32	M12	1 to 12 stations (24)
SVB		16		1 to 8 stations (16)
SDA	EtherCAT	32	M12	1 to 12 stations (24)
SDB		16		1 to 8 stations (16)
SFA	PROFINET	32	M12	1 to 12 stations (24)
SFB		16		1 to 8 stations (16)
SEA	EtherNet/IP™	32	M12	1 to 12 stations (24)
SEB		16		1 to 8 stations (16)
SGA	Ethernet POWERLINK	32	M12	1 to 12 stations (24)
SGB		16		1 to 8 stations (16)
SKA	IO-Link	32	M12	1 to 12 stations (24)
SCA	CC-Link IE TSN	32	RJ45 Note 3)	1 to 12 stations (24)

S kit (Serial transmission: EX126 integrated-type (for output))

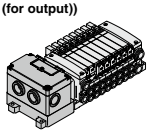

IP67 compliant

SI unit: **EX126**

SDVB	CC-Link	1 to 8 stations (16)

· The maximum number of stations displayed in parentheses is applied to the special wiring specifications. (Option "-K")

Note 1) When using the SI unit with 32 outputs, use the GW unit compatible with the EX500 Gateway Decentralized System 2 (128 points).


Note 2) When selecting SI units with SDTC or SDTD specifications, there are limits to the supply current from the SI unit to the input block or valve. Refer to page 1364 for details.

Note 3) IP40 only when selecting a D-sub or RJ45 S kit

Note 4) For the SI unit part no., refer to page 1093.

Note 5) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

Note 6) Only negative common (PNP) is available.

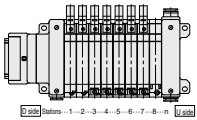

∗ Stations are counted from station 1 on the D-side.

⑧ SI unit output polarity

SI unit output polarity		EX250 integrated-type (I/O) serial transmission system		
		DeviceNet®	AS-Interface	EtherNet/IP™
Nil	Positive common	—	—	—
N	Negative common	○	○	○

SI unit output polarity		EX245 integrated-type (I/O) serial transmission system	EX500 Gateway Decentralized System 2 (128 points)	EX260 integrated-type (for output) serial transmission system									EX126 integrated-type (for output) serial transmission system
		PROFINET		DeviceNet®	PROFIBUS DP	CC-Link	EtherCAT	PROFINET	EtherNet/IP™	Ethernet POWERLINK	IO-Link	CC-Link IE TSN	CC-Link
Nil	Positive common	—	—	○	○	○	○	○	○	—	—	—	○
N	Negative common	○	○	○	○	○	○	○	○	○	○	○	—

SI unit output polarity		EX600 integrated-type (I/O) serial transmission system						
		DeviceNet®	PROFIBUS DP	CC-Link	EtherNet/IP™	EtherCAT	PROFINET	Wireless remote
Nil	Positive common	○	○	○	○	○	○	○
N	Negative common	○	○	○	○	○	○	○

∗ Select "Nil" for without SI unit (SD0□).

Refer to the **Web Catalog** and the Operation Manual for the details of EX600 Integrated-type (For I/O) Serial Transmission System. Please download the Operation Manual via our website, https://www.smcworld.com

SI Unit Part No.

EX500 Gateway Decentralized System 2 (128 points)

Symbol	SI unit part no.	Page
	Negative common (PNP)	
SDA3	EX500-S103	P.1131

EX600

Symbol	Compatible protocol	SI unit part no.		Page
		Positive common (NPN)	Negative common (PNP)	
SD6Q	DeviceNet®	EX600-SDN2A	EX600-SDN1A	P.1131
SD6N	PROFIBUS DP	EX600-SPR2A	EX600-SPR1A	
SD6V	CC-Link	EX600-SMJ2	EX600-SMJ1	
SD6FA	PROFINET (IO-Link unit)	EX600-SPN4	EX600-SPN3	
SD6FB	PROFINET (OPC UA, IO-Link unit)	—	EX600-SPN31	
SD6EB	EtherNet/IP™ (IO-Link unit)	EX600-SEN8	EX600-SEN7	
SD6DA	EtherCAT (IO-Link unit)	EX600-SEC4	EX600-SEC3	
SD6WS	Wireless remote Note)	EX600-WSV2	EX600-WSV1	

Note) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

EX245

Symbol	Compatible protocol	SI unit part no.	Page
SDAAN	PROFINET	EX245-SPN1A	P.1132
SDABN		EX245-SPN2A	
SDACN		EX245-SPN3A	

EX260

Symbol	Compatible protocol	Number of outputs	SI unit part no.		Communication connector	Page
			Positive common (NPN)	Negative common (PNP)		
SQA	DeviceNet®	32	EX260-SDN2	EX260-SDN1	M12	P.1132
SQB		16	EX260-SDN4	EX260-SDN3		
SNA	PROFIBUS DP	32	EX260-SPR2	EX260-SPR1		
SNB		16	EX260-SPR4	EX260-SPR3		
SNC		32	EX260-SPR6	EX260-SPR5	D-sub Note)	
SND		16	EX260-SPR8	EX260-SPR7		
SVA	CC-Link	32	EX260-SMJ2	EX260-SMJ1	M12	
SVB		16	EX260-SMJ4	EX260-SMJ3		
SDA	EtherCAT	32	EX260-SEC2	EX260-SEC1	M12	
SDB		16	EX260-SEC4	EX260-SEC3		
SFA	PROFINET	32	EX260-SPN2	EX260-SPN1	M12	
SFB		16	EX260-SPN4	EX260-SPN3		
SEA	EtherNet/IP™	32	EX260-SEN2	EX260-SEN1	M12	
SEB		16	EX260-SEN4	EX260-SEN3		
SGA	Ethernet POWERLINK	32	—	EX260-SPL1	M12	
SGB		16	—	EX260-SPL3		
SKA	IO-Link	32	—	EX260-SIL1	M12	
SCA	CC-Link IE TSN	32	—	EX260-SCT1	RJ45 Note)	

Note) The enclosure is IP40 when the communication connector is a D-sub connector or an RJ45 connector. (IP67 for other specifications)

EX250

Symbol	Compatible protocol	SI unit part no.	Page
SDQ	DeviceNet®	EX250-SDN1	P.1132
SDTA	AS-Interface, 8 in/8 out, 2 power supply systems	EX250-SAS3	
SDTB	AS-Interface, 4 in/4 out, 2 power supply systems	EX250-SAS5	
SDTC	AS-Interface, 8 in/8 out, 1 power supply systems	EX250-SAS7	
SDTD	AS-Interface, 4 in/4 out, 1 power supply systems	EX250-SAS9	
SDZEN	EtherNet/IP™	EX250-SEN1	

EX126

Symbol	Compatible protocol	SI unit part no.	Page
SDVB	CC-Link	EX126D-SMJ1	P.1132










For details about the EX series (Serial transmission system), refer to the **Web Catalog** and the Operation Manual. Please download the Operation Manual via SMC website, https://www.smcworld.com

How to Order Valves

VQC 2 1 0 0 □ – 5 □ □ 1

VQC2000 series • (A) (B) (C) (D) (E) (F)

(A) Type of actuation

1	2-position single 	Note) A	4-position dual 3-port valve 
2	2-position double (Metal) 	Note) B	4-position dual 3-port valve 
	2-position double (Rubber) 	Note) C	4-position dual 3-port valve 
3	3-position closed center 	Note) Rubber seal only	
4	3-position exhaust center 		
5	3-position pressure center 		

(B) Seal

0	Metal seal
1	Rubber seal

(C) Function

Nil	Standard (0.4 W)
B	High-speed response type (0.95 W)
K Note 1)	High-pressure type (1.0 MPa, 0.95 W)
N Note 2)	Negative common
R Note 3)	External pilot

∗ When two or more symbols are specified, indicate them alphabetically. However, combination of "B" and "K" is not possible.
Note 1) Metal seal only
Note 2) When "-COM." is specified for the SI unit, select and mount the valve of negative common.
Note 3) Dual 3-port type is not applicable.

(D) Coil voltage

5 Note)	24 VDC
6	12 VDC





Note) Only 24 VDC is available with the S kit.

(E) Light/surge voltage suppressor

Nil	Yes
E Note1, 2)	None (Non-polar)


Note 1) Not applicable to the S kit.
Note 2) A combination of "Function N (Negative common)" and "E" is unavailable.
Since "E" has no polarity, it can also be used as a negative common. Selection of "Function N" is not required.

(F) Manual override

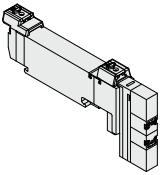Nil	Non-locking push type (Tool required) 
B	Push-turn locking type (Tool required) 
C	Turn locking type (Tool required) 
D	Slide locking type (Manual) 

How to Order Manifold Assembly: EX600*

Example (VV5QC21-□SD6□)

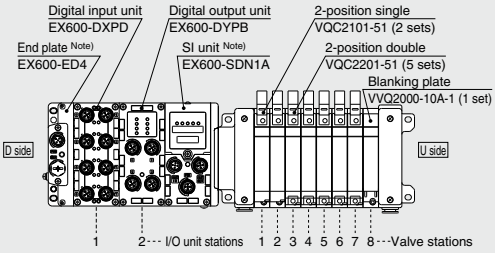

VV5QC21-08C8SD6Q4N2···1 set (S kit 8-station manifold base part no.)
∗VQC2101-51·····2 sets (2-position single part no.) (Stations 1 to 2)
∗VQC2201-51·····5 sets (2-position double part no.) (Stations 3 to 7)
∗VVQ2000-10A-1·····1 set (Blanking plate) (Station 8)
∗EX600-DXPD·····1 set I/O unit part number (Station 1)
∗EX600-DYPB·····1 set I/O unit part number (Station 2)
→The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.


·The valve arrangement is numbered as the 1st station from the D side.
·Under the manifold part number, state the valves to be mounted, then the I/O unit in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) Do not enter the SI Unit part number and the end plate part number together.

For the I/O unit part number mounted, **click here for details**.
· Digital Input Unit · Digital Output Unit · Digital Input/Output Unit
· Analog Input Unit · Analog Output Unit · Analog Input/Output Unit

How to Order Manifold Assembly: EX245*

Example (VV5QC21-□SDAAN□)

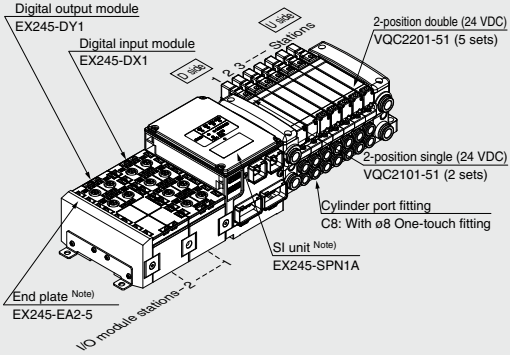

VV5QC21-07C8SDAANY2···1 set (S kit 7-station manifold base part no.)
∗VQC2101-51·····2 sets (Single solenoid part no.) (Stations 1 to 2)
∗VQC2201-51·····5 sets (Double solenoid part no.) (Stations 3 to 7)
∗EX245-DX1·····1 set (I/O unit part number) (Station 1)
∗EX245-DY1·····1 set (I/O unit part number) (Station 2)
→The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

·Specify the part numbers for valves and options together beneath the manifold base part number. Besides, when the arrangement will be complicated, specify them by means of the manifold specification sheet.


Note) Do not enter the SI Unit part number and the end plate part number together.

∗ The EX245/250 I/O module (block) station arrangement is numbered starting from the SI unit side.


Manifold Options

Refer to pages 1138 through to 1140 for details.


Blanking plate assembly
VVQ2000-10A-1

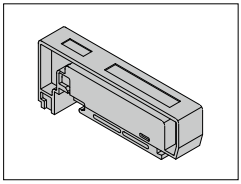


Individual SUP spacer
VVQ2000-P-1-$^{C8}_{N9}$

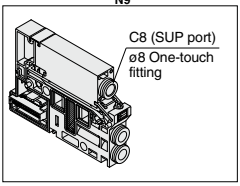


Individual EXH spacer
VVQ2000-R-1-$^{C8}_{N9}$

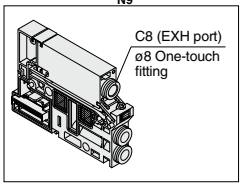


SUP block plate
VVQ2000-16A

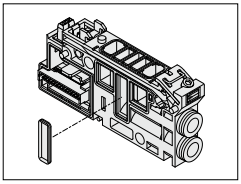


EXH block plate
VVQ2000-19A

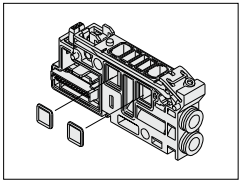


Back pressure check valve assembly [-B]
VVQ2000-18A

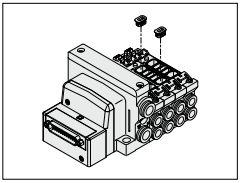


Name plate [-N]
VVQ2000-N-(1 to Max. stations) (-X4)

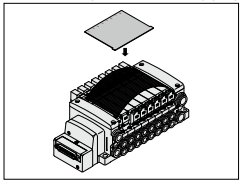


Blanking plug
KQ2P-□

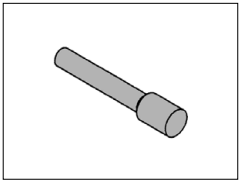


DIN rail mounting bracket [-D]
VVQ2000-57A
{For F/L/M/P/S (EX500) kit}
VVQ2000-57A-S
{For S (EX250) kit}
VVQC2000-57A-T (For T kit)

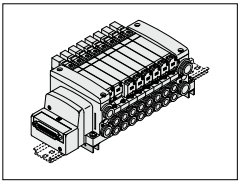


Port plug
VVQ1000-58A

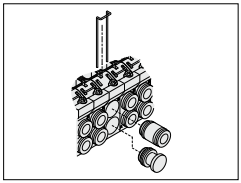


Direct EXH outlet with built-in silencer [-S]

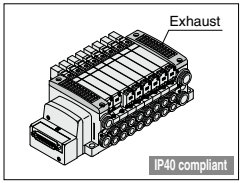


Silencer (For EXH port)
AN20-C10

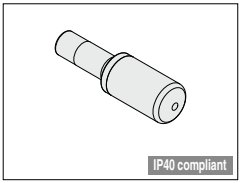

Elbow fitting assembly
VVQ2000-F-L□

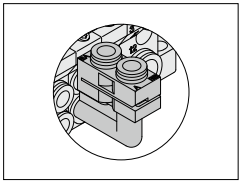


Dual flow fitting assembly
VVQ2000-52A-$^{C10}_{N11}$

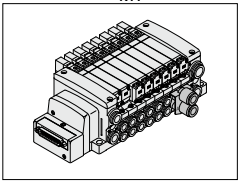

Special electrical wiring specifications [-K]

Wiring example)
D-sub connector

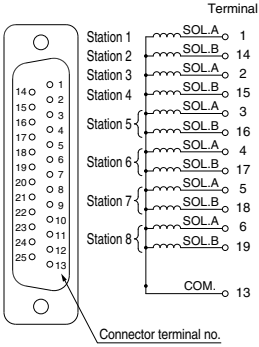


Standard manifolds are for double wiring, but mixed wiring (single and double wiring) can be specified as an option.

Note) Refer to the pages of each kit for details.

F kit ..... P. 1118
P kit ..... P. 1120
T kit ..... P. 1122
L kit ..... P. 1124
M kit ..... P. 1126

Double check block
VVQ2000-FPG-□□-□

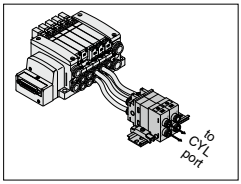

Base Mounted Plug-in Unit

EX260 Safety Communication Protocol

VQC1000/2000 Series

Using the safety communication protocol

Refer to the EX260 **Web Catalog** for details on units that support the safety communication protocol.
When using a manifold valve within an ISO 13849-compliant safety system, the device needs to be considered from both the pneumatic circuit and the electric side.
Devices (including valves) need to be selected based on whether their functions are in line with the safety level of the equipment as a whole.
The use of valves that have been validated as being compliant with ISO 13849-2 may be required.
For details on valves that have been validated, please contact SMC.
In addition, refer to "Safety Instructions" for precautions on model selection.

Refer to pages 1084 and 1090 for details on manifolds that support Fieldbus and Industrial Ethernet.

How to Order Manifolds

VV5QC 1 1 – 08 C6 SFP N – ❻

❶ Base mounted plug-in

❶ Series

1	VQC1000
2	VQC2000

❷ Valve stations

Symbol	Stations	Note
01	1 station	Double wiring Note 1)
⋮	⋮	
12	12 stations	
01	1 station	Special wiring spec. Note 2) (Up to 24 solenoids available)
⋮	⋮	
24	24 stations	

Note 1) Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.
Use of a 2-position single solenoid will result in an unused control signal.
If this is not desired, order with a specified layout.
Note 2) Special wiring spec.: Indicate "K" for an option. Indicate the wiring specifications on the manifold specification sheet.
(Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)

❸ Cylinder port size

		VQC1000	VQC2000
C3	With ø3.2 One-touch fitting	●	—
C4	With ø4 One-touch fitting	●	●
C6	With ø6 One-touch fitting	●	●
C8	With ø8 One-touch fitting	—	●
M5	M5 thread	●	—
CM	Mixed sizes and with port plug	●	●
L3	Top ported elbow with ø3.2 One-touch fitting	●	—
L4	Top ported elbow with ø4 One-touch fitting	●	●
L6	Top ported elbow with ø6 One-touch fitting	●	●
L8	Top ported elbow with ø8 One-touch fitting	—	●
L5	M5 thread	●	—
B3	Bottom ported elbow with ø3.2 One-touch fitting	●	—
B4	Bottom ported elbow with ø4 One-touch fitting	●	●
B6	Bottom ported elbow with ø6 One-touch fitting	●	●
B8	Bottom ported elbow with ø8 One-touch fitting	—	●
B5	M5 thread	●	—
LM	Elbow port, mixed sizes (Including upward, downward piping and mixed)	●	●
MM Note 2)	Mixed size for different types of piping, option installed	●	●

Note 1) Indicate the size by means of the manifold specification sheet in case of "CM", "LM", "NM".
Note 2) When selecting the mixed size for different types of piping or dual flow fitting assembly, enter "MM" and give instructions in the manifold specification sheet.
Note 3) Symbols for inch sizes are as follows:
· N1: ø1/8" (VV5QC11 only) · N3: ø5/32"
· N7: ø1/4" · N9: ø5/16" (VV5QC21 only)
· NM: Mixed
The top ported elbow is LN□ and the bottom ported elbow is BN□.

❹ Kit type

Serial transmission: EX260 integrated-type (for output) **IP67 compliant**

Symbol	Protocol	Number of outputs	Communication connector	SI unit part no.
SD0	Without SI unit			—
SFP	PROFIsafe	32	M12	EX260-FPS1
SDP	Safety over EtherCAT	32	M12	EX260-FSE1


❺ SI unit output polarity

SI unit output polarity		EX260 integrated-type (for output) serial transmission system
		PROFIsafe
N	Negative common	○

Note) Positive common (NPN) type is not applicable.

❻ Option

Nil	None
B Note 2)	All stations with back pressure check valve
D	With DIN rail (Rail length: Standard) Note 7)
D□ Note 3)	With DIN rail (Rail length: Special) Note 7)
K Note 4)	Special wiring spec. (Except double wiring)
N Note 10)	With name plate
R Note 5)	External pilot
S Note 6)	Direct EXH outlet with built-in silencer
T Note 9)	Branched P and R ports on U-side

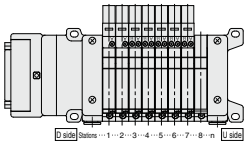

∗ Stations are counted from station 1 on the D-side.

Note 1) When two or more symbols are specified, indicate them alphabetically. Example: -BRS
Note 2) When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.
Note 3) For special DIN rail length, indicate "D□". (Enter the number of stations inside □.) Example: -D08
In this case, stations will be mounted on a DIN rail for 8 stations regardless of the actual number of manifold stations.
The specified number of stations must be larger than the number of stations on the manifold.
Indicate "-D0" for the option without DIN rail.
Note 4) When single wiring and double wiring are mixed, specify wiring type of each station by means of the manifold specification sheet.
Note 5) For external pilot option, "-R", indicate the external pilot specification "R" for the applicable valves as well.
Note 6) Built-in silencer type does not satisfy IP67.
Note 7) When "Without SI unit (SD0)" is specified, "With DIN rail (D)" cannot be selected.
Note 8) When mounting the blanking plate with connector by ordering only the manifold, order the name plate separately. For details, refer to page 1135.
Note 9) VQC2000 only
SUP and EXH ports on the U-side (on cylinder port side and coil side is branched.) Port is equipped with One-touch fitting for ø12.

How to Order Valves

For valve models, refer to page 1087 for the VQC1000 series and page 1094 for the VQC2000 series. Also, note that the 2-position double type with rubber seals and the manual lock types (manual override options "B," "C," and "D") are excluded since they do not comply with safety standards.

SMC

SI Unit Part No.

EX260 SI Unit (Safety Communication)

EX260 − F PS1

Communication protocol

Symbol	Protocol	Number of outputs	SI unit output polarity	Communication connector	Manifold symbol	Page
PS1	PROFIsafe	32	Source/PNP (Negative common)	M12	SFPN	1132
SE1	Safety over EtherCAT	32	Source/PNP (Negative common)	M12	SDPN	1132

For details about the EX series (Serial transmission system), refer to the **Web Catalog** and the Operation Manual.
Please download the Operation Manual via SMC website, https://www.smcworld.com

Base Mounted Plug-in Unit

EX600 **Safety Communication Protocol**

VQC1000/2000 Series

Using the safety communication protocol

Refer to the EX600 **Web Catalog** for details on units that support the safety communication protocol.
When using a manifold valve within an ISO 13849-compliant safety system, the device needs to be considered from both the pneumatic circuit and the electric side.
Devices (including valves) need to be selected based on whether their functions are in line with the safety level of the equipment as a whole.
The use of valves that have been validated as being compliant with ISO 13849-2 may be required.
For details on valves that have been validated, please contact SMC.
In addition, refer to "Safety Instructions" for precautions on model selection.

Refer to pages 1084 and 1090 for details on manifolds that support Fieldbus and Industrial Ethernet.

How to Order Manifolds

VV5QC 1 1 – 08 C6 SD6EP – ❺

❶ Base mounted plug-in

❶ Series

1	VQC1000
2	VQC2000

❷ Valve stations

Symbol	Stations	Note
01	1 station	Double wiring Note 1)
⋮	⋮	
12	12 stations	
01	1 station	Special wiring spec. Note 2) (Up to 24 solenoids available)
⋮	⋮	
24	24 stations	

Note 1) Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.
Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
Note 2) Special wiring spec.: Indicate "K" for an option. Indicate the wiring specifications on the manifold specification sheet.
(Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)

❸ Cylinder port size

		VQC1000	VQC2000
C3	With ø3.2 One-touch fitting	●	—
C4	With ø4 One-touch fitting	●	●
C6	With ø6 One-touch fitting	●	●
C8	With ø8 One-touch fitting	—	●
M5	M5 thread	●	—
CM	Mixed sizes and with port plug	●	●
L3	Top ported elbow with ø3.2 One-touch fitting	●	—
L4	Top ported elbow with ø4 One-touch fitting	●	●
L6	Top ported elbow with ø6 One-touch fitting	●	●
L8	Top ported elbow with ø8 One-touch fitting	—	●
L5	M5 thread	●	—
B3	Bottom ported elbow with ø3.2 One-touch fitting	●	—
B4	Bottom ported elbow with ø4 One-touch fitting	●	●
B6	Bottom ported elbow with ø6 One-touch fitting	●	●
B8	Bottom ported elbow with ø8 One-touch fitting	—	●
B5	M5 thread	●	—
LM	Elbow port, mixed sizes (Including upward, downward piping and mixed)	●	●
MM Note 2)	Mixed size for different types of piping, option installed	●	●

Note 1) Indicate the size by means of the manifold specification sheet in case of "CM", "LM", "NM".
Note 2) When selecting the mixed size for different types of piping or dual flow fitting assembly, enter "MM" and give instructions in the manifold specification sheet.
Note 3) Symbols for inch sizes are as follows:
· N1: ø1/8" (VV5QC11 only) · N3: ø5/32"
· N7: ø1/4" · N9: ø5/16" (VV5QC21 only)
· NM: Mixed
The top ported elbow is LN□ and the bottom ported elbow is BN□.

❹ Kit type

[Safety Communication Protocol] EX600

Symbol	Protocol	Number of outputs	Communication connector
SD6EP	Without fieldbus module		

Note 1) Manifold + valve plate part number
Note 2) Refer to the mounting instructions in the EX600 catalog when mounting the included valve plate.
Note 3) Refer to the EX600 catalog when selecting a safety communication fieldbus system. When ordering, include the part number as shown in the ordering example on page 1099-02. In addition, be sure to order a fieldbus module and a safety I/O module to operate the valve.
Note 4) If your order includes a safety communication fieldbus module, it will be shipped with the product. Refer to the attached operation manual for details on the mounting method.

❺ Option

Nil	None
B Note 2)	All stations with back pressure check valve
D□ Note 3)	With DIN rail mounting bracket (Without DIN rail)
K Note 4)	Special wiring spec. (Except double wiring)
N Note 7)	With name plate
R Note 5)	External pilot
S Note 6)	Direct EXH outlet with built-in silencer
T Note 8)	Branched P and R ports on U-side


Note 1) When two or more symbols are specified, indicate them alphabetically. Example: -BRS
Note 2) When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.
Note 3) Only the DIN rail mounting bracket is included. Order the DIN rail separately, referring to the L1 dimensions (DIN rail length) on pages 1116-01 and 1116-02. (Refer to page 1133-1 for DIN rail part numbers.)
Note 4) When single wiring and double wiring are mixed, specify wiring type of each station by means of the manifold specification sheet.
Note 5) For external pilot option, "-R", indicate the external pilot specification "R" for the applicable valves as well.
Note 6) Built-in silencer type does not satisfy IP67.
Note 7) When mounting the blanking plate with connector by ordering only the manifold, order the name plate separately. For details, refer to page 1135.
Note 8) VQC2000 only
SUP and EXH ports on the U-side (on cylinder port side and coil side is branched.) Port is equipped with One-touch fitting for ø12.

How to Order Valves

For valve models, refer to page 1087 for the VQC1000 series and page 1094 for the VQC2000 series. Also, note that the 2-position double type with rubber seals and the manual lock types (manual override options "B," "C," and "D") are excluded since they do not comply with safety standards.

How to Order Manifold Assembly: [Safety Communication Protocol] EX600

Example (VV5QC11-□SD6EP-□)

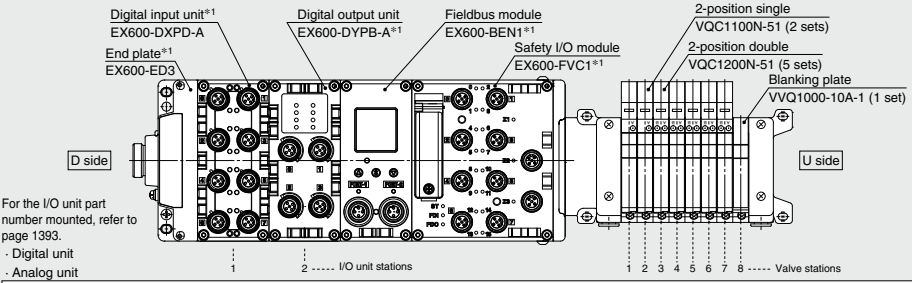

VV5QC11-08C6SD6EP..... **1 set 8-station manifold base part no.**
- ∗ **VQC1100N-51** ..... **2 sets 2-position single part no. (Stations 1 to 2)**
- ∗ **VQC1200N-51** ..... **5 sets 2-position double part no. (Stations 3 to 7)**
- ∗ **VVQ1000-10A-1** ..... **1 set Blanking plate (Station 8)**

} Indicate the part numbers of valves and optional parts to be mounted in order, starting from station 1 (D side). If the arrangement becomes complicated, specify on a manifold specification sheet.

- ∗ **EX600-ED3**..... **1 set End plate**
- ∗ **EX600-DXPD-A** ..... **1 set I/O unit part number (Station 1)**
- ∗ **EX600-DYPB-A** ..... **1 set I/O unit part number (Station 2)**
- ∗ **EX600-BEN1** ..... **1 set Fieldbus module part no.**
- ∗ **EX600-FVC1**..... **1 set Safety I/O module part no.**


} Indicate the part numbers for the end plate, I/O unit (1st station from the D side), fieldbus module, and safety I/O module in that order.

└→The asterisk denotes the symbol for assembly.
Prefix it to the part numbers of the valve etc.

∗1 The manifold part number above does not include an end plate, I/O unit, fieldbus module, or safety I/O module. However, they can be shipped with the product if they are ordered together. For details on the compatible EX600 models, refer to the EX600 series safety communication fieldbus system catalog. In addition, be sure to order a fieldbus system and a safety I/O unit to operate the valve.

How to Order Manifold Assembly: [Safety Communication Protocol] EX600

Example (VV5QC21-□SD6EP-□)

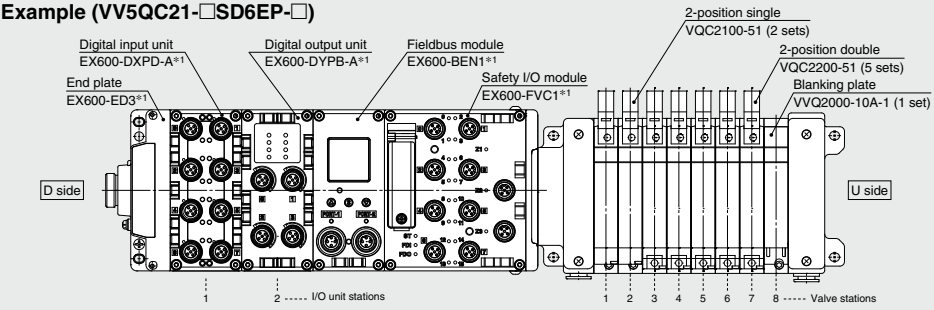

VV5QC21-08C8SD6EP..... **1 set 8-station manifold base part no.**
- ∗ **VQC2100-51** ..... **2 sets 2-position single part no. (Stations 1 to 2)**
- ∗ **VQC2200-51** ..... **5 sets 2-position double part no. (Stations 3 to 7)**
- ∗ **VVQ2000-10A-1** ..... **1 set Blanking plate (Station 8)**

} Indicate the part numbers of valves and optional parts to be mounted in order, starting from station 1 (D side). If the arrangement becomes complicated, specify on a manifold specification sheet.

- ∗ **EX600-ED3**..... **1 set End plate**
- ∗ **EX600-DXPD-A** ..... **1 set I/O unit part number (Station 1)**
- ∗ **EX600-DYPB-A** ..... **1 set I/O unit part number (Station 2)**
- ∗ **EX600-BEN1** ..... **1 set Fieldbus module part no.**
- ∗ **EX600-FVC1**..... **1 set Safety I/O module part no.**

} Indicate the part numbers for the end plate, I/O unit (1st station from the D side), fieldbus module, and safety I/O module in that order.

└→The asterisk denotes the symbol for assembly.
Prefix it to the part numbers of the valve etc.

∗1 The manifold part number above does not include an end plate, I/O unit, fieldbus module, or safety I/O module. However, they can be shipped with the product if they are ordered together. For details on the compatible EX600 models, refer to the EX600 series safety communication fieldbus system catalog. In addition, be sure to order a fieldbus system and a safety I/O unit to operate the valve.

Base Mounted Plug-in Unit
Compact Wireless Remote Series
VQC1000/2000 Series

How to Order Manifolds

VV5QC 1 1 – 08 C6 SW2 N – ❻

❶ ❷ ❸ ❹ ❺

❶ Base mounted plug-in

❶ Series

1	VQC1000
2	VQC2000

❷ Valve stations

Symbol	Stations	Note
01	1 station	Double wiring Note 1)
⋮	⋮	
12	12 stations	
01	1 station	Special wiring spec. Note 2) (Up to 24 solenoids available)
⋮	⋮	
24	24 stations	

Note 1) Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.
Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
Note 2) Special wiring spec.: Indicate "K" for an option. Indicate the wiring specifications on the manifold specification sheet.
(Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)

❸ Cylinder port size

		VQC1000	VQC2000
C3	With ø3.2 One-touch fitting	●	—
C4	With ø4 One-touch fitting	●	●
C6	With ø6 One-touch fitting	●	●
C8	With ø8 One-touch fitting	—	●
M5	M5 thread	●	—
CM	Mixed sizes and with port plug	●	●
L3	Top ported elbow with ø3.2 One-touch fitting	●	—
L4	Top ported elbow with ø4 One-touch fitting	●	●
L6	Top ported elbow with ø6 One-touch fitting	●	●
L8	Top ported elbow with ø8 One-touch fitting	—	●
L5	M5 thread	●	—
B3	Bottom ported elbow with ø3.2 One-touch fitting	●	—
B4	Bottom ported elbow with ø4 One-touch fitting	●	●
B6	Bottom ported elbow with ø6 One-touch fitting	●	●
B8	Bottom ported elbow with ø8 One-touch fitting	—	●
B5	M5 thread	●	—
LM	Elbow port, mixed sizes (Including upward, downward piping and mixed)	●	●
MM Note 2)	Mixed size for different types of piping, option installed	●	●

Note 1) Indicate the size by means of the manifold specification sheet in case of "CM", "LM", "NM".
Note 2) When selecting the mixed size for different types of piping or dual flow fitting assembly, enter "MM" and give instructions in the manifold specification sheet.
Note 3) Symbols for inch sizes are as follows:
· N1: ø1/8" (VV5QC11 only) · N3: ø5/32"
· N7: ø1/4" · N9: ø5/16" (VV5QC21 only)
· NM: Mixed
The top ported elbow is LN□ and the bottom ported elbow is BN□.

❹ Kit type

Specifications / Symbol	Wireless adapter	Number of outputs	Stations	Number of selectable frequency channels	Applicable countries Note 3)
SD0 Note 1) Note 2)	Without compact wireless remote				
SW1	Without wireless adapter	32	1 to 12 stations (24)	—	—
SW2	EXW1-A11E	32	1 to 12 stations (24)	Min. 5/ Max. 79	Radio Law certified countries other than the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico
SW3	EXW1-A11N	32	1 to 12 stations (24)	Min. 15/ Max. 79	Radio Law certified countries including the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico

Note 1) Confirm that the common specification of the built-in valve matches the output polarity of the selected compact wireless remote.
In addition, if the built-in valve has no polarity, either compact wireless remote output polarity type can be connected.
Note 2) "With DIN rail" cannot be selected for the type without a compact wireless remote.
Note 3) Select the wireless adapter according to the country of use.
∗ The applicable countries differ depending on the part number. Before purchasing, refer to the wireless system catalog.


❺ Compact wireless remote output polarity

Output polarity	
N	Negative common

Note) Cannot be selected for the type without a compact wireless remote

❻ Option

Nil	None
B Note 2)	All stations with back pressure check valve
D	With DIN rail (Rail length: Standard) Note 7)
D□ Note 3)	With DIN rail (Rail length: Special) Note 7)
K Note 4)	Special wiring spec. (Except double wiring)
N Note 10)	With name plate
R Note 5)	External pilot
S Note 6)	Direct EXH outlet with built-in silencer
T Note 9)	Branched P and R ports on U-side

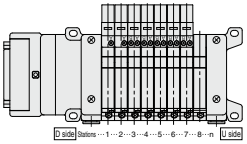

∗ Stations are counted from station 1 on the D-side.

Note 1) When two or more symbols are specified, indicate them alphabetically. Example: -BRS
Note 2) When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.
Note 3) For special DIN rail length, indicate "D□". (Enter the number of stations inside □.) Example: -D08
In this case, stations will be mounted on a DIN rail for 8 stations regardless of the actual number of manifold stations. The specified number of stations must be larger than the number of stations on the manifold.
Indicate "-D0" for the option without DIN rail.
Note 4) When single wiring and double wiring are mixed, specify wiring type of each station by means of the manifold specification sheet.
Note 5) For external pilot option, "-R", indicate the external pilot specification "R" for the applicable valves as well.
Note 6) Built-in silencer type does not satisfy IP67.
Note 7) When "Compact wireless remote (SD0)" is specified, "With DIN rail (D)" cannot be selected.
Note 8) When mounting the blanking plate with connector by ordering only the manifold, order the name plate separately. For details, refer to page 1135.
Note 9) VQC2000 only
SUP and EXH ports on the U-side (on cylinder port side and coil side is branched.) Port is equipped with One-touch fitting for ø12.

Compact Wireless Remote Part No.

①Compact wireless remote part no.

EXW1 − R D Y P M5 C − E

Type

Symbol	Type
D	Digital

Type

Symbol	Type
Y	Output

Polarity

Symbol	Description
P	PNP
N	NPN

Option

Symbol	Option
Nil	Without wireless adapter
E	With wireless adapter ① (EXW1-A11E)
N	With wireless adapter ② (EXW1-A11N)

∗ If without wireless adapter is selected, a dedicated cable for wireless adapter and wireless adapter or wireless adapter and wireless adapter cover must be ordered separately.
Refer to the operation manual for mounting instructions.
∗ "E" and "N" are shipped with the wireless adapter assembled.

Antenna specification for wireless communication

Symbol	Connector interface
C	Wireless adapter

Connector/Number of ports

Symbol	Connector	Number of points
M5	Valve manifold	32 points

Corresponding Manifold Symbol Table

Compact wireless remote part no.	Manifold symbol
EXW1-RDYNM5C	SW1
EXW1-RDYPM5C	SW1N
EXW1-RDYNM5C-E	SW2
EXW1-RDYPM5C-E	SW2N
EXW1-RDYNM5C-N	SW3
EXW1-RDYPM5C-N	SW3N

②Wireless adapter

EXW1 − A1 1 N



Wireless adapter

Applicable model

Symbol	Applicable model
1	· Base/Remote Antenna specification for wireless communication: C · Air Management Hub: EXA1-□

Frequency channel selection

Symbol	Number of selectable frequency channels	Applicable countries
E	Min. 5/Max. 79 channels	Radio Law certified countries other than the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico
N	Min. 15/Max. 79 channels	Radio Law certified countries including the U.S., Canada, South Korea, Brazil, Taiwan, Argentina, and Mexico


∗ A dedicated cable is required to connect the wireless base/remote and wireless adapter.
When using this product, order the wireless adapter cable separately.
An installation plate (EXW1-AB4) is included as an accessory.

∗ Select this according to the country of use.
∗ Suitable for use only in countries where it is in accordance with the Radio Act and regulations of that country.
For details, refer to the wireless system catalog.

③Wireless adapter cover

EXW1 − AB6

For direct mounting of wireless adapter, a wireless adapter cover is required.

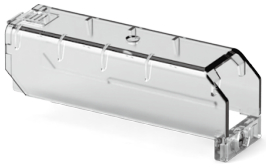


For details on the compact wireless remote, refer to the EXW1 series catalog or operation manual, and for part numbers of the built-in compact wireless remote, etc., refer to page 1130. The operation manual can be downloaded from the SMC website: https://www.smcworld.com

Plug-in Unit


Model

Symbol


2-position single




2-position double (Metal)




2-position double (Rubber)




3-position closed center




3-position exhaust center




3-position pressure center




4-position dual 3-port valve (A)



4-position dual 3-port valve (B)



4-position dual 3-port valve (C)



Series	Type of actuation		Model		Flow rate characteristics						Response time Note 2) (ms)		Weight (g)
					1 → 4, 2 (P → A, B)			4, 2 → 5, 3 (A, B → R1, R2)			Standard: 0.4 W	High-speed response: 0.95 W	
					C [dm³/(s·bar)]	b	Cv	C [dm³/(s·bar)]	b	Cv			
VQC1000	2-position	Single	Metal seal	VQC1100	0.70	0.15	0.16	0.72	0.25	0.18	15 or less	12 or less	67
			Rubber seal	VQC1101	0.85	0.20	0.21	1.0	0.30	0.25	20 or less	15 or less	
		Double	Metal seal	VQC1200	0.70	0.15	0.16	0.72	0.25	0.18	13 or less	10 or less	77
			Rubber seal	VQC1201	0.85	0.20	0.21	1.0	0.30	0.25	20 or less	15 or less	
	3-position	Closed center	Metal seal	VQC1300	0.68	0.15	0.16	0.72	0.25	0.18	26 or less	20 or less	
			Rubber seal	VQC1301	0.70	0.20	0.16	0.65	0.42	0.18	33 or less	25 or less	
		Exhaust center	Metal seal	VQC1400	0.68	0.15	0.16	0.72	0.25	0.18	26 or less	20 or less	
			Rubber seal	VQC1401	0.70	0.20	0.16	1.0	0.30	0.25	33 or less	25 or less	
		Pressure center	Metal seal	VQC1500	0.70	0.15	0.16	0.72	0.25	0.18	26 or less	20 or less	
			Rubber seal	VQC1501	0.85	0.20	0.21	0.65	0.42	0.18	33 or less	25 or less	
	4-position	Dual 3-port valve	Rubber seal	VQC1A/B/C01	0.70	0.20	0.16	0.70	0.20	0.16	33 or less	25 or less	
VQC2000	2-position	Single	Metal seal	VQC2100	2.0	0.15	0.46	2.6	0.15	0.60	29 or less	22 or less	95
			Rubber seal	VQC2101	2.2	0.28	0.55	3.2	0.30	0.80	31 or less	24 or less	
		Double	Metal seal	VQC2200	2.0	0.15	0.46	2.6	0.15	0.60	20 or less	15 or less	105
			Rubber seal	VQC2201	2.2	0.28	0.55	3.2	0.30	0.80	26 or less	20 or less	
	3-position	Closed center	Metal seal	VQC2300	2.0	0.15	0.46	2.0	0.18	0.46	38 or less	29 or less	
			Rubber seal	VQC2301	2.0	0.28	0.49	2.2	0.31	0.60	44 or less	34 or less	
		Exhaust center	Metal seal	VQC2400	2.0	0.15	0.46	2.6	0.15	0.60	38 or less	29 or less	
			Rubber seal	VQC2401	2.0	0.28	0.49	3.2	0.30	0.80	44 or less	34 or less	
		Pressure center	Metal seal	VQC2500	2.4	0.17	0.57	2.0	0.18	0.46	38 or less	29 or less	
			Rubber seal	VQC2501	3.2	0.28	0.80	2.2	0.31	0.60	44 or less	34 or less	
	4-position	Dual 3-port valve	Rubber seal	VQC2A/B/C01	1.8	0.28	0.46	1.8	0.28	0.46	44 or less	34 or less	

Note 1) Values represented in this column are in the following conditions:
VQC1000: Cylinder port size C6 without a back pressure check valve
VQC2000: Cylinder port size C8 without a back pressure check valve

Note 2) Values represented in this column are based on JIS B 8419: 2010 (operating with clean air and a supply pressure of 0.5 MPa. Equipped with light/surge voltage suppressor. Values vary depending on the pressure as well as the air quality.) Values for double type are when the switch is turned ON.



Standard Specifications

Valve specifications	Valve type		Metal seal	Rubber seal
	Fluid		Air	
	Maximum operating pressure		0.7 MPa (High-pressure type: 1.0 MPa)	0.7 MPa
	Minimum operating pressure	Single	0.1 MPa	0.15 MPa
		Double	0.1 MPa	
		3-position	0.1 MPa	0.2 MPa
		4-position	——	0.15 MPa
	Ambient and fluid temperature		−10 to 50°C Note 1)	
	Lubrication		Not required	
	Manual override		Push type, Locking type (Tool required) semi-standard	
	Impact/Vibration resistance		150/30 m/s² Note 2)	
	Enclosure		Dustproof (IP67 compatible) Note 3)	
Electrical specifications	Rated coil voltage		24 VDC	
	Allowable voltage fluctuation		±10% of rated voltage	
	Coil insulation type		Equivalent to Class B	
	Power consumption (Current)	24 VDC	0.4 W DC (17 mA), 0.95 W DC (40 mA) Note 4)	
		12 VDC	0.4 W DC (34 mA), 0.95 W DC (80 mA) Note 4)	

Note 1) Use dry air to prevent condensation when operating at low temperatures.
Note 2) Impact resistance ····· No malfunction resulted from the impact test using a drop impact tester. Test was performed one time each in the axial and right angle directions of the main valve and armature for both energized and de-energized states.
Vibration resistance ··· No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed in the axial and right angle directions of the main valve and armature for both energized and de-energized states.
Note 3) Refer to pages 1080 and 1081 for applicable variations.
Note 4) Value for high-speed response, high-pressure type (0.95 W)

Manifold Specifications


Series	Base model	Connection type	Piping specifications: Port direction	Piping specifications: Port size Note 1) 1, 3 (P, R)	Piping specifications: Port size Note 1) 2, 4 (A, B)	Applicable stations Note 2)	Applicable solenoid valves	5-station weight (g)
VQC1000	VV5QC11-□□□	F kit: D-sub connector P kit: Flat ribbon cable T kit: Terminal block box S kit: Serial transmission Compact wireless remote L kit: Lead wire M kit: Circular connector	Side	C8 (ø8) Option: Direct EXH outlet with built-in silencer	C3 (ø3.2) C4 (ø4) C6 (ø6) M5 (M5 thread)	F/L/M/P kit: 1 to 12 stations T kit: 1 to 10 stations S kit Note 3): 1 to 8 stations: EX500, 1 to 12 stations: EX250 EX245	VQC1□00-5 VQC1□01-5	643 (Single) 754 (Double, 3-position)
VQC2000	VV5QC21-□□□		Side	C10 (ø10) Option: Direct EXH outlet with built-in silencer Branch type C12 (ø12)	C4 (ø4) C6 (ø6) C8 (ø8)	S kit Note 4): 1 to 12 stations	VQC2□00-5 VQC2□01-5	1076 (Single) 1119 (Double, 3-position)

Note 1) Inch-size One-touch fittings are also available.
Note 2) Special wiring specifications are available as semi-standard to increase the maximum number of stations.
Note 3) Depending on the protocol, there is a limit to the number of stations a serial transmission can be applied to. Refer to page 1092 for details.
Note 4) For the compact wireless remote

S *VQC1000 Series*

Kit (Serial transmission) For EX500 Gateway Decentralized System 2 (128 points) **IP67 compliant**

VV5QC11
S kit (Serial transmission kit: EX500)

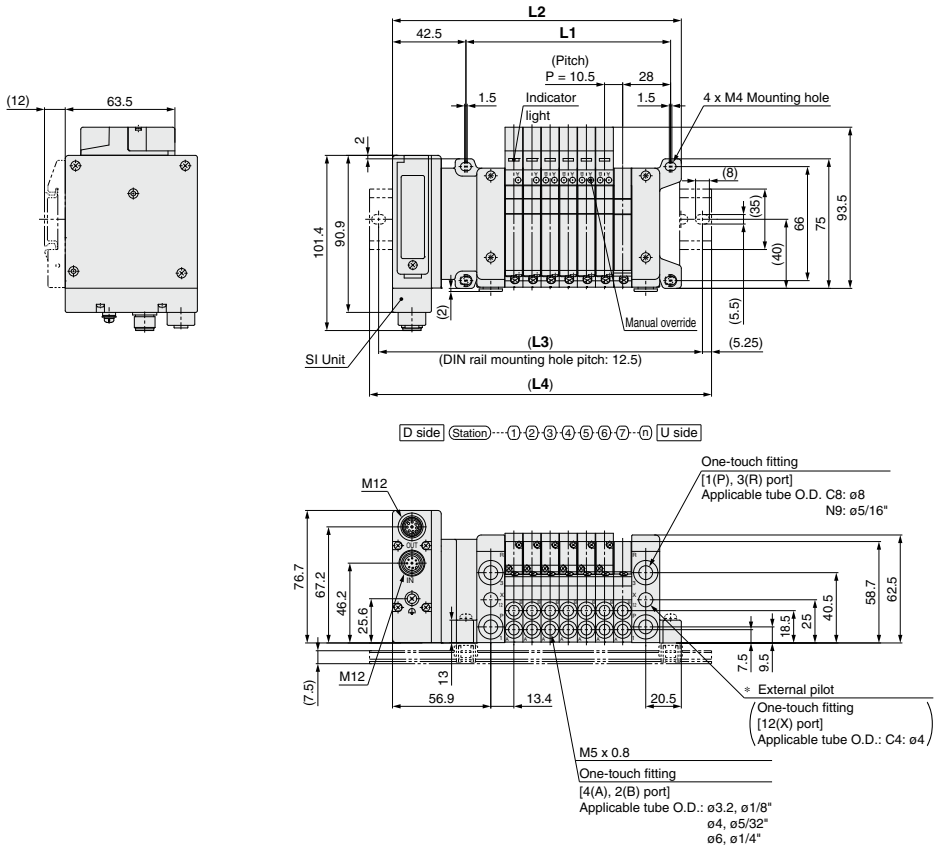

L: Dimensions n: Stations


L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
L1	55.5	66	76.5	87	97.5	108	118.5	129	139.5	150	160.5	171	181.5	192	202.5
L2	104.2	114.7	125.2	135.7	146.2	156.7	167.2	177.7	188.2	198.7	209.2	219.7	230.2	240.7	251.2
L3	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275
L4	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5

L \ n	16	17	18	19	20	21	22	23	24
L1	213	223.5	234	244.5	255	265.5	276	286.5	297
L2	261.7	272.2	282.7	293.2	303.7	314.2	324.7	335.2	345.7
L3	287.5	300	312.5	325	325	337.5	350	362.5	375
L4	298	310.5	323	335.5	335.5	348	360.5	373	385.5

S *VQC2000 Series*

Kit (Serial transmission) For EX500 Gateway Decentralized System 2 (128 points) IP67 compliant

VV5QC21
S kit (Serial transmission kit: EX500)

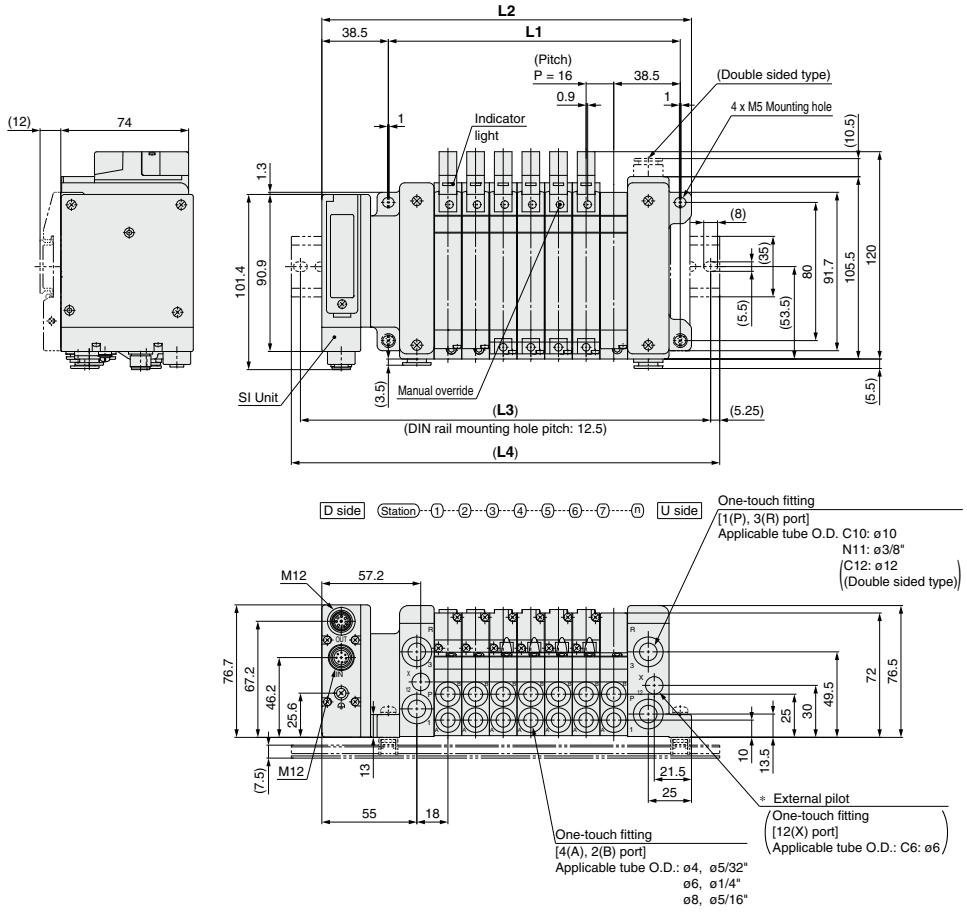

L: Dimensions n: Stations


L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
L1	73	89	105	121	137	153	169	185	201	217	233	249	265	281	297
L2	118	134	150	166	182	198	214	230	246	262	278	294	310	326	342
L3	137.5	162.5	175	187.5	212.5	225	237.5	250	275	287.5	300	325	337.5	350	362.5
L4	148	173	185.5	198	223	235.5	248	260.5	285.5	298	310.5	335.5	348	360.5	373


L \ n	16	17	18	19	20	21	22	23	24
L1	313	329	345	361	377	393	409	425	441
L2	358	374	390	406	422	438	454	470	486
L3	387.5	400	412.5	437.5	450	462.5	475	500	512.5
L4	398	410.5	423	448	460.5	473	485.5	510.5	523

S *VQC1000 Series*

Kit (Serial transmission) For EX600 Integrated-type (I/O) Serial Transmission System **IP67 compliant**

VV5QC11
S kit (Serial transmission kit: EX600)
Power supply with M12 connector

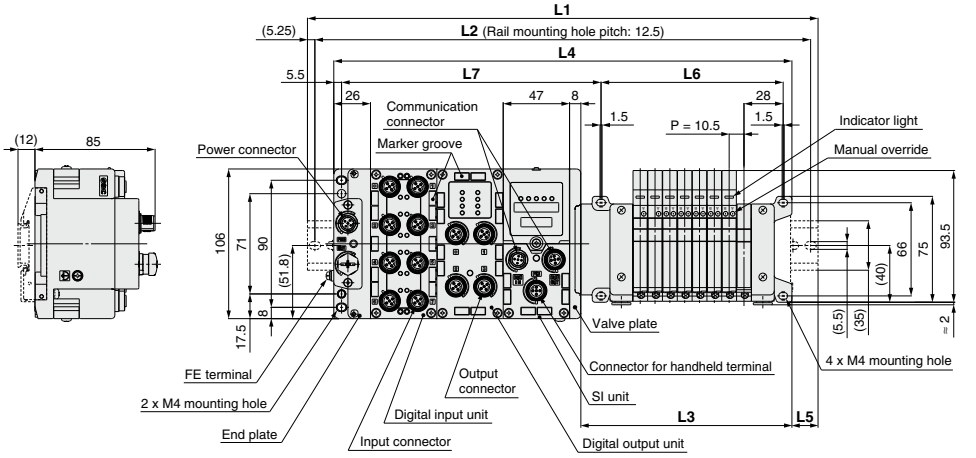

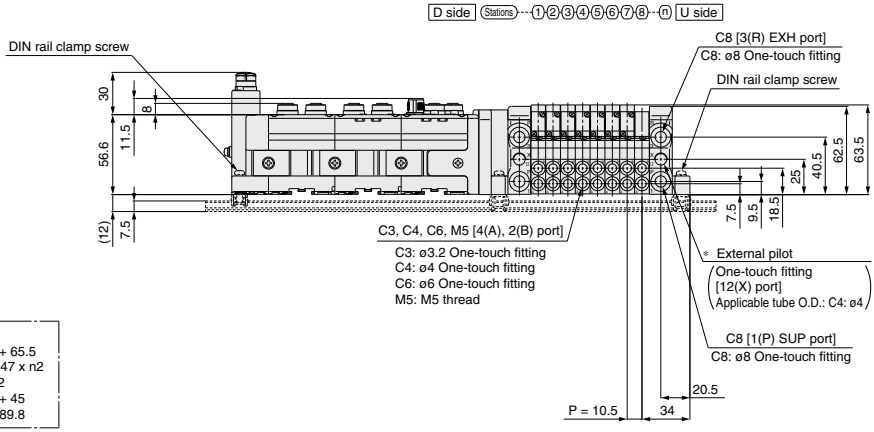

L2 = L1 – 10.5
L3 = 10.5 x n1 + 65.5
L4 = L3 + 81 + 47 x n2
L5 = (L1 – L4)/2
L6 = 10.5 x n1 + 45
L7 = 47 x n2 + 89.8


L1: DIN Rail Full Length


I/O unit stations (n2) \ Valve stations (n1)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5	398	398	410.5	423	435.5
1	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5
2	285.5	298	310.5	323	323	335.5	348	360.5	373	385.5	398	398	410.5	423	435.5	448	460.5	460.5	473	485.5	498	510.5	523	523
3	335.5	348	360.5	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	560.5	560.5	573
4	385.5	385.5	398	410.5	423	435.5	448	460.5	460.5	473	485.5	498	510.5	523	523	535.5	548	560.5	573	585.5	585.5	598	610.5	623
5	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5	598	610.5	623	623	635.5	648	660.5	673
6	473	485.5	498	510.5	523	523	535.5	548	560.5	573	585.5	585.5	598	610.5	623	635.5	648	648	660.5	673	685.5	698	710.5	710.5
7	523	535.5	548	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673	685.5	685.5	698	710.5	723	735.5	748	748	760.5
8	573	585.5	585.5	598	610.5	623	635.5	648	648	660.5	673	685.5	698	710.5	710.5	723	735.5	748	760.5	773	773	785.5	798	810.5
9	610.5	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	748	748	760.5	773	785.5	798	810.5	810.5	823	835.5	848	860.5

S *VQC1000 Series*

Kit (Serial transmission) For EX600 Integrated-type (I/O) Serial Transmission System IP67 compliant

VV5QC11
S kit (Serial transmission kit: EX600)
Power supply with 7/8 inch connector

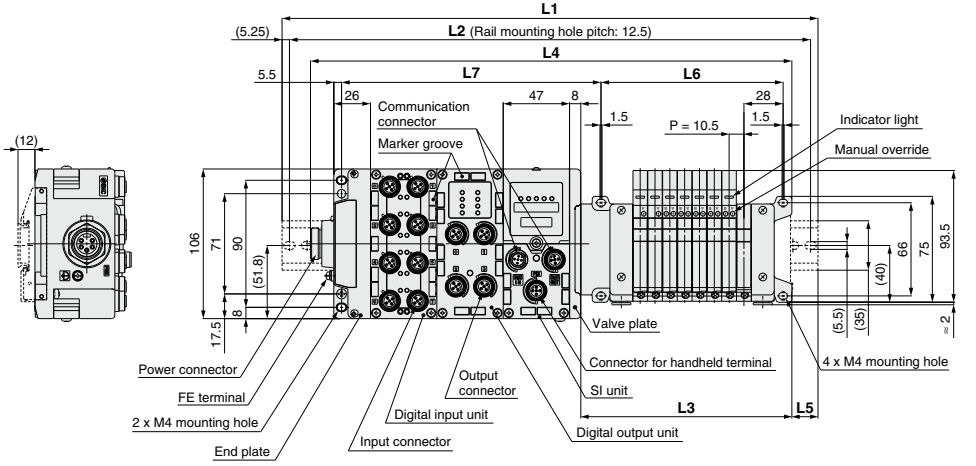

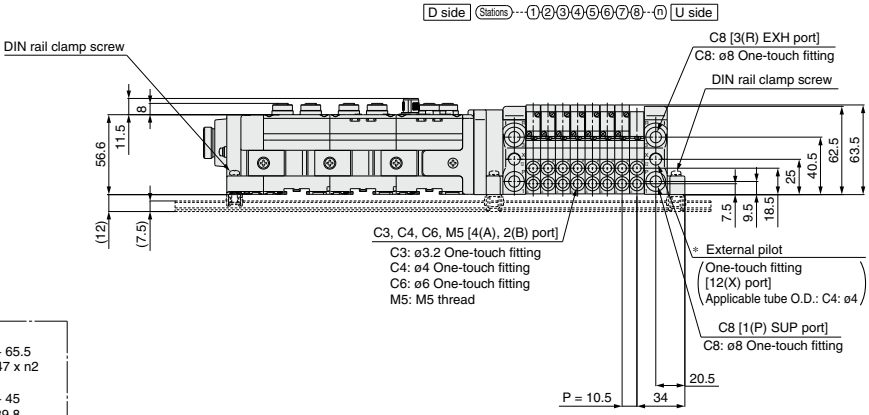

L2 = L1 – 10.5
L3 = 10.5 x n1 + 65.5
L4 = L3 + 81 + 47 x n2
L5 = (L1 – L4)/2
L6 = 10.5 x n1 + 45
L7 = 47 x n2 + 89.8


L1: DIN Rail Full Length

I/O unit stations (n2) \ Valve stations (n1)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	210.5	223	235.5	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5	373	373	385.5	398	410.5	423	435.5	435.5	448
1	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5	398	398	410.5	423	435.5	448	460.5	460.5	473	485.5	498
2	298	310.5	323	335.5	348	360.5	360.5	373	385.5	398	410.5	423	435.5	435.5	448	460.5	473	485.5	498	498	510.5	523	535.5	548
3	348	360.5	373	385.5	398	398	410.5	423	435.5	448	460.5	460.5	473	485.5	498	510.5	523	523	535.5	548	560.5	573	585.5	598
4	398	410.5	423	423	435.5	448	460.5	473	485.5	498	498	510.5	523	535.5	548	560.5	560.5	573	585.5	598	610.5	623	623	635.5
5	448	460.5	460.5	473	485.5	498	510.5	523	523	535.5	548	560.5	573	585.5	585.5	598	610.5	623	635.5	648	660.5	660.5	673	685.5
6	485.5	498	510.5	523	535.5	548	560.5	560.5	573	585.5	598	610.5	623	623	635.5	648	660.5	673	685.5	685.5	698	710.5	723	735.5
7	535.5	548	560.5	573	585.5	585.5	598	610.5	623	635.5	648	648	660.5	673	685.5	698	710.5	723	723	735.5	748	760.5	773	785.5
8	585.5	598	610.5	623	623	635.5	648	660.5	673	685.5	685.5	698	710.5	723	735.5	748	748	760.5	773	785.5	798	810.5	810.5	823
9	635.5	648	648	660.5	673	685.5	698	710.5	710.5	723	735.5	748	760.5	773	785.5	785.5	798	810.5	823	835.5	848	848	860.5	873

S *VQC2000 Series*

Kit (Serial transmission) For EX600 Integrated-type (I/O) Serial Transmission System **IP67 compliant**

VV5QC21
S kit (Serial transmission kit: EX600)
Power supply with M12 connector

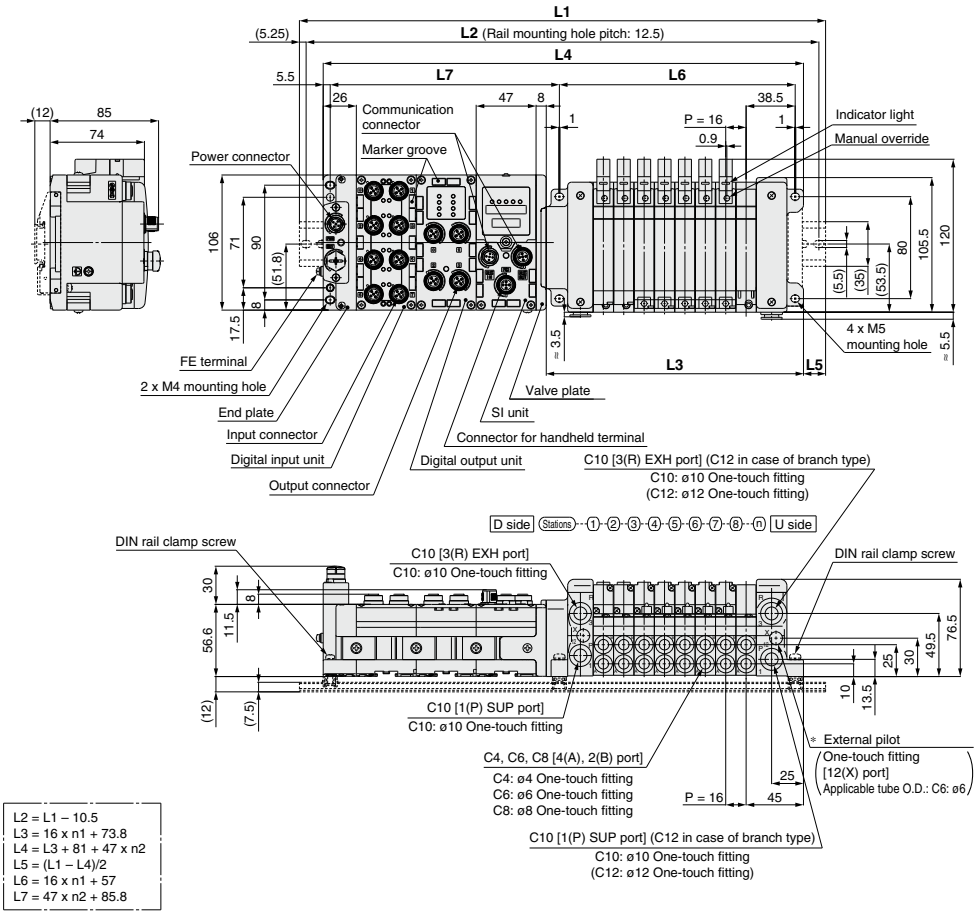

L2 = L1 – 10.5
L3 = 16 x n1 + 73.8
L4 = L3 + 81 + 47 x n2
L5 = (L1 – L4)/2
L6 = 16 x n1 + 57
L7 = 47 x n2 + 85.8


L1: DIN Rail Full Length

I/O unit stations (n2) \ Valve stations (n1)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573
1	248	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573	585.5	610.5	623
2	298	323	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	498	510.5	523	535.5	560.5	573	585.5	610.5	623	635.5	648	673
3	348	360.5	385.5	398	410.5	423	448	460.5	473	498	510.5	523	535.5	560.5	573	585.5	598	623	635.5	648	673	685.5	698	710.5
4	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573	585.5	598	623	635.5	648	673	685.5	698	710.5	735.5	748	760.5
5	448	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5	685.5	698	710.5	735.5	748	760.5	773	798	810.5
6	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5	685.5	698	710.5	723	748	760.5	773	798	810.5	823	835.5	860.5
7	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5	723	748	760.5	773	798	810.5	823	835.5	860.5	873	885.5	898
8	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748	760.5	773	785.5	810.5	823	835.5	860.5	873	885.5	898	923	935.5	948
9	635.5	648	660.5	673	698	710.5	723	748	760.5	773	785.5	810.5	823	835.5	848	873	885.5	898	923	935.5	948	960.5	985.5	985.5

S *VQC2000 Series*

Kit (Serial transmission) For EX600 Integrated-type (I/O) Serial Transmission System IP67 compliant

VV5QC21
S kit (Serial transmission kit: EX600)
Power supply with 7/8 inch connector

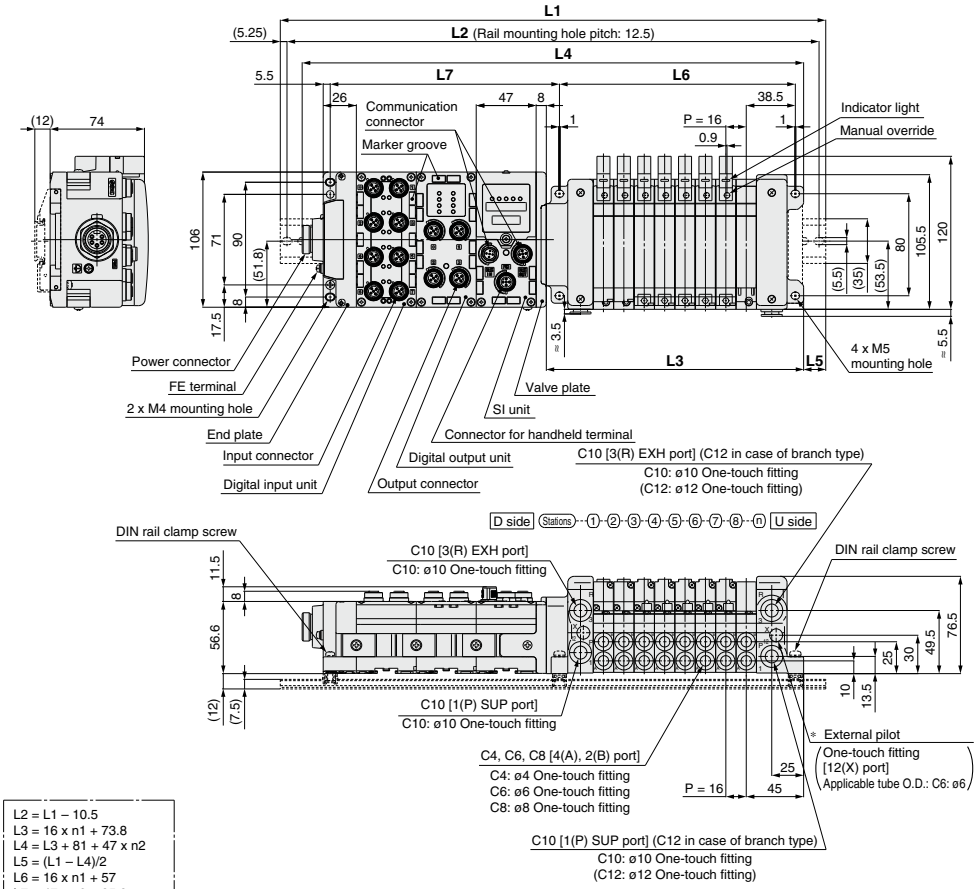

L2 = L1 – 10.5
L3 = 16 x n1 + 73.8
L4 = L3 + 81 + 47 x n2
L5 = (L1 – L4)/2
L6 = 16 x n1 + 57
L7 = 47 x n2 + 85.8


L1: DIN Rail Full Length

I/O unit stations (n2) \ Valve stations (n1)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498	510.5	523	548	560.5	573	585.5
1	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573	585.5	610.5	623	635.5
2	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	535.5	560.5	573	585.5	610.5	623	635.5	648	673	685.5
3	360.5	385.5	398	410.5	423	448	460.5	473	498	510.5	523	535.5	560.5	573	585.5	610.5	623	635.5	648	673	685.5	698	710.5	735.5
4	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573	585.5	598	623	635.5	648	673	685.5	698	710.5	735.5	748	760.5	785.5
5	460.5	473	485.5	510.5	523	535.5	560.5	573	585.5	598	623	635.5	648	660.5	685.5	698	710.5	735.5	748	760.5	773	798	810.5	823
6	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5	685.5	698	710.5	735.5	748	760.5	773	798	810.5	823	835.5	860.5	873
7	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5	723	748	760.5	773	798	810.5	823	835.5	860.5	873	885.5	910.5	923
8	598	610.5	635.5	648	660.5	685.5	698	710.5	723	748	760.5	773	785.5	810.5	823	835.5	860.5	873	885.5	898	923	935.5	948	973
9	648	660.5	673	698	710.5	723	748	760.5	773	785.5	810.5	823	835.5	860.5	873	885.5	898	923	935.5	948	960.5	985.5	985.5	–

S *VQC2000 Series*
Kit (Serial transmission) EX245

IP65 compliant

VV5QC21
S kit (Serial transmission kit: EX245)

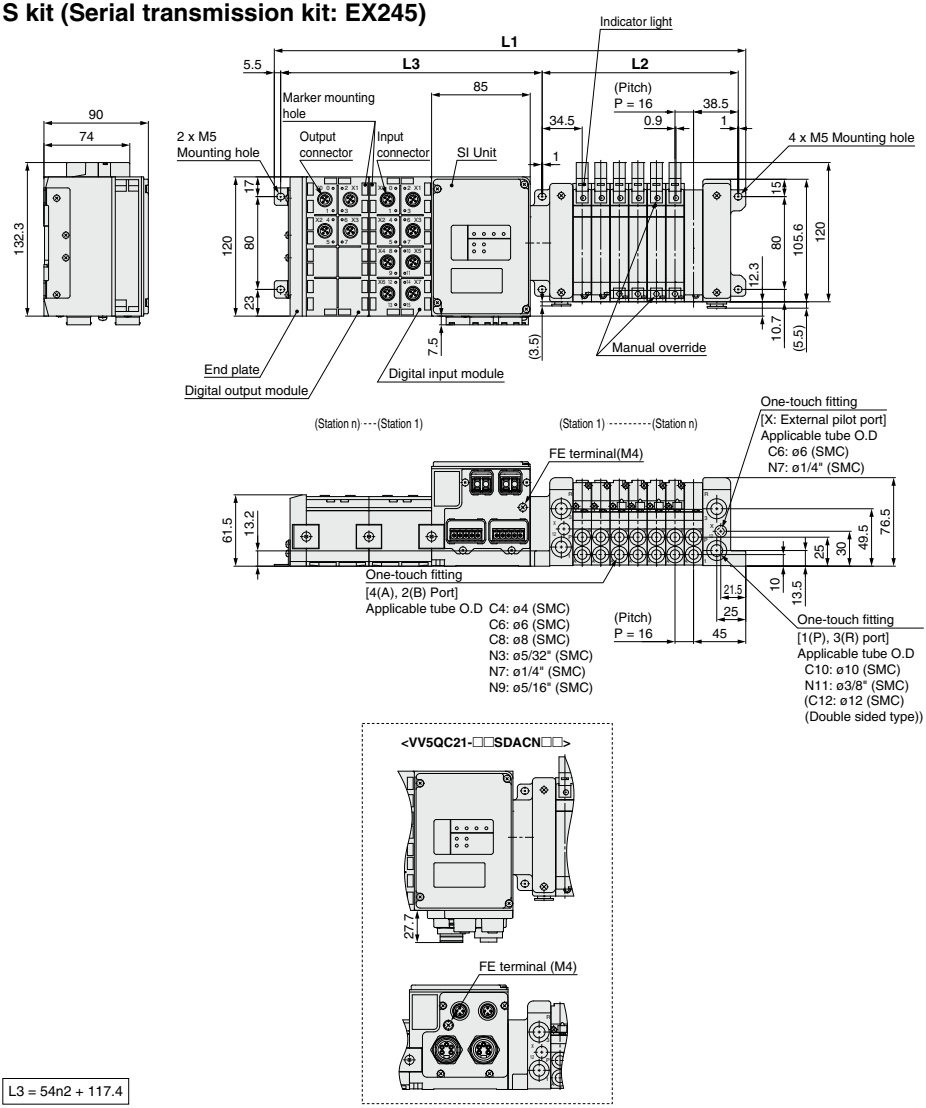

L3 = 54n2 + 117.4

L: Dimensions Formula/L1 = 16n + 186.4 L2 = 16n 57 ∗ The L1 dimension is the dimension without an I/O module. Add 54 mm to this dimension for each I/O module. ∗ n2 is the number of I/O module stations.


L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
L1	202.4	218.4	234.4	250.4	266.4	282.4	298.4	314.4	330.4	346.4	362.4	378.4	394.4	410.4	426.4
L2	73	89	105	121	137	153	169	185	201	217	233	249	265	281	297

L \ n	16	17	18	19	20	21	22	23	24
L1	442.4	458.4	474.4	490.4	506.4	522.4	538.4	554.4	570.4
L2	313	329	345	361	377	393	409	425	441


S VQC1000/2000 Series

Kit (Serial transmission) For EX250 Integrated-type (I/O) Serial Transmission System IP67 compliant

VV5QC11
S kit (Serial transmission kit: EX250)

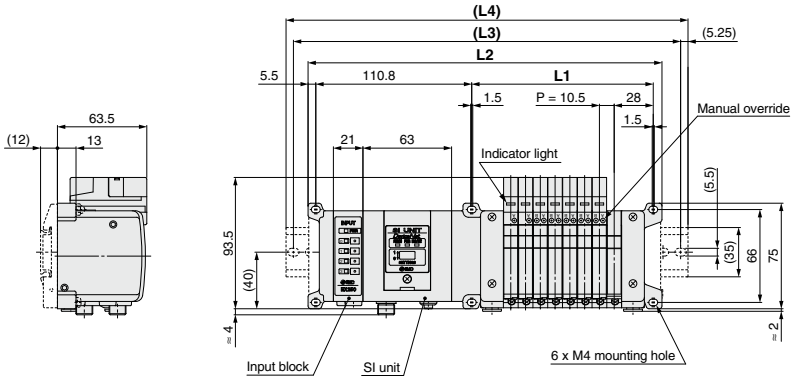

D side Stations ① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⓝ U side

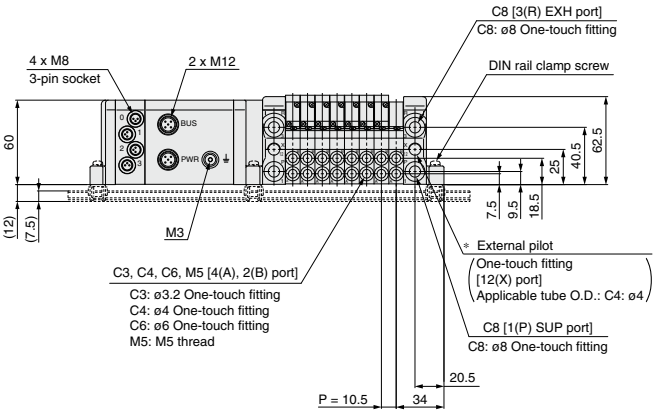

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).


Formula: L1 = 10.5n + 45, L2 = 10.5n + 167.5 (For one input block. Add 21 mm for each additional input block.) n: Stations (Maximum 24 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	55.5	66	76.5	87	97.5	108	118.5	129	139.5	150	160.5	171	181.5	192	202.5	213	223.5	234	244.5	255	265.5	276	286.5	297
L2	178	188.5	199	209.5	220	230.5	241	251.5	262	272.5	283	293.5	304	314.5	325	335.5	346	356.5	367	377.5	388	398.5	409	419.5
L3	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5	375	387.5	387.5	400	412.5	425	437.5	450
L4	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5	398	398	410.5	423	435.5	448	460.5

S *VQC1000/2000* Series

Kit (Serial transmission) For EX250 Integrated-type (I/O) Serial Transmission System **IP67 compliant**

VV5QC21
S kit (Serial transmission kit: EX250)

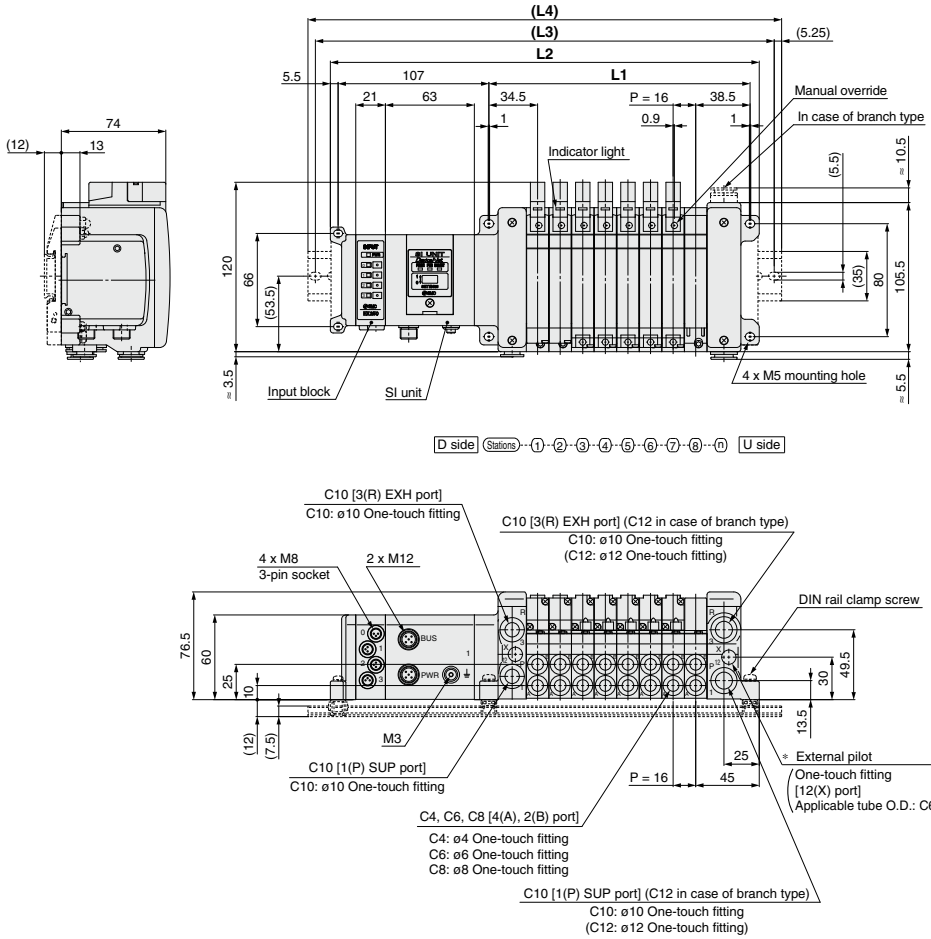

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

Formula: L1 = 16n + 57, L2 = 16n + 176 (For one input block. Add 21 mm for each additional input block.) n: Stations (Maximum 24 stations)


L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	73	89	105	121	137	153	169	185	201	217	233	249	265	281	297	313	329	345	361	377	393	409	425	441
L2	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432	448	464	480	496	512	528	544	560
L3	212.5	237.5	250	262.5	275	287.5	312.5	325	337.5	362.5	375	387.5	400	425	437.5	450	462.5	487.5	500	512.5	537.5	550	562.5	587.5
L4	223	248	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573	598


S *VQC1000 Series*

IP40 compliant

Kit (Serial transmission) For EX260 Integrated-type (For Output) Serial Transmission System IP67 compliant

VV5QC11
S kit (Serial transmission kit: EX260)

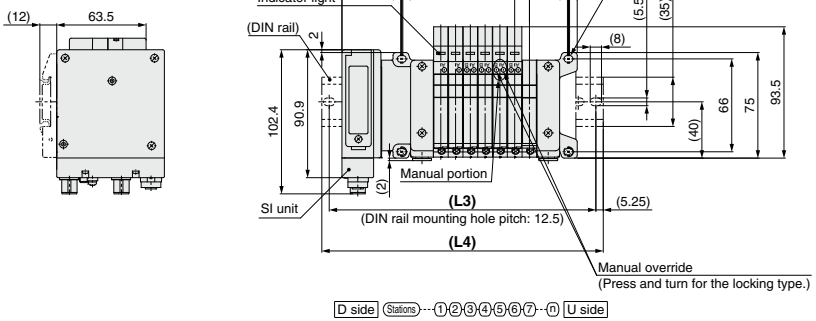

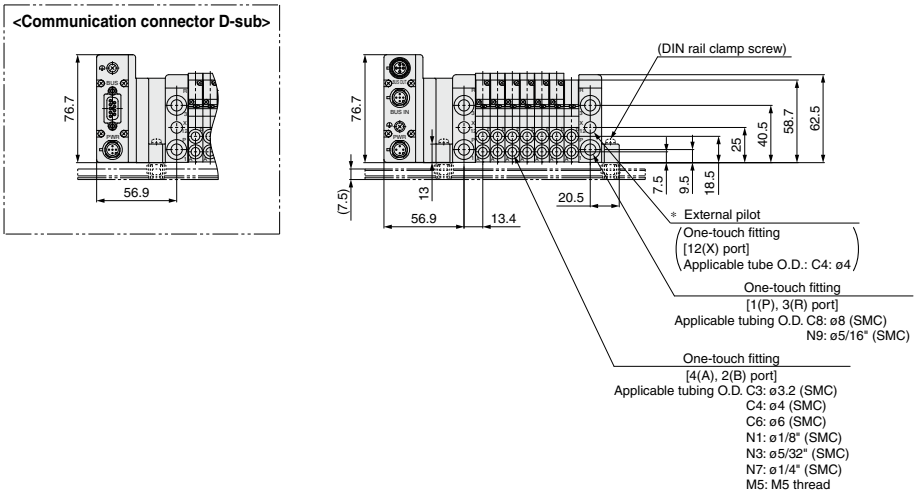

n: Stations (Maximum 24 stations)


L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	55.5	66	76.5	87	97.5	108	118.5	129	139.5	150	160.5	171	181.5	192	202.5	213	223.5	234	244.5	255	265.5	276	286.5	297
L2	104.2	114.7	125.2	135.7	146.2	156.7	167.2	177.7	188.2	198.7	209.2	219.7	230.2	240.7	251.2	261.7	272.2	282.7	293.2	303.7	314.2	324.7	335.2	345.7
L3	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5	375
L4	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5


S *VQC2000 Series*

Kit (Serial transmission) For EX260 Integrated-type (For Output) Serial Transmission System

IP40 compliant
IP67 compliant

VV5QC21
S kit (Serial transmission kit: EX260)

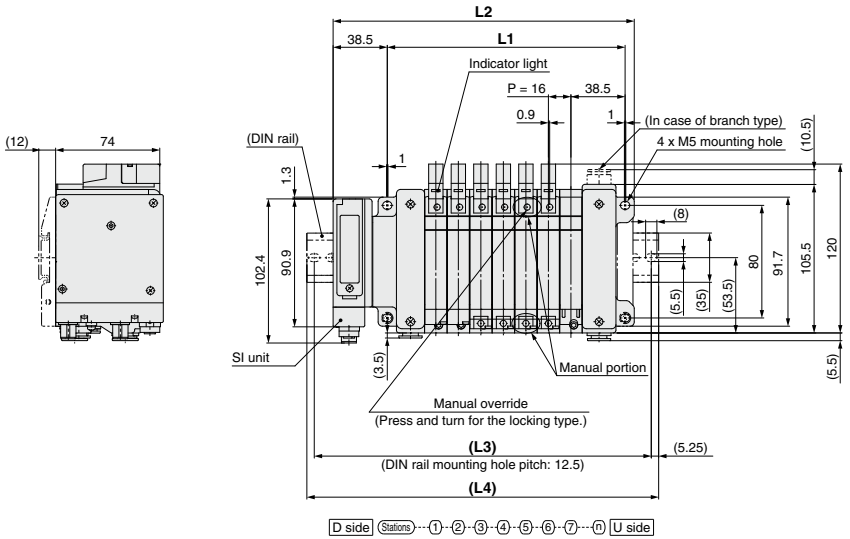

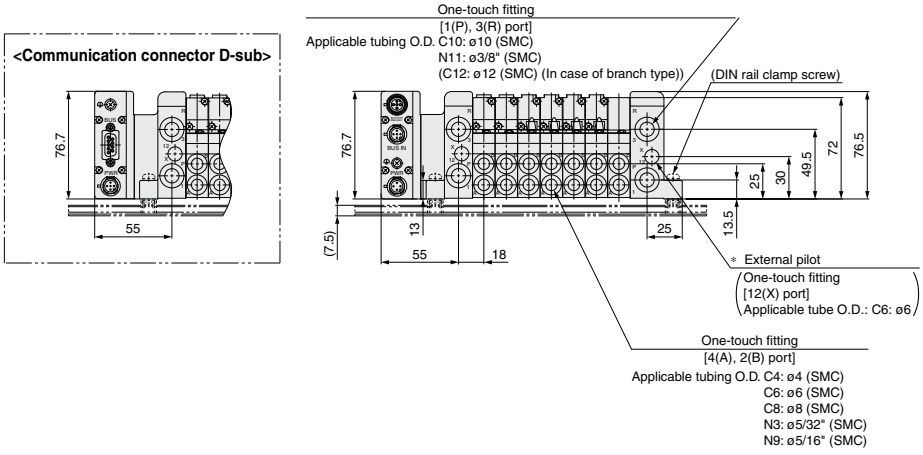


n: Stations (Maximum 24 stations)


L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	73	89	105	121	137	153	169	185	201	217	233	249	265	281	297	313	329	345	361	377	393	409	425	441
L2	118	134	150	166	182	198	214	230	246	262	278	294	310	326	342	358	374	390	406	422	438	454	470	486
L3	137.5	162.5	175	187.5	212.5	225	237.5	250	275	287.5	300	325	337.5	350	362.5	387.5	400	412.5	437.5	450	462.5	475	500	512.5
L4	148	173	185.5	198	223	235.5	248	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523

S *VQC1000/2000 Series*

Kit (Serial transmission) For EX126 Integrated-type (For Output) Serial Transmission System IP67 compliant

VV5QC11
S kit (Serial transmission kit: EX126)

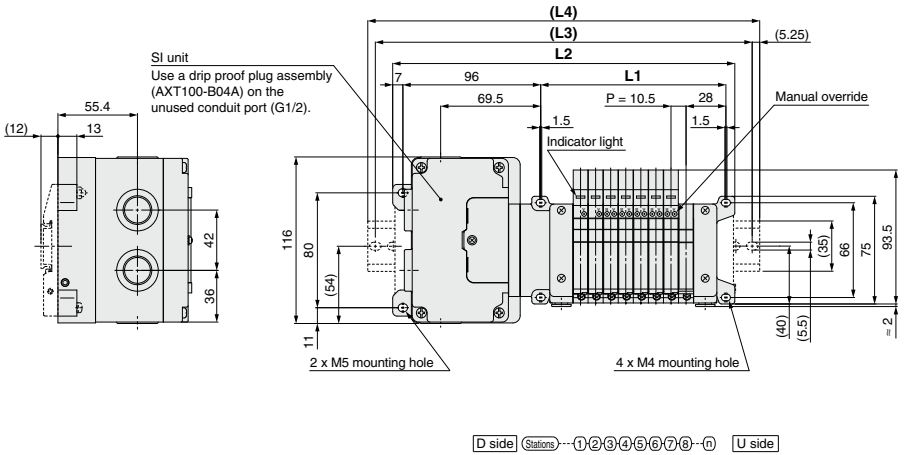

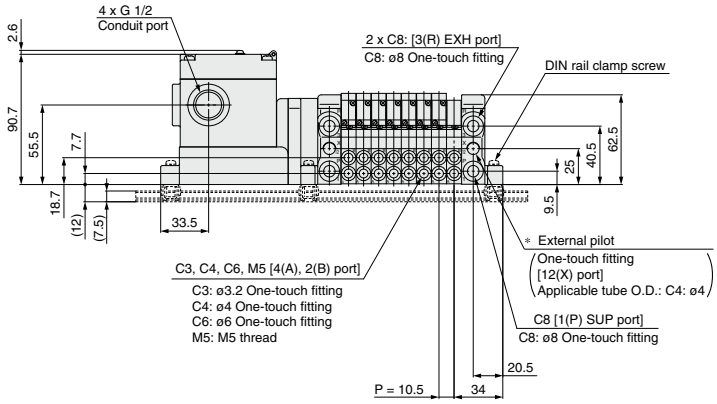

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).


Formula: L1 = 10.5n + 45, L2 = 10.5n + 154.5 n: Stations (Maximum 16 stations)


L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	55.5	66	76.5	87	97.5	108	118.5	129	139.5	150	160.5	171	181.5	192	202.5	213
L2	165	175.5	186	196.5	207	217.5	228	238.5	249	259.5	270	280.5	291	301.5	312	322.5
L3	187.5	200	212.5	225	237.5	237.5	250	262.5	275	287.5	300	300	312.5	325	337.5	350
L4	198	210.5	223	235.5	248	248	260.5	273	285.5	298	310.5	310.5	323	335.5	348	360.5

S *VQC1000/2000 Series*

Kit (Serial transmission) For EX126 Integrated-type (For Output) Serial Transmission System **IP67 compliant**

VV5QC21
S kit (Serial transmission kit: EX126)

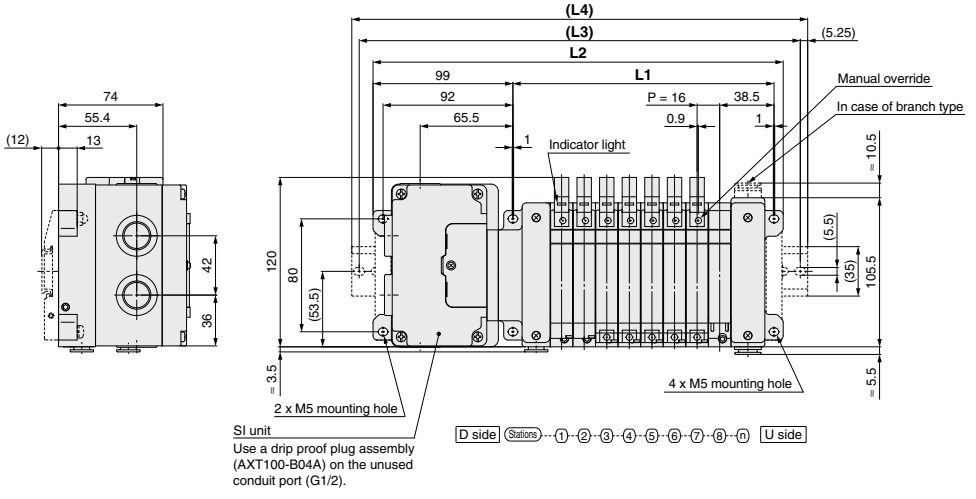

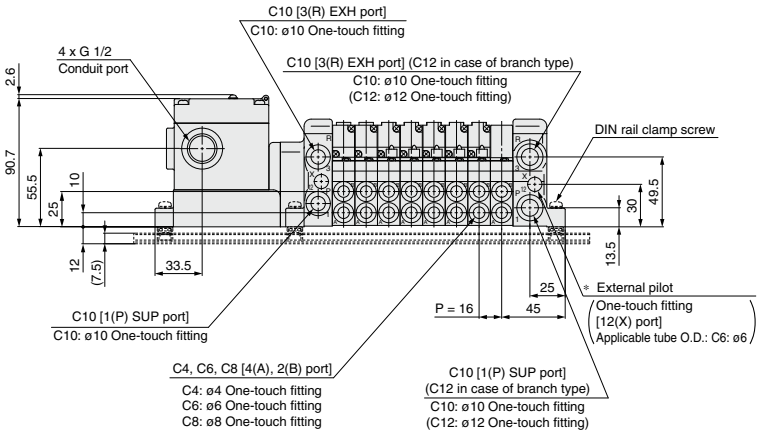

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).


Formula: L1 = 16n + 57, L2 = 16n + 163 n: Stations (Maximum 16 stations)


L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	73	89	105	121	137	153	169	185	201	217	233	249	265	281	297	313
L2	179	195	211	227	243	259	275	291	307	323	339	355	371	387	403	419
L3	200	225	237.5	250	262.5	287.5	300	312.5	337.5	371	362.5	375	400	412.5	425	450
L4	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	385.5	410.5	423	435.5	460.5

S *VQC1000 Series*
Kit [Safety Communication Protocol] EX600

IP67 compliant

VV5QC11
[Safety communication protocol] EX600
(Power supply with 7/8 inch connector)

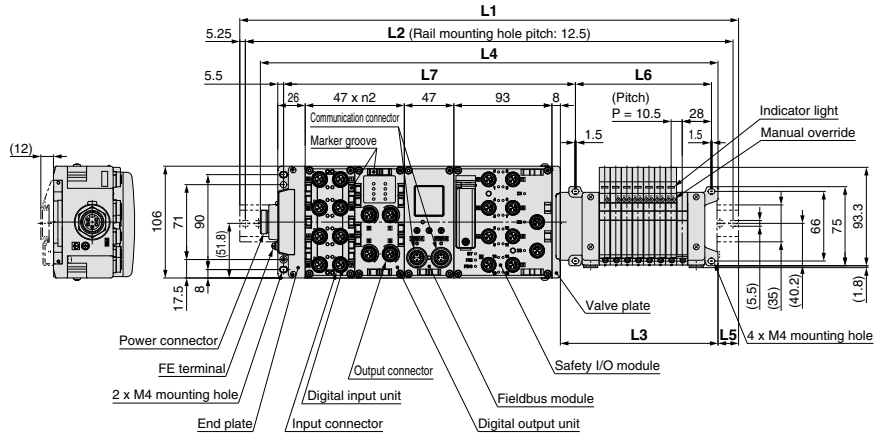

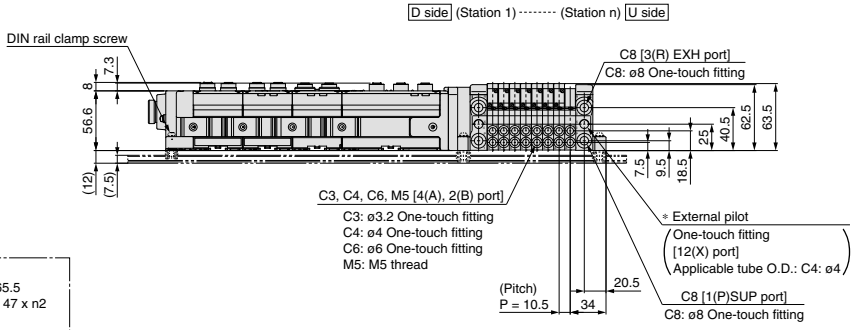

L2 = L1 - 10.5
L3 = 10.5 x n1 + 65.5
L4 = L3 + 190.5 + 47 x n2
L5 = (L1 - L4)/2
L6 = 10.5 x n1 + 45
L7 = 47 x n2 + 182.8

n1: Number of valve stations of the VQC1000
n2: Number of I/O units or input block stations

L1: DIN Rail Full Length

Valve stations (n2) / I/O unit stations (n2)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	298	310.5	323	335.5	348	360.5	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548
1	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	460.5	460.5	473	485.5	498	510.5	523	523	535.5	548	560.5	573	585.5	585.5
2	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5	598	610.5	623	623	635.5
3	448	448	460.5	473	485.5	498	510.5	523	523	535.5	548	560.5	573	585.5	585.5	598	610.5	623	635.5	648	648	660.5	673	685.5
4	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673	685.5	685.5	698	710.5	723	735.5
5	535.5	548	560.5	573	585.5	585.5	598	610.5	623	635.5	648	648	660.5	673	685.5	698	710.5	710.5	723	735.5	748	760.5	773	773
6	585.5	598	610.5	610.5	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	748	748	760.5	773	785.5	798	810.5	810.5	823
7	635.5	648	648	660.5	673	685.5	698	710.5	710.5	723	735.5	748	760.5	773	773	785.5	798	810.5	823	835.5	835.5	848	860.5	873
8	673	685.5	698	710.5	723	735.5	735.5	748	760.5	773	785.5	798	810.5	810.5	823	835.5	848	860.5	873	873	885.5	898	910.5	923
9	723	735.5	748	760.5	773	773	785.5	798	810.5	823	835.5	835.5	848	860.5	873	885.5	898	898	910.5	923	935.5	948	960.5	973

S *VQC2000* Series


Kit [Safety Communication Protocol] EX600


IP67 compliant

VV5QC21

[Safety communication protocol] EX600

(Power supply with 7/8 inch connector)

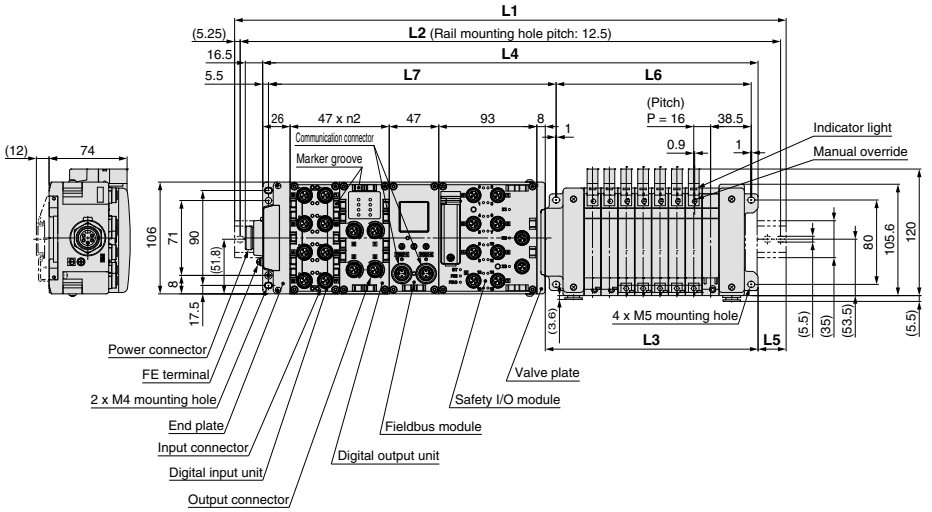

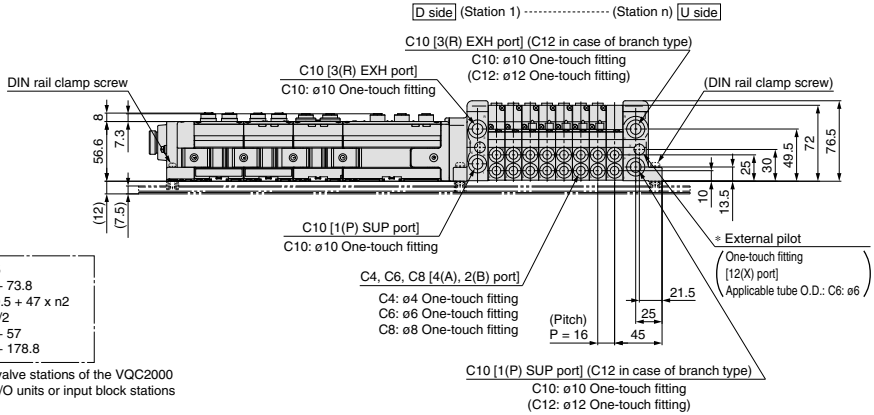

L2 = L1 - 10.5
L3 = 16 x n1 + 73.8
L4 = L3 + 190.5 + 47 x n2
L5 = (L1 - L4)/2
L6 = 16 x n1 + 57
L7 = 47 x n2 + 178.8

n1: Number of valve stations of the VQC2000
n2: Number of I/O units or input block stations


L1: DIN Rail Full Length


Valve stations (n1) / I/O unit stations (n2)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	310.5	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	498	510.5	523	535.5	560.5	573	585.5	610.5	623	635.5	648	673	685.5
1	360.5	385.5	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573	585.5	598	623	635.5	648	673	685.5	698	710.5	735.5
2	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573	585.5	598	623	635.5	648	660.5	685.5	698	710.5	735.5	748	760.5	773
3	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5	685.5	698	710.5	735.5	748	760.5	773	798	810.5	823
4	510.5	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5	723	748	760.5	773	798	810.5	823	835.5	860.5	873
5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5	723	748	760.5	773	785.5	810.5	823	835.5	860.5	873	885.5	898	923
6	598	610.5	635.5	648	660.5	673	698	710.5	723	748	760.5	773	785.5	810.5	823	835.5	860.5	873	885.5	898	923	935.5	948	960.5
7	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5	848	873	885.5	898	923	935.5	948	960.5	985.5	—	—
8	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5	848	873	885.5	898	910.5	935.5	948	960.5	985.5	—	—	—	—	—
9	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5	898	910.5	935.5	948	960.5	985.5	—	—	—	—	—	—	—	—


S VQC1000 Series
Kit (Compact Wireless Remote) EXW1

IP67 compliant

VV5QC11
S kit (Compact wireless remote: EXW1)

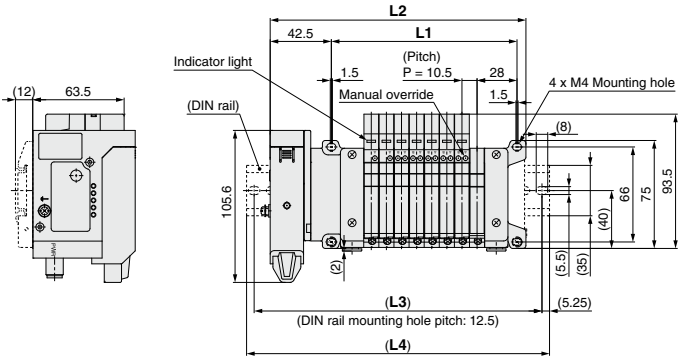

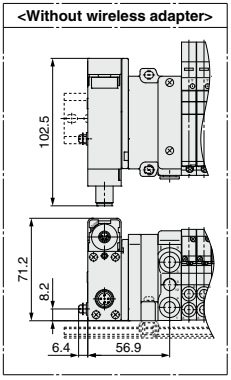

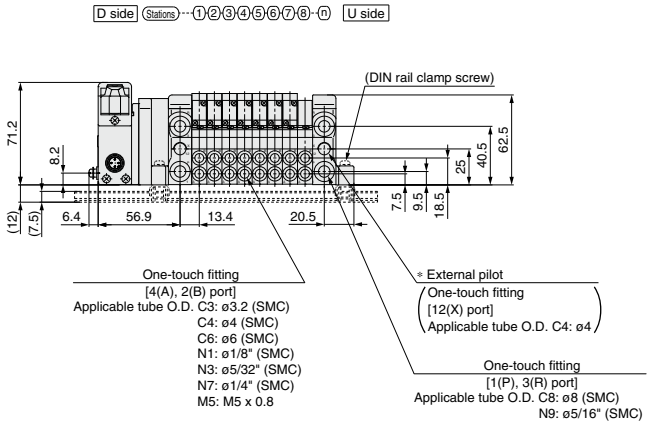


n: Stations (Maximum 24 stations)


L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	55.5	66	76.5	87	97.5	108	118.5	129	139.5	150	160.5	171	181.5	192	202.5	213	223.5	234	244.5	255	265.5	276	286.5	297
L2	104.2	114.7	125.2	135.7	146.2	156.7	167.2	177.7	188.2	198.7	209.2	219.7	230.2	240.7	251.2	261.7	272.2	282.7	293.2	303.7	314.2	324.7	335.2	345.7
L3	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5	375
L4	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5


S *VQC2000 Series*
Kit (Compact Wireless Remote) EXW1

IP67 compliant

VV5QC21
S kit (Compact wireless remote: EXW1)

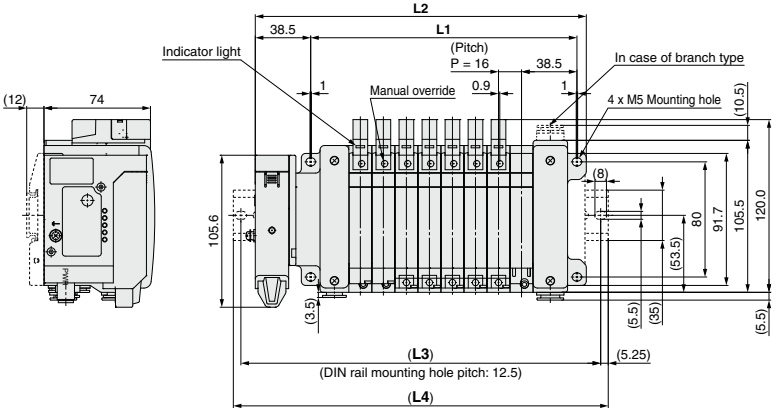

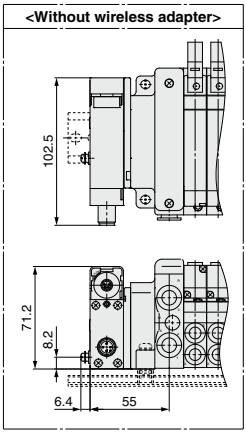

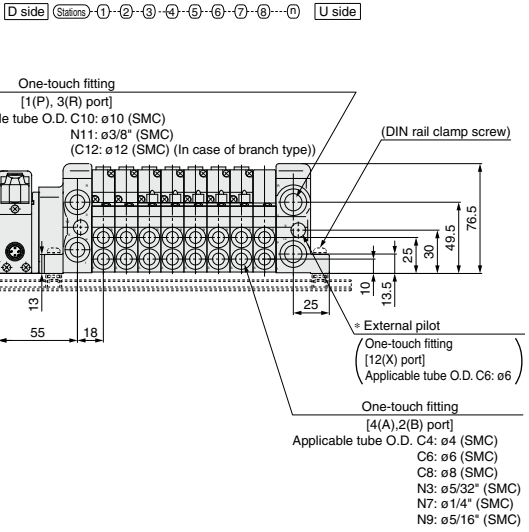


n: Stations (Maximum 24 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	73	89	105	121	137	153	169	185	201	217	233	249	265	281	297	313	329	345	361	377	393	409	425	441
L2	118	134	150	166	182	198	214	230	246	262	278	294	310	326	342	358	374	390	406	422	438	454	470	486
L3	137.5	162.5	175	187.5	212.5	225	237.5	250	275	287.5	300	325	337.5	350	362.5	387.5	400	412.5	437.5	450	462.5	475	500	512.5
L4	148	173	185.5	198	223	235.5	248	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523

F *VQC1000/2000* Series


Kit (D-sub connector) IP40 compliant

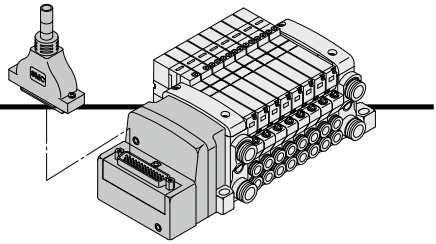

- **Using our D-sub connector for electrical connections greatly reduces labor, while it also minimizes wiring and saves space.**
- **We use a D-sub connector (25P) that conforms to MIL standards and is therefore widely compatible with many standard commercial models.**
- **Top or side entry for the connector can be changed freely, allowing for changes even after mounting, to meet any changing needs for space.**

Electrical Wiring Specifications

D-sub connector



Connector terminal no.

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types.
Mixed single and double wiring are available as an option. Refer to the below special wiring specifications (option).


Lead wire colors for D-sub connector assembly (AXT100-DS25-$^{015}_{030}_{050}$)

		Terminal no.	Polarity (–)	Polarity (+)	Lead wire color	Dot marking
Station 1	SOL.A	1	(–)	(+)	Black	None
	SOL.B	14	(–)	(+)	Yellow	Black
Station 2	SOL.A	2	(–)	(+)	Brown	None
	SOL.B	15	(–)	(+)	Pink	Black
Station 3	SOL.A	3	(–)	(+)	Red	None
	SOL.B	16	(–)	(+)	Blue	White
Station 4	SOL.A	4	(–)	(+)	Orange	None
	SOL.B	17	(–)	(+)	Purple	None
Station 5	SOL.A	5	(–)	(+)	Yellow	None
	SOL.B	18	(–)	(+)	Gray	None
Station 6	SOL.A	6	(–)	(+)	Pink	None
	SOL.B	19	(–)	(+)	Orange	Black
Station 7	SOL.A	7	(–)	(+)	Blue	None
	SOL.B	20	(–)	(+)	Red	White
Station 8	SOL.A	8	(–)	(+)	Purple	White
	SOL.B	21	(–)	(+)	Brown	White
Station 9	SOL.A	9	(–)	(+)	Gray	Black
	SOL.B	22	(–)	(+)	Pink	Red
Station 10	SOL.A	10	(–)	(+)	White	Black
	SOL.B	23	(–)	(+)	Gray	Red
Station 11	SOL.A	11	(–)	(+)	White	Red
	SOL.B	24	(–)	(+)	Black	White
Station 12	SOL.A	12	(–)	(+)	Yellow	Red
	SOL.B	25	(–)	(+)	White	None
COM.		13	(+) Positive COM spec.	(–) Note) Negative COM spec.	Orange	Red

Note) When using the negative COM specification, use valves for negative COM.

Special Wiring Specifications (Option)

(25P)




Mixed single and double wiring are available as an option. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.

Cable Assembly

AXT100-DS25-$^{015}_{030}_{050}$

D-sub connector cable assembly can be ordered with manifolds. Refer to "How to Order Manifold."

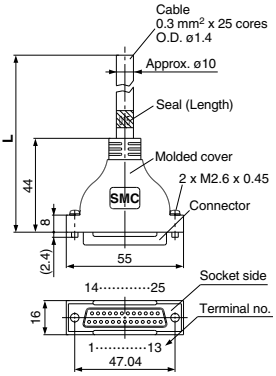

D-sub connector cable assembly

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	Cable 0.3 mm² x 25 cores
3 m	AXT100-DS25-030	
5 m	AXT100-DS25-050	

- When using a standard commercial connector, use a type 25P female connector conforming to MIL-C-24308.
- Cannot be used for transfer wiring.
- Lengths other than the above is also available. Please contact SMC for details.

Lead wire colors for D-sub connector cable assembly terminal numbers

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None

Electrical characteristics

Item	Property
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more


Note) The minimum bending radius of the D-sub connector cable is 20 mm.

Connector Manufacturers' Example

- Fujitsu Limited
- Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- HIROSE ELECTRIC CO., LTD.

F *VQC1000/2000 Series*
Kit (D-sub connector) IP40 compliant

VV5QC11

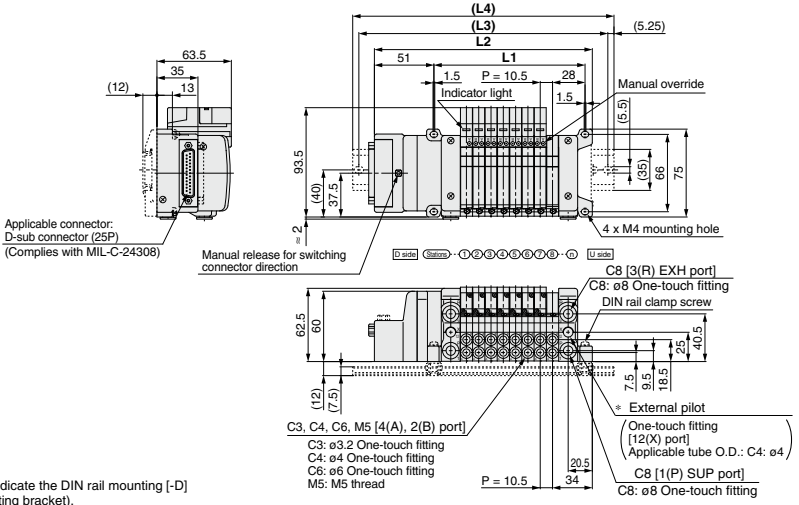


The dashed lines indicate the DIN rail mounting [-D] (with DIN rail mounting bracket).

Formula: L1 = 10.5n + 45, L2 = 10.5n + 102 n: Stations (Maximum 24 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	55.5	66	76.5	87	97.5	108	118.5	129	139.5	150	160.5	171	181.5	192	202.5	213	223.5	234	244.5	255	265.5	276	286.5	297
L2	112.5	123	133.5	144	154.5	165	175.5	186	196.5	207	217.5	228	238.5	249	259.5	270	280.5	291	301.5	312	322.5	333	343.5	354
L3	137.5	150	162.5	175	175	187.5	200	212.5	225	237.5	237.5	250	262.5	275	287.5	300	300	312.5	325	337.5	350	362.5	375	375
L4	148	160.5	173	185.5	185.5	198	210.5	223	235.5	248	248	260.5	273	285.5	298	310.5	310.5	323	335.5	348	360.5	373	385.5	385.5

VV5QC21

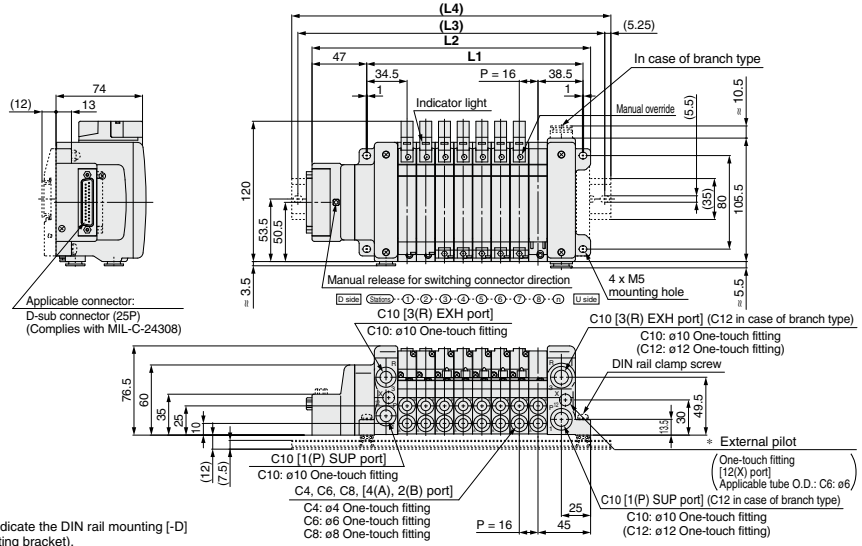


The dashed lines indicate the DIN rail mounting [-D] (with DIN rail mounting bracket).

Formula: L1 = 16n + 57, L2 = 16n + 110.5 n: Stations (Maximum 24 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	73	89	105	121	137	153	169	185	201	217	233	249	265	281	297	313	329	345	361	377	393	409	425	441
L2	126.5	142.5	158.5	174.5	190.5	206.5	222.5	238.5	254.5	270.5	286.5	302.5	318.5	334.5	350.5	366.5	382.5	398.5	414.5	430.5	446.5	462.5	478.5	494.5
L3	150	162.5	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425	437.5	450	475	487.5	500	525
L4	160.5	173	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	460.5	485.5	498	510.5	535.5

P *VQC1000/2000* Series


Kit (Flat ribbon cable) IP40 compliant

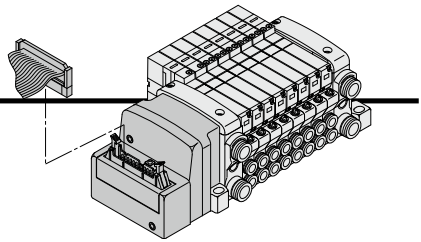


- **Using our flat ribbon cable for electrical connections greatly reduces labor, while it also minimizes wiring and saves space.**
- **We use flat ribbon cables whose connectors (26P and 20P) conform to MIL standards, and are therefore widely compatible with many standard commercial models.**
- **Top or side entry for the connector can be changed freely, allowing for changes even after mounting, to meet any changing needs for space.**

Electrical Wiring Specifications

Flat ribbon cable connector

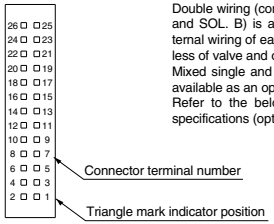

Double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station, regardless of valve and option types.
Mixed single and double wiring are available as an option.
Refer to the below special wiring specifications (option).

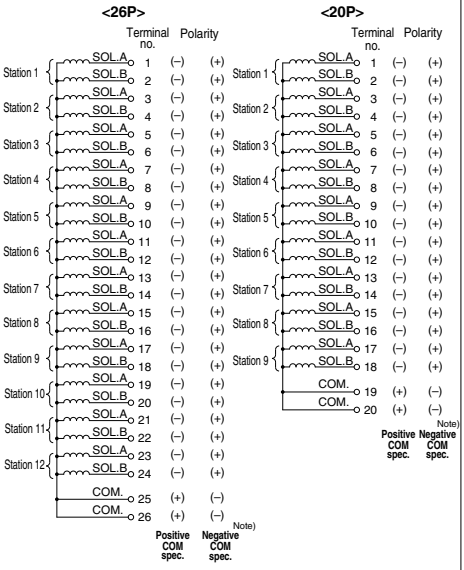


Note) When using the negative COM specification, use valves for negative COM.

Cable Assembly

AXT100-FC $\begin{matrix}20\\26\end{matrix}$ - $\begin{matrix}1\\2\\3\end{matrix}$

Type 26P flat ribbon cable connector assembly can be ordered with manifolds. Refer to "How to Order Manifold."

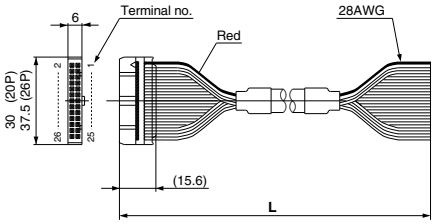

Flat ribbon cable connector assembly


Cable length (**L**)	Assembly part no.	
	26P	20P
1.5 m	AXT100-FC26-1	AXT100-FC20-1
3 m	AXT100-FC26-2	AXT100-FC20-2
5 m	AXT100-FC26-3	AXT100-FC20-3

∗ When using a standard commercial connector, use a type 26P connector conforming to MIL-C-83503 or a type 20P with strain relief.
∗ Cannot be used for transfer wiring.
∗ Lengths other than the above is also available. Please contact SMC for details.

Connector Manufacturers' Example

- HIROSE ELECTRIC CO., LTD.
- 3M Japan Limited
- Fujitsu Limited
- Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.


Special Wiring Specifications (Option)

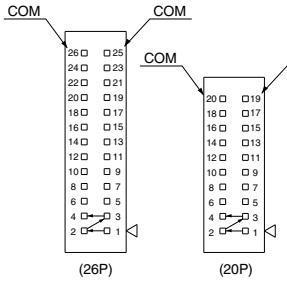

Mixed single and double wiring are available as an option. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.

P VQC1000/2000 Series
Kit (Flat ribbon cable) IP40 compliant

VV5QC11

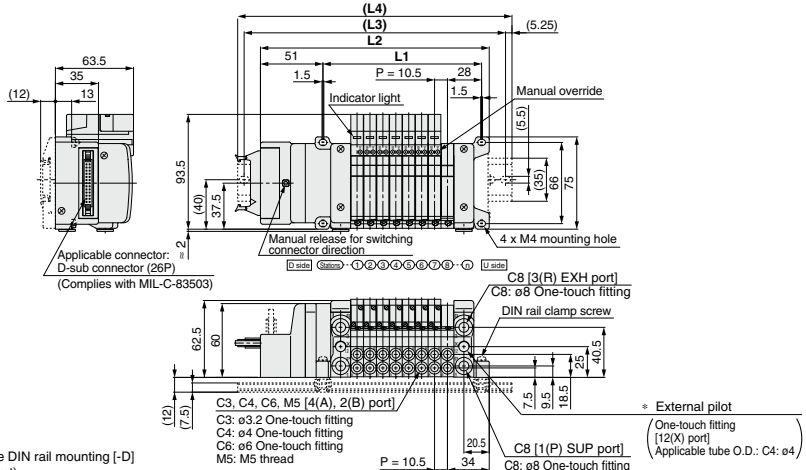


The dashed lines indicate the DIN rail mounting [-D] (with DIN rail mounting bracket).

Formula: L1 = 10.5n + 45, L2 = 10.5n + 102 n: Stations (Maximum 24 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	55.5	66	76.5	87	97.5	108	118.5	129	139.5	150	160.5	171	181.5	192	202.5	213	223.5	234	244.5	255	265.5	276	286.5	297
L2	112.5	123	133.5	144	154.5	165	175.5	186	196.5	207	217.5	228	238.5	249	259.5	270	280.5	291	301.5	312	322.5	333	343.5	354
L3	137.5	150	162.5	175	175	187.5	200	212.5	225	237.5	237.5	250	262.5	275	287.5	300	300	312.5	325	337.5	350	362.5	375	375
L4	148	160.5	173	185.5	185.5	198	210.5	223	235.5	248	248	260.5	273	285.5	298	310.5	310.5	323	335.5	348	360.5	373	385.5	385.5

VV5QC21

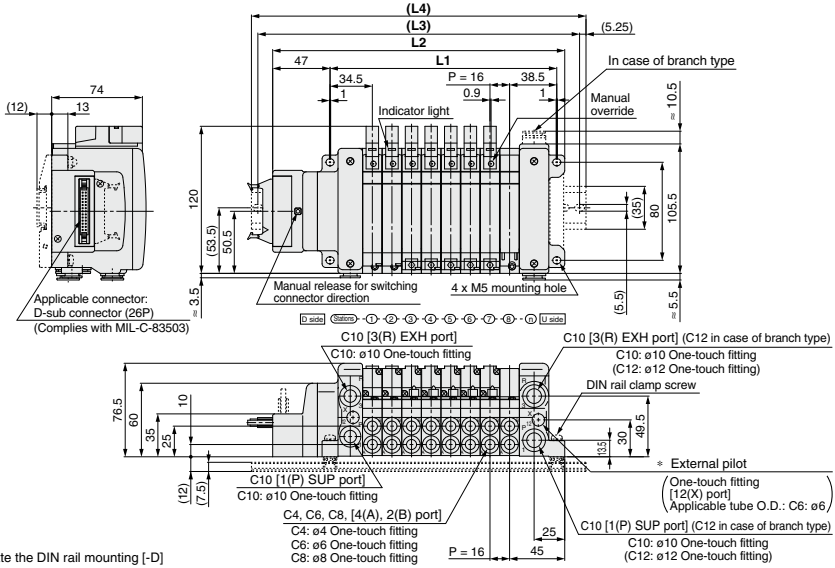


The dashed lines indicate the DIN rail mounting [-D] (with DIN rail mounting bracket).

Formula: L1 = 16n + 57, L2 = 16n + 110.5 n: Stations (Maximum 24 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	73	89	105	121	137	153	169	185	201	217	233	249	265	281	297	313	329	345	361	377	393	409	425	441
L2	126.5	142.5	158.5	174.5	190.5	206.5	222.5	238.5	254.5	270.5	286.5	302.5	318.5	334.5	350.5	366.5	382.5	398.5	414.5	430.5	446.5	462.5	478.5	494.5
L3	150	162.5	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425	437.5	450	475	487.5	500	525
L4	160.5	173	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	460.5	485.5	498	510.5	535.5

T *VQC1000/2000* Series


Kit (Terminal block box) **IP67 compliant**

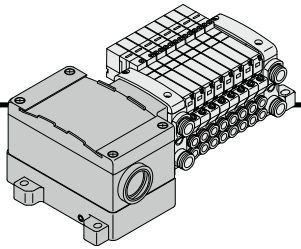


- **This kit has a small terminal block inside a junction box. The electrical entry port of a G 3/4 permits connection of conduit fittings.**

Terminal Block Connection

Step 1. Removing the terminal block cover
Loosen the 4 mounting screws (M4) and remove the terminal block cover.

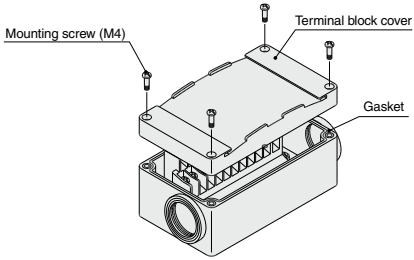

Step 2. The diagram below shows the terminal block wiring. All stations are provided with double wiring regardless of the valves which are mounted.
Connect each wire to the power supply side, according to the markings provided inside the terminal block.

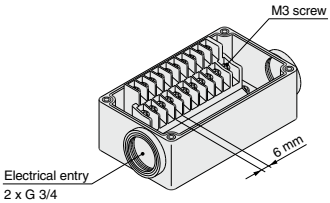


Step 3. Mounting the terminal block cover
Securely tighten the screws to the torque shown in the table below, after confirming that the gasket is installed correctly.


Proper tightening torque (N·m)
0.7 to 1.2

- Applicable crimped terminal: 1.25-3S,1.25Y-3,1.25Y-3N,1.25Y-3.5
- Name plate: VVQ5000-N-T
- Drip-proof plug assembly (for G 3/4): AXT100-B06A

Electrical Wiring Specifications (IP67 compatible)

Standard wiring



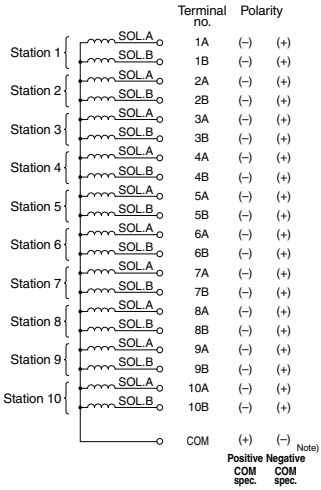

Double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station, regardless of valve and option types.
Mixed single and double wiring are available as an option.

Note) When using the negative COM specification, use valves for negative COM.

Special Wiring Specifications (Option)


Mixed single and double wiring are available as an option. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 20.

1. How to Order

Indicate option symbol "-K" in the manifold part number and be sure to specify station positions for single or double wiring on the manifold specification sheet.


2. Wiring specifications

Connector terminal numbers are connected from solenoid station 1 on the A side in the order indicated by the arrows without skipping any terminal numbers.



T *VQC1000/2000 Series*
Kit (Terminal block box) IP67 compliant

VV5QC11

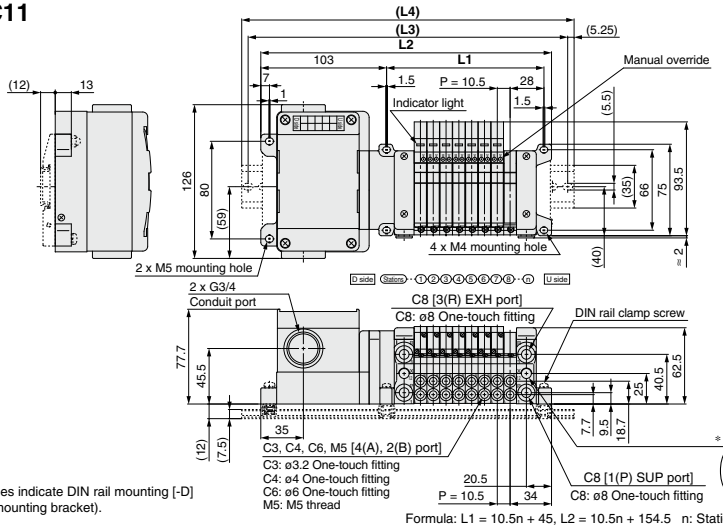


The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

Formula: L1 = 10.5n + 45, L2 = 10.5n + 154.5 n: Stations (Maximum 20 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	55.5	66	76.5	87	97.5	108	118.5	129	139.5	150	160.5	171	181.5	192	202.5	213	223.5	234	244.5	255
L2	165	175.5	186	196.5	207	217.5	228	238.5	249	259.5	270	280.5	291	301.5	312	322.5	333	343.5	354	364.5
L3	187.5	200	212.5	225	237.5	237.5	250	262.5	275	287.5	300	300	312.5	325	337.5	350	362.5	375	375	387.5
L4	198	210.5	223	235.5	248	248	260.5	273	285.5	298	310.5	310.5	323	335.5	348	360.5	373	385.5	385.5	398

VV5QC21

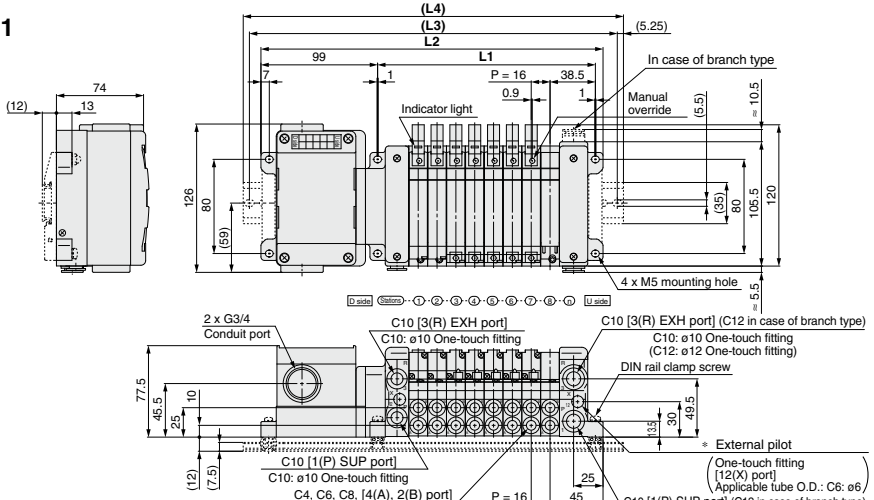


The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

Formula: L1 = 16n + 57, L2 = 16n + 163 n: Stations (Maximum 20 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	73	89	105	121	137	153	169	185	201	217	233	249	265	281	297	313	329	345	361	377
L2	179	195	211	227	243	259	275	291	307	323	339	355	371	387	403	419	435	451	467	483
L3	200	225	237.5	250	262.5	287.5	300	312.5	337.5	371	362.5	375	400	412.5	425	450	462.5	496	487.5	512.5
L4	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	385.5	410.5	423	435.5	460.5	473	485.5	498	523

L *VQC1000/2000* Series


Kit (Lead wire) IP67 compliant

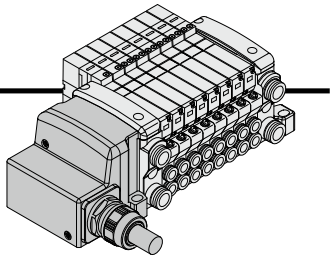

- **Direct electrical entry type**
- **IP67 enclosure is available with use of cables with sheath and waterproof connectors.**

Electrical Wiring Specifications

Lead wire specifications

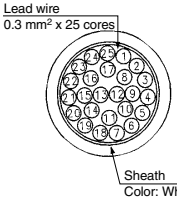

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types.
Mixed single and double wiring are available as an option. Refer to the below special wiring specifications (option).

		Terminal no.	Polarity (–)	Polarity (+)	Lead wire color	Dot marking
Station 1	SOL.A	1	(–)	(+)	Black	None
	SOL.B	14	(–)	(+)	Yellow	Black
Station 2	SOL.A	2	(–)	(+)	Brown	None
	SOL.B	15	(–)	(+)	Pink	Black
Station 3	SOL.A	3	(–)	(+)	Red	None
	SOL.B	16	(–)	(+)	Blue	White
Station 4	SOL.A	4	(–)	(+)	Orange	None
	SOL.B	17	(–)	(+)	Purple	None
Station 5	SOL.A	5	(–)	(+)	Yellow	None
	SOL.B	18	(–)	(+)	Gray	None
Station 6	SOL.A	6	(–)	(+)	Pink	None
	SOL.B	19	(–)	(+)	Orange	Black
Station 7	SOL.A	7	(–)	(+)	Blue	None
	SOL.B	20	(–)	(+)	Red	White
Station 8	SOL.A	8	(–)	(+)	Purple	White
	SOL.B	21	(–)	(+)	Brown	White
Station 9	SOL.A	9	(–)	(+)	Gray	Black
	SOL.B	22	(–)	(+)	Pink	Red
Station 10	SOL.A	10	(–)	(+)	White	Black
	SOL.B	23	(–)	(+)	Gray	Red
Station 11	SOL.A	11	(–)	(+)	White	Red
	SOL.B	24	(–)	(+)	Black	White
Station 12	SOL.A	12	(–)	(+)	Yellow	Red
	SOL.B	25	(–)	(+)	White	None
COM.		13	(+) Positive COM spec.	(–) Negative COM spec. Note)	Orange	Red

Note) When using the negative COM specification, use valves for negative COM.

Lead wire length

VV5QC11−08C6LD[0]

Lead wire length

0	0.6 m
1	1.5 m
2	3.0 m

Electrical characteristics

Item	Property
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more


Note) Cannot be used for transfer wiring. The minimum bending radius of the cable is 20 mm.

Special Wiring Specifications (Option)

Mixed single and double wiring are available as an option. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.

L *VQC1000/2000 Series*
Kit (Lead wire) IP67 compliant

VV5QC11

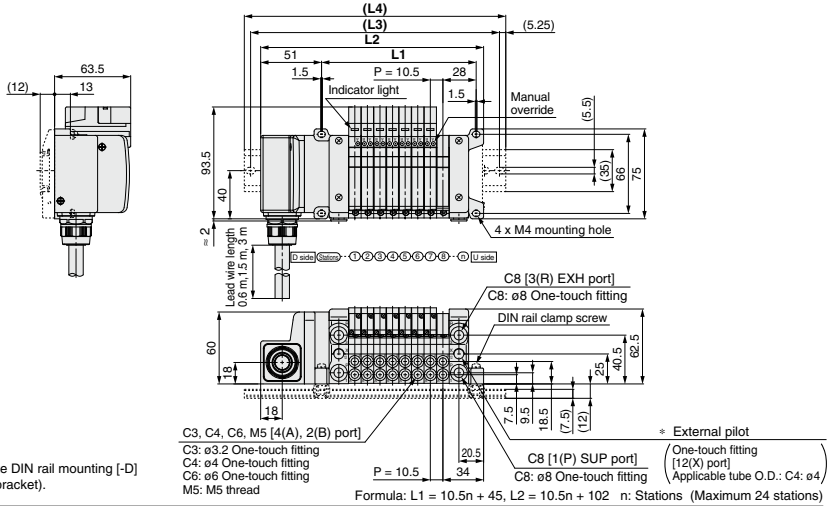


The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

Formula: L1 = 10.5n + 45, L2 = 10.5n + 102 n: Stations (Maximum 24 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	55.5	66	76.5	87	97.5	108	118.5	129	139.5	150	160.5	171	181.5	192	202.5	213	223.5	234	244.5	255	265.5	276	286.5	297
L2	112.5	123	133.5	144	154.5	165	175.5	186	196.5	207	217.5	228	238.5	249	259.5	270	280.5	291	301.5	312	322.5	333	343.5	354
L3	137.5	150	162.5	175	175	187.5	200	212.5	225	237.5	237.5	250	262.5	275	287.5	300	300	312.5	325	337.5	350	362.5	375	375
L4	148	160.5	173	185.5	185.5	198	210.5	223	235.5	248	248	260.5	273	285.5	298	310.5	310.5	323	335.5	348	360.5	373	385.5	385.5

VV5QC21

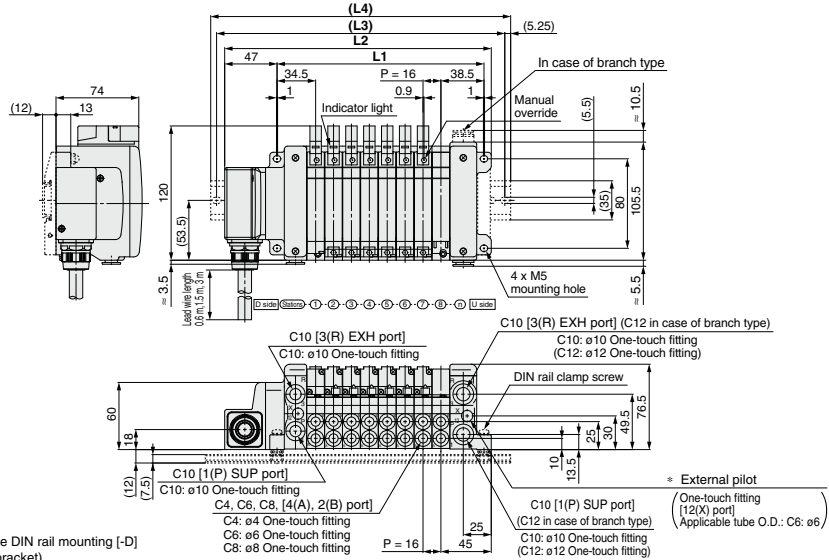


The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

Formula: L1 = 16n + 57, L2 = 16n + 110.5 n: Stations (Maximum 24 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	73	89	105	121	137	153	169	185	201	217	233	249	265	281	297	313	329	345	361	377	393	409	425	441
L2	126.5	142.5	158.5	174.5	190.5	206.5	222.5	238.5	254.5	270.5	286.5	302.5	318.5	334.5	350.5	366.5	382.5	398.5	414.5	430.5	446.5	462.5	478.5	494.5
L3	150	162.5	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425	437.5	450	475	487.5	500	525
L4	160.5	173	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	460.5	485.5	498	510.5	535.5

M *VQC1000/2000* Series


Kit (Circular connector) IP67 compliant

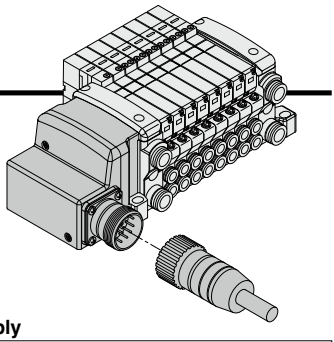


- **Use of circular connectors helps streamline wiring procedure to save labor.**
- **IP67 enclosure is available with use of waterproof circular connectors.**

Electrical Wiring Specifications

Circular connector

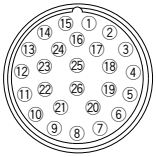

Double wiring (connected to SOL.A and SOL.B) is used for the internal wiring of each station, regardless of valve and option types. Mixed single and double wiring are available as an option. Refer to the below special wiring specifications (option).

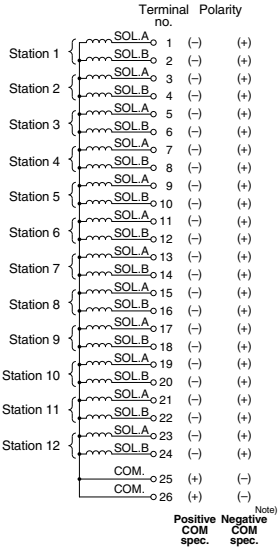

Note) When using the negative COM specification, use valves for negative COM.


Special Wiring Specifications (Option)

Mixed single and double wiring are available as an option. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.

Cable Assembly

AXT100-MC26- 015 / 030 / 050

(Type 26P circular connector cable assembly can be ordered with manifolds. Refer to "How to Order Manifold.")

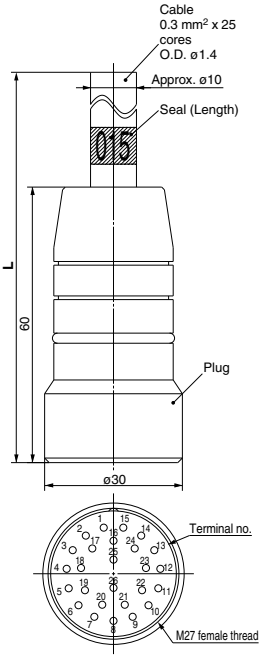

Lead wire colors for circular connector cable assembly terminal numbers

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None
26	White	None

Note) Terminal no. 26 is connected to 25 inside the connector.

Circular connector cable assembly

Cable length (**L**)	Assembly part no.
	26P
1.5 m	AXT100-MC26-015
3 m	AXT100-MC26-030
5 m	AXT100-MC26-050

∗ Cannot be used for transfer wiring.
∗ Lengths other than the above is also available. Please contact SMC for details.


Electrical characteristics

Item	Property
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more

Note) The minimum bending radius of the circular connector cable is 20 mm.

M *VQC1000/2000 Series*
Kit (Circular connector) IP67 compliant

VV5QC11

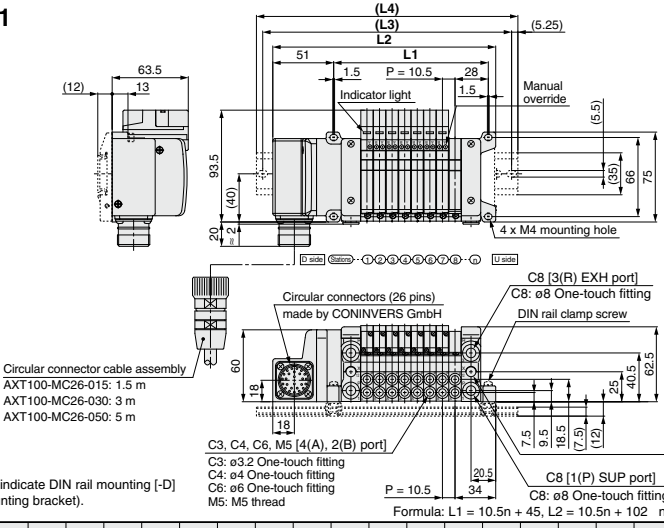


The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

Formula: L1 = 10.5n + 45, L2 = 10.5n + 102 n: Stations (Maximum 24 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	55.5	66	76.5	87	97.5	108	118.5	129	139.5	150	160.5	171	181.5	192	202.5	213	223.5	234	244.5	255	265.5	276	286.5	297
L2	112.5	123	133.5	144	154.5	165	175.5	186	196.5	207	217.5	228	238.5	249	259.5	270	280.5	291	301.5	312	322.5	333	343.5	354
L3	137.5	150	162.5	175	175	187.5	200	212.5	225	237.5	237.5	250	262.5	275	287.5	300	300	312.5	325	337.5	350	362.5	375	375
L4	148	160.5	173	185.5	185.5	198	210.5	223	235.5	248	248	260.5	273	285.5	298	310.5	310.5	323	335.5	348	360.5	373	385.5	385.5

VV5QC21

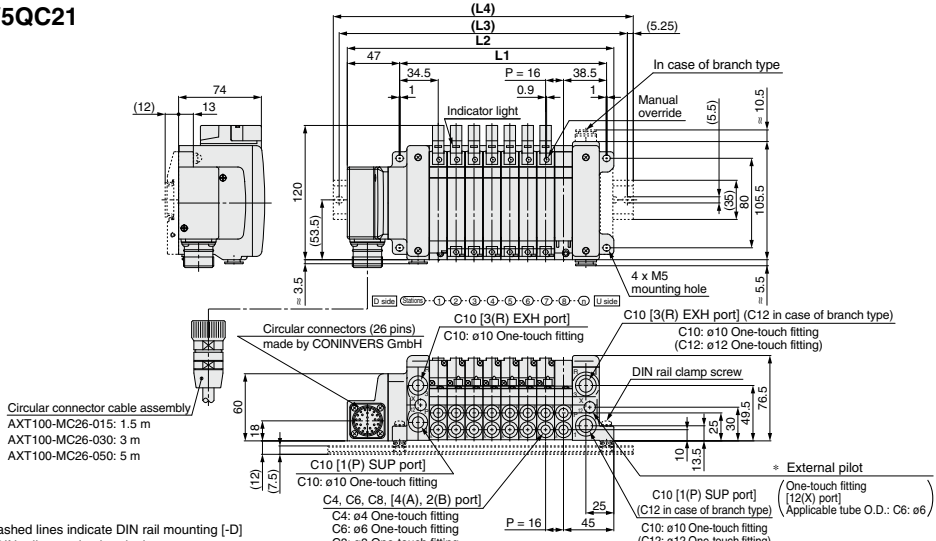

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).


Formula: L1 = 16n + 57, L2 = 16n + 110.5 n: Stations (Maximum 24 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	73	89	105	121	137	153	169	185	201	217	233	249	265	281	297	313	329	345	361	377	393	409	425	441
L2	126.5	142.5	158.5	174.5	190.5	206.5	222.5	238.5	254.5	270.5	286.5	302.5	318.5	334.5	350.5	366.5	382.5	398.5	414.5	430.5	446.5	462.5	478.5	494.5
L3	150	162.5	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425	437.5	450	475	487.5	500	525
L4	160.5	173	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	460.5	485.5	498	510.5	535.5


Construction

VQC1000 Plug-in Unit: Main Parts/Replacement Parts

Metal seal

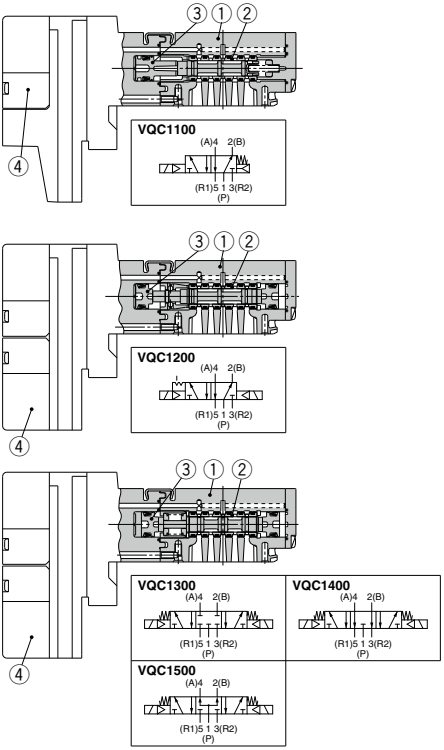

Rubber seal

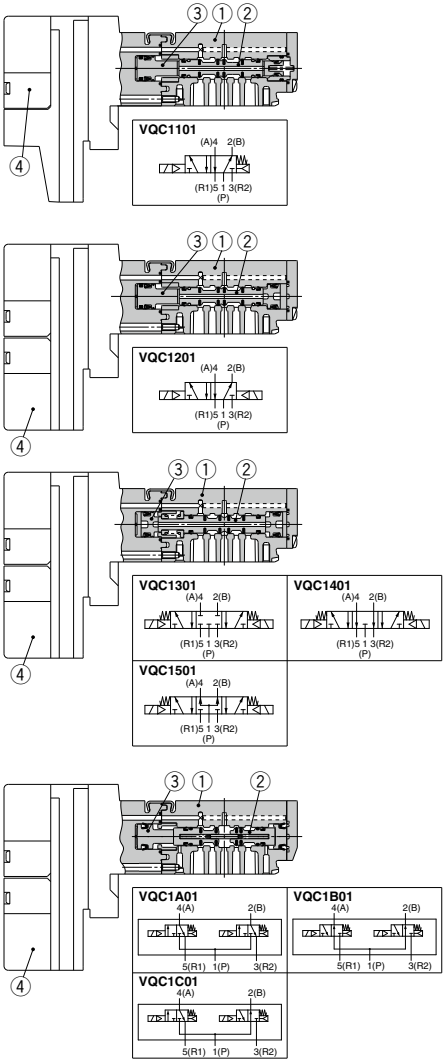

Component Parts

No.	Description	Material	Note
1	**Body**	Zinc die-casted	
2	**Spool/Sleeve**	Stainless steel	
3	**Piston**	Resin	
4	**Pilot valve assembly**	—	

Note) Refer to page 1133 for "How to Order Pilot Valve Assembly."


Component Parts

No.	Description	Material	Note
1	**Body**	Zinc die-casted	
2	**Spool valve**	Aluminum, HNBR	
3	**Piston**	Resin	
4	**Pilot valve assembly**	—	


Note) Refer to page 1133 for "How to Order Pilot Valve Assembly."

VQC2000 Plug-in Unit: Main Parts/Replacement Parts

Metal seal

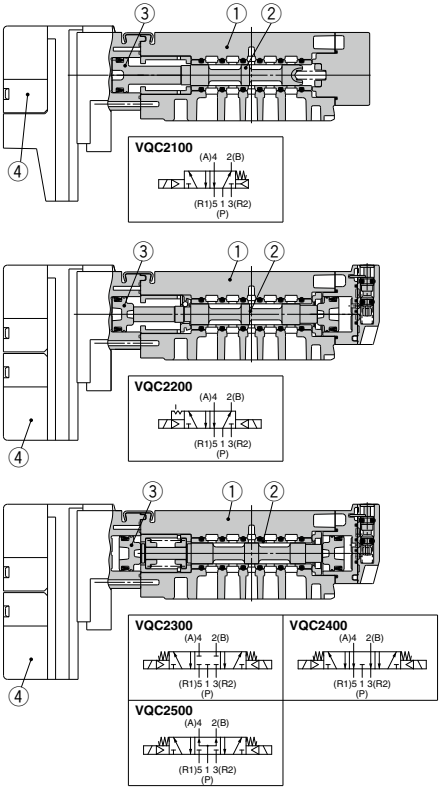

Rubber seal

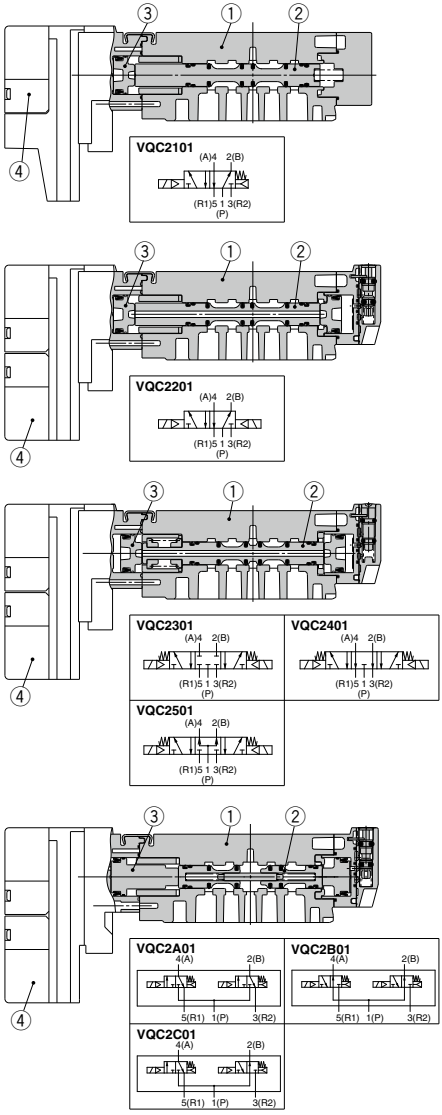

Component Parts

No.	Description	Material	Note
1	**Body**	Zinc die-casted	
2	**Spool/Sleeve**	Stainless steel	
3	**Piston**	Resin	
4	**Pilot valve assembly**	—	


Note) Refer to page 1133 for "How to Order Pilot Valve Assembly."

Component Parts

No.	Description	Material	Note
1	**Body**	Zinc die-casted	
2	**Spool valve**	Aluminum, HNBR	
3	**Piston**	Resin	
4	**Pilot valve assembly**	—	

Note) Refer to page 1133 for "How to Order Pilot Valve Assembly."

Exploded View of Manifold

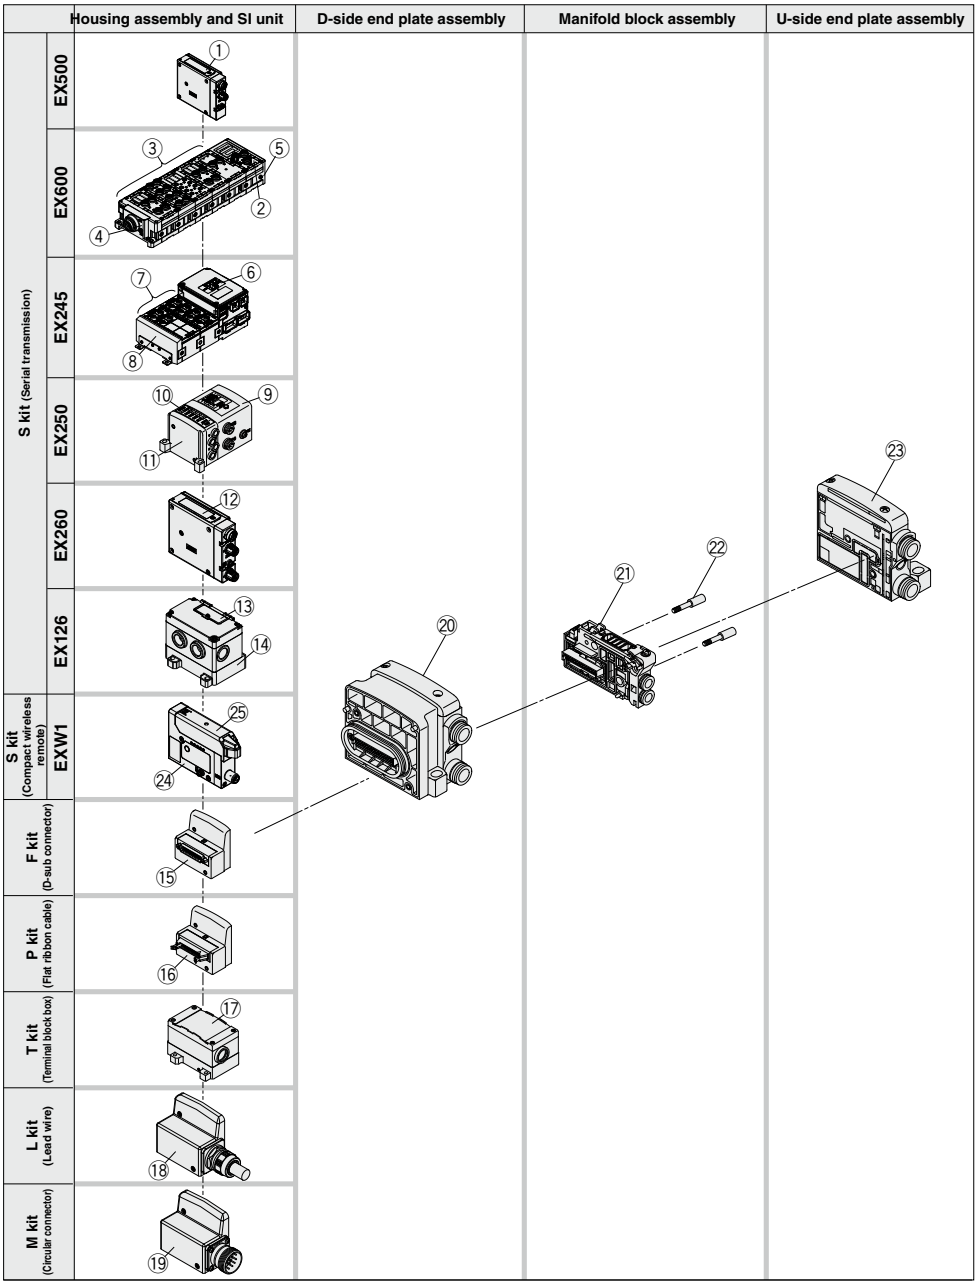

Manifold Assembly Part No.

Housing Assembly and SI Unit/Input Block

No.	Description	Part no.	Note
①	**SI unit**	**EX500-S103**	Gateway decentralized system 2 (128 points), PNP (Negative common)
②	**SI unit**	**EX600-SDN1A**	DeviceNet® PNP (Negative common)
		EX600-SDN2A	DeviceNet® NPN (Positive common)
		EX600-SMJ1	CC-Link PNP (Negative common)
		EX600-SMJ2	CC-Link NPN (Positive common)
		EX600-SPR1A	PROFIBUS DP PNP (Negative common)
		EX600-SPR2A	PROFIBUS DP NPN (Positive common)
		EX600-SEN7	EtherNet/IP™ (IO-Link unit) PNP (Negative common)
		EX600-SEN8	EtherNet/IP™ (IO-Link unit) NPN (Positive common)
		EX600-SEC3	EtherCAT (IO-Link unit) PNP (Negative common)
		EX600-SEC4	EtherCAT (IO-Link unit) NPN (Positive common)
		EX600-SPN3	PROFINET (IO-Link unit) PNP (Negative common)
		EX600-SPN4	PROFINET (IO-Link unit) NPN (Positive common)
		EX600-SPN31	PROFINET (OPC UA, IO-Link unit) PNP (Negative common)
		EX600-WSV1 Note 1)	Wireless remote module PNP (Negative common)
		EX600-WSV2 Note 1)	Wireless remote module NPN (Positive common)
③	**Digital input unit**	**EX600-DXNB**	NPN input, M12 connector, 5 pins (4 pcs.), 8 inputs
		EX600-DXPB	PNP input, M12 connector, 5 pins (4 pcs.), 8 inputs
		EX600-DXNC	NPN input, M8 connector, 3 pins (8 pcs.), 8 inputs
		EX600-DXNC1	NPN input, M8 connector, 3 pins (8 pcs.), 8 inputs, with open circuit detection
		EX600-DXPC	PNP input, M8 connector, 3 pins (8 pcs.), 8 inputs
		EX600-DXPC1	PNP input, M8 connector, 3 pins (8 pcs.), 8 inputs, with open circuit detection
		EX600-DXND	NPN input, M12 connector, 5 pins (8 pcs.), 16 inputs
		EX600-DXPD	PNP input, M12 connector, 5 pins (8 pcs.), 16 inputs
		EX600-DXNE	NPN input, D-sub connector, 25 pins, 16 inputs
		EX600-DXPE	PNP input, D-sub connector, 25 pins, 16 inputs
		EX600-DXNF	NPN input, Spring type terminal box, 32 pins, 16 inputs
		EX600-DXPF	PNP input, Spring type terminal box, 32 pins, 16 inputs
	Digital output unit	**EX600-DYNB**	NPN output, M12 connector, 5 pins (4 pcs.), 8 outputs
		EX600-DYPB	PNP output, M12 connector, 5 pins (4 pcs.), 8 outputs
		EX600-DYNE	NPN output, D-sub connector, 25 pins, 16 outputs
		EX600-DYPE	PNP output, D-sub connector, 25 pins, 16 outputs
		EX600-DYNF	NPN output, Spring type terminal box, 32 pins, 16 outputs
		EX600-DYPF	NPN output, Spring type terminal box, 32 pins, 16 outputs
	Digital input/output unit	**EX600-DMNE**	NPN input/output, D-sub connector, 25 pins, 8 inputs/outputs
		EX600-DMPE	PNP input/output, D-sub connector, 25 pins, 8 inputs/outputs
		EX600-DMNF	NPN input/output, Spring type terminal box, 32 pins, 8 inputs/outputs
		EX600-DMPF	PNP input/output, Spring type terminal box, 32 pins, 8 inputs/outputs
	Analog input unit	**EX600-AXA**	M12 connector, 5 pins (2 pcs.), 2-channel input
	Analog output unit	**EX600-AYA**	M12 connector, 5 pins (2 pcs.), 2-channel output
	Analog input/output unit	**EX600-AMB**	M12 connector, 5 pins (4 pcs.), 2-channel inputs/outputs
	IO-Link unit Note 2)	**EX600-LAB1**	Port class A, M12 connector, 5 pins (4 pcs.)
		EX600-LBB1	Port class B, M12 connector, 5 pins (4 pcs.)
④	**End plate**	**EX600-ED2**	M12 power supply connector, B-coded
		EX600-ED2-2	M12 power supply connector, B-coded, with DIN rail mounting bracket
		EX600-ED3	7/8 inch power supply connector
		EX600-ED3-2	7/8 inch power supply connector, with DIN rail mounting bracket
		EX600-ED4	M12 power supply connector IN/OUT, A-coded, Pin arrangement 1
		EX600-ED4-2	M12 power supply connector IN/OUT, A-coded, Pin arrangement 1, with DIN rail mounting bracket
		EX600-ED5	M12 power supply connector IN/OUT, A-coded, Pin arrangement 2
		EX600-ED5-2	M12 power supply connector IN/OUT, A-coded, Pin arrangement 2, with DIN rail mounting bracket
⑤	**Valve plate**	**EX600-ZMV1**	Enclosed parts: round head screws (M4 x 6) 2 pcs., round head screws (M3 x 8) 4 pcs.

Note 1) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.
Note 2) The compatible SI unit models are as shown below.
· PROFINET compatible: EX600-SPN3/EX600-SPN4/EX600-SPN31
· EtherNet/IP™ compatible: EX600-SEN7/EX600-SEN8
· EtherCAT compatible: EX600-SEC3/EX600-SEC4
Note 3) Refer to the EX600 catalog for details on the safety communication fieldbus system.

Manifold Assembly Part No.

Housing Assembly and SI Unit/Input Block

No.	Description	Part no.	Note
⑥	**SI unit**	**EX245-SPN1A**	Communication connector: Push Pull connector (SCRJ): 2 pcs./Power supply connector: Push Pull connector (24 V): 2 pcs.
		EX245-SPN2A	Communication connector: Push Pull connector (RJ45): 2 pcs./Power supply connector: Push Pull connector (24 V): 2 pcs.
		EX245-SPN3A	Communication connector: M12 connector (4-pin, Socket, D-coded): 2 pcs./Power supply connector: 7/8 inch connector (5-pin, Plug): 1 pc. 7/8 inch connector (5-pin, Socket): 1 pc.
⑦	**Digital input module**	**EX245-DX1**	Digital input (16 inputs)
	Digital output module	**EX245-DY1**	Digital output (8 outputs)
	IO-Link module Note 1)	**EX245-LA1**	Port class A
		EX245-LB1	Port class B
⑧	**End plate**	**EX245-EA2-5**	
⑨	**SI unit**	**EX250-SAS3**	AS-Interface, 8 in/8 out, 2 power supply systems PNP (Negative common)
		EX250-SAS5	AS-Interface, 4 in/4 out, 2 power supply systems PNP (Negative common)
		EX250-SAS7	AS-Interface, 8 in/8 out, 1 power supply system PNP (Negative common)
		EX250-SAS9	AS-Interface, 4 in/4 out, 1 power supply system PNP (Negative common)
		EX250-SDN1	DeviceNet® PNP (Negative common)
		EX250-SEN1	EtherNet/IP™ PNP (Negative common)
⑩	**Input block**	**EX250-IE1**	M12, 2 inputs
		EX250-IE2	M12, 4 inputs
		EX250-IE3	M8, 4 inputs
⑪	**End plate assembly**	**EX250-EA1**	Standard
		EX250-EA2	For DIN rail mounting
⑫	**SI unit**	**EX260-SDN1**	DeviceNet®, M12 connector, 32 outputs PNP (Negative common)
		EX260-SDN2	DeviceNet®, M12 connector, 32 outputs NPN (Positive common)
		EX260-SDN3	DeviceNet®, M12 connector, 16 outputs PNP (Negative common)
		EX260-SDN4	DeviceNet®, M12 connector, 16 outputs NPN (Positive common)
		EX260-SPR1	PROFIBUS DP, M12 connector, 32 outputs PNP (Negative common)
		EX260-SPR2	PROFIBUS DP, M12 connector, 32 outputs NPN (Positive common)
		EX260-SPR3	PROFIBUS DP, M12 connector, 16 outputs PNP (Negative common)
		EX260-SPR4	PROFIBUS DP, M12 connector, 16 outputs NPN (Positive common)
		EX260-SPR5	PROFIBUS DP, D-sub connector, 32 outputs PNP (Negative common)
		EX260-SPR6	PROFIBUS DP, D-sub connector, 32 outputs NPN (Positive common)
		EX260-SPR7	PROFIBUS DP, D-sub connector, 16 outputs PNP (Negative common)
		EX260-SPR8	PROFIBUS DP, D-sub connector, 16 outputs NPN (Positive common)
		EX260-SMJ1	CC-Link, M12 connector, 32 outputs PNP (Negative common)
		EX260-SMJ2	CC-Link, M12 connector, 32 outputs NPN (Positive common)
		EX260-SMJ3	CC-Link, M12 connector, 16 outputs PNP (Negative common)
		EX260-SMJ4	CC-Link, M12 connector, 16 outputs NPN (Positive common)
		EX260-SEC1	EtherCAT, M12 connector, 32 outputs PNP (Negative common)
		EX260-SEC2	EtherCAT, M12 connector, 32 outputs NPN (Positive common)
		EX260-SEC3	EtherCAT, M12 connector, 16 outputs PNP (Negative common)
		EX260-SEC4	EtherCAT, M12 connector, 16 outputs NPN (Positive common)
		EX260-SPN1	PROFINET, M12 connector, 32 outputs PNP (Negative common)
		EX260-SPN2	PROFINET, M12 connector, 32 outputs NPN (Positive common)
		EX260-SPN3	PROFINET, M12 connector, 16 outputs PNP (Negative common)
		EX260-SPN4	PROFINET, M12 connector, 16 outputs NPN (Positive common)
		EX260-SEN1	EtherNet/IP™, M12 connector, 32 outputs PNP (Negative common)
		EX260-SEN2	EtherNet/IP™, M12 connector, 32 outputs NPN (Positive common)
		EX260-SEN3	EtherNet/IP™, M12 connector, 16 outputs PNP (Negative common)
		EX260-SEN4	EtherNet/IP™, M12 connector, 16 outputs NPN (Positive common)
		EX260-SPL1	Ethernet POWERLINK, M12 connector, 32 outputs PNP (Negative common)
		EX260-SPL3	Ethernet POWERLINK, M12 connector, 16 outputs PNP (Negative common)
		EX260-SIL1	IO-Link M12 connector, 32 outputs PNP (Negative common)
		EX260-SCT1	CC-Link IE TSN RJ45 connector, 32 outputs PNP (Negative common)
		EX260-FPS1	PROFIsafe, M12 connector, 32 outputs PNP (Negative common)
		EX260-FSE1	Safety over EtherCAT M12 connector, 32 outputs PNP (Negative common)
⑬	**SI unit**	**EX126D-SMJ1**	CC-Link NPN (Positive common)
⑭	**Terminal block plate**	**VVQC1000-74A-2**	For EX126 SI unit mounting
⑮	**D-sub connector housing assembly**	**VVQC1000-F25-1**	F kit, 25 pins
⑯	**Flat ribbon cable housing assembly**	**VVQC1000-P26-1**	P kit, 26 pins
		VVQC1000-P20-1	P kit, 20 pins
⑰	**Terminal block box housing assembly**	**VVQC1000-T0-1**	T kit
⑱	**Lead wire housing assembly**	**VVQC1000-L25-0-1**	L kit with 0.6 m lead wire
		VVQC1000-L25-1-1	L kit with 1.5 m lead wire
		VVQC1000-L25-2-1	L kit with 3.0 m lead wire
⑲	**Circular connector housing assembly**	**VVQC1000-M26-1**	M kit, 26 pins

Note 1) The only available SI unit part number is "EX245-SPN□A" (PROFINET compatible).

Manifold Assembly Part No.

<Housing Assembly and SI Unit/Input Block>

No.	Description	Part no.	Note
㉔	**Compact wireless remote**	**EXW1-RDYPM5C**	Without wireless adapter (Negative common)
		EXW1-RDYNM5C	Without wireless adapter (Positive common)
		EXW1-RDYPM5C-E	With wireless adapter (EXW1-A11E) (Negative common)
		EXW1-RDYNM5C-E	With wireless adapter (EXW1-A11E) (Positive common)
		EXW1-RDYPM5C-N	With wireless adapter (EXW1-A11N) (Negative common)
		EXW1-RDYNM5C-N	With wireless adapter (EXW1-A11N) (Positive common)
㉕	**Wireless adapter**	**EXW1-A11E**	Min. 5/Max. 79 channels
		EXW1-A11N	Min. 15/Max. 79 channels

∗ The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

Manifold Assembly Part No.

<D-Side End Plate Assembly>

⑳ **D-side end plate assembly part no.**

VVQC 1 000-3A-1- □ - □

Series

1	VQC1000
2	VQC2000

Port size

Symbol	VQC1000	VQC2000
C8	●	
C10		●
N9	●	
N11		●

Option

Nil	Common EXH
R	External pilot
S	Direct EXH outlet with built-in silencer

<U-Side End Plate Assembly>

㉓ **U-side end plate assembly part no.**

VVQC 1 000-2A- 1 - C8 - □

Series

1	VQC1000
2	VQC2000

Supply/Exhaust port entry direction

1	Cylinder port side
2 Note)	Branch type

Note) VQC2000 only

Port size

Symbol	VQC1000	VQC2000
C8	●	
C10		●
C12		●
N9	●	
N11		●
N13		●

Option

Nil	Common EXH
R	External pilot
S	Direct EXH outlet with built-in silencer

<Manifold Block Assembly>

㉑ **Manifold block assembly part no.**

VVQC 1 000-1A- D - C6 - □

Series

1	VQC1000
2	VQC2000

Note) Tie-rods (2 pcs.) for additional stations included.

Wiring specifications

D	Double wiring
S	Single wiring

Port size

Symbol	Port size	VQC1000	VQC2000
C3	For ø3.2 One-touch fitting	●	
C4	For ø4 One-touch fitting	●	●
C6	For ø6	●	●
C8	For ø8		●
N1	For ø1/8"	●	
N3	For ø5/32"	●	●
N7	For ø1/4"	●	●
N9	For ø5/16"		●
M5	For M5 thread	●	

Option

Nil	None
B	With back pressure check valve

∗ As the interface gasket is the same as that of the VQ series, refer to the **Web Catalog** for the part number.

<Replacement Parts>

Pilot valve assembly

V112 □ - 5 A

Coil voltage

5	24 VDC
6	12 VDC

Function

Nil	Standard (0.4 W)
B	High-speed response type (0.95 W)
K	High-pressure type (1.0 MPa, 0.95 W)

Note 1) Common to single solenoid and double solenoid
Note 2) The voltage (including light/surge voltage suppressor), positive common and negative common cannot be changed by changing the pilot valve assembly.

㉒ **Tie-rod assembly part no. (2 pcs.)**

VQC1000	VVQC1000-TR-□
VQC2000	VVQC2000-TR-□


Note 1) Please order when reducing the number of manifold stations. When increasing the number of stations, additional orders are not required since they are included in the manifold block assembly.
Note 2) □: Stations 02 to 24

VQC1000/2000: Manifold Optional Parts

■VQC1000/2000: DIN rail dimensions

AXT100-DR-□

∗ After confirming the DIN rail dimensions in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box □.

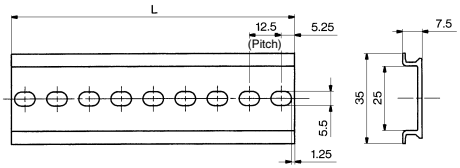

L Dimensions

L = 12.5 x n + 10.5

No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5

No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36
L dimension	248	260.5	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5

No.	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54
L dimension	473	485.5	498	510.5	523	535.5	548	560.5	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5

No.	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72
L dimension	698	710.5	723	735.5	748	760.5	773	785.5	798	810.5	823	835.5	848	860.5	873	885.5	898	910.5

No.	73	74	75	76	77	78
L dimension	923	935.5	948	960.5	973	985.5


VQC1000: Manifold Optional Parts

Blanking plate assembly
VVQ1000-10A-1

Symbol




It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

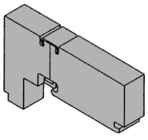


Individual SUP spacer
VVQ1000-P-1-$^{C6}_{N7}$

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.)
Block both sides of the station, for which the supply pressure from the individual SUP spacer is used, with SUP block plates. (Refer to the application example.)

- Specify the spacer mounting position and SUP block plate position by means of the manifold specification sheet.
  The block plate is used in one or two places for one set.
  (Two SUP block plates for blocking SUP passage are attached to the individual SUP spacer.)
- As a standard, electric wiring is connected to the position of the manifold station where the individual SUP spacer is mounted.
- If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.

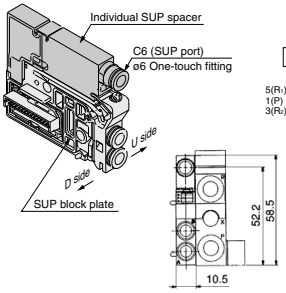


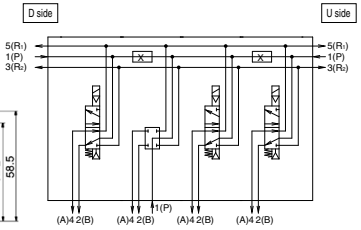

Individual EXH spacer
VVQ1000-R-1-$^{C6}_{N7}$


When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.)
Block both sides of the individual valve EXH station. (Refer to the application example.)

- Specify the spacer mounting position, as well as the EXH passage blocking position by means of the manifold specification sheet. The block plate is used in one or two places for one set.
- An EXH block base assembly is used in the blocking position when ordering an EXH spacer incorporated with a manifold. However, do not order an EXH block base assembly because it is attached to the spacer.
  When separately ordering an individual EXH spacer, separately order an EXH block base assembly because it is not attached to the spacer.
- As a standard, electric wiring is connected to the position of the manifold station where the individual EXH spacer is mounted.
- If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.
- Do not install any back pressure check valve on the manifold station, on which the spacer is to be mounted. When installing the back pressure check valve on other manifold station, be sure to specify the manifold station position on the manifold specification sheet instead of ordering by specifying the manifold option symbol "B".

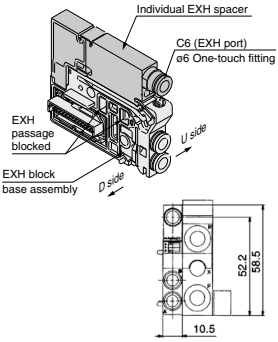

Description/Model		Stations	1	2	3	4	5	6	7
Valve	Single		●		●	●			
Option	Individual EXH spacer VVQ1000-R-1-C6			●					
	EXH blocking position: Specify 2 places.		●		●				

Individual EXH spacer + EXH block base assembly | **Valve + EXH block base assembly**

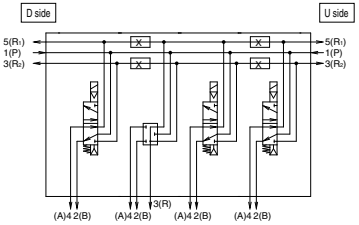


SUP block plate
VVQ1000-16A


When different pressures are supplied to a manifold, a SUP block plate is used to block the stations under different pressures.

- Specify the mounting position by means of the manifold specification sheet.

<Block indication label>
Indication labels to confirm the blocking position are attached (Each for SUP passage and SUP/EXH passage blocking positions).

- When ordering a block plate incorporated with a manifold, a block indication label is attached to the manifold.

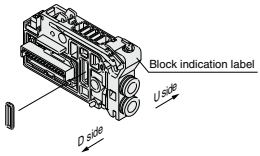

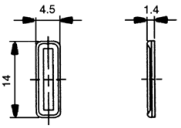



SUP passage blocked



SUP/EXH passage blocked

Blanking plate with connector

VVQ1000-1C□-□

Connector

Nil	Without connector
1	With connector/2-wire
2	With connector/4-wire

Connector lead wire length (mm)

Nil	300	**20**	2000
6	600	**25**	2500
10	1000	**30**	3000
15	1500		

Symbol



Blanking plate with a connector for individually outputting electricity to drive a single valve or equipment that are not on the manifold base.

* When "N" is suffixed to the end of the name plate, the plate will be different from a standard shape.

Note) Electric current should be 1A or less (including the mounted valves).


Connector assembly part no.

AXT661-43A-6

Lead wire length (mm)

43	4-wire
44	2-wire

Nil	300
6	600
10	1000
20	2000
30	3000

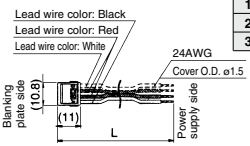



EXH block base assembly


VVQC1000-19A-□-(C3/C4/C6/M5/N1/N3/N7)

Wiring specifications

S	Single wiring
D	Double wiring

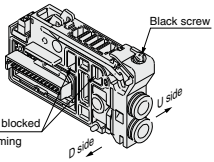



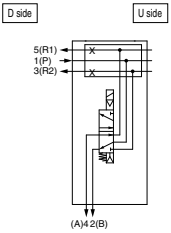

The manifold block assembly is used between stations for which exhaust is desired to be divided when valve exhaust affects other stations due to the circuit configuration. The EXH passage on the D-side is blocked in the EXH block base assembly. It is also used in combination with an individual EXH spacer for individual exhaust.

<Block indication label>

Indication labels to confirm the blocking position are attached (Each for EXH passage and SUP/EXH passage blocking positions).

* When ordering this option incorporated with a manifold, a block indication label is attached to the manifold.

* Specify the mounting position by means of the manifold specification sheet.
* When ordering this option incorporated with a manifold, specify the EXH block base assembly part number with "-" in front of it beneath the manifold part number.



EXH passage blocked



SUP/EXH passage blocked


Back pressure check valve assembly [-B]

VVQ1000-18A

It prevents cylinder from malfunctioning by other valve's exhaust entry. Insert it into R (EXH) port on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used or an exhaust center type solenoid valve is used.

* When ordering it being mounted on all manifold stations, suffix "-B" to the end of the manifold part number.

Note) When a back pressure check valve is desired, and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting station by means of the manifold specification sheet.

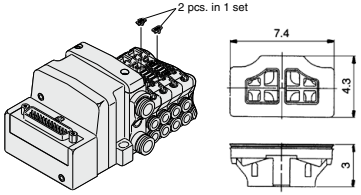

(Precautions)

1. The manifold installed type back pressure check valve assembly is assembly parts with a check valve structure. However, since slight air leakage against the back pressure is allowed due to its structure, adverse effects of the back pressure due to increase in exhaust resistance cannot be prevented if the manifold exhaust port and other exhaust ports are put together for piping or if the piping diameter is narrowed. As a result, this may cause the actuator and air operated equipment to malfunction. So, be careful not to restrict the exhaust air.
2. When a back pressure check valve is mounted, the effective area of the valve will decrease by about 20%.

Name plate [-N]


VVQ1000-$^{N}_{NC}$-Station (1 to Max. stations) (-X4)


N: Standard
NC: For mounting blanking plate with connector

-X4: For mounting slide locking type manual valve

It is a transparent resin plate for placing a label that indicates solenoid valve function, etc. Insert it into the groove on the side of the end plate and bend it as shown in the figure.

* When the blanking plate with connector is mounted, it automatically will be "VVQ1000-NC-n"
* When the slide locking type manual valve is mounted, it automatically will be "VVQ1000-N-n-X4"
* When ordering this option incorporated with a manifold, suffix "-N" to the end of the manifold part number.

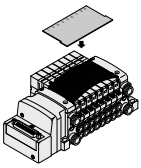

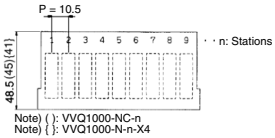


Note) ( ): VVQ1000-NC-n
Note) { }: VVQ1000-N-n-X4

Blanking plug (For One-touch fittings)

KQ2P-□

It is inserted into an unused cylinder port and SUP/EXH ports. Purchasing order is available in units of 10 pieces.





Dimensions

Applicable fitting size ød	Model	A	L	D
3.2	**KQ2P-23**	16	31.5	5
4	**KQ2P-04**	16	32	6
6	**KQ2P-06**	18	35	8
8	**KQ2P-08**	20.5	39	10


Applicable fitting size ød	Model	A	L	D
1/8"	**KQ2P-01**	16	31.5	5
5/32"	**KQ2P-03**	16	32	6
1/4"	**KQ2P-07**	18	35	8.5
5/16"	**KQ2P-09**	20.5	39	10


VQC1000: Manifold Optional Parts

Port plug
VVQ0000-58A

The plug is used to block the cylinder port.

* When ordering this option incorporated with a manifold, indicate "CM" for the port size of the manifold part number, as well as, the mounting position and number of stations and cylinder port mounting positions, 4(A) and 2(B) by means of the manifold specification sheet.
* Gently screw an M3 screw in the port plug hole and pull it for removal.

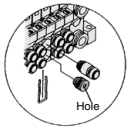




Elbow fitting assembly
VVQ1000-F-L(C3/C4/C6/M5/N1/N3/N7)


It is used for piping that extends upward or downward from the manifold.


* When ordering this option incorporated with a manifold, indicate "L□" or "B□" for the manifold port size (when installed in all stations.)

When installing it in part of the manifold stations, specify the elbow fitting assembly part number and the mounting position and number of stations by means of the manifold specification sheet.

* When mounting elbow fitting assembly on the edge of manifold station and a silencer on EXH port, select a silencer, AN15-C08.
  A silencer (AN200-KM8) is interfered with fittings.

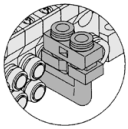



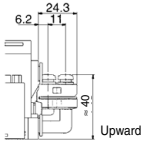



DIN rail mounting bracket [-D]
VVQ1000-57A
{For F/L/M/P/S (EX500) kit}
VVQC1000-57A-S
{For S (EX250) kit}
VVQC1000-57A-T (For T kit)

It is used for mounting a manifold on a DIN rail.

* When ordering this option incorporated with a manifold, suffix "-D" to the end of the manifold part number.

1 set of DIN rail mounting bracket is used for 1 manifold (2 DIN rail mounting brackets).

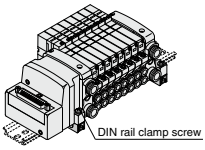




Direct EXH outlet with built-in silencer [-S]

This is a type with an exhaust outlet atop the manifold end plate. The built-in silencer exhibits an excellent noise suppression effect. (Noise reduction: 30 dB)

* When ordering this option incorporated with a manifold, suffix "-S" to the end of the manifold part number.

Note) A large quantity of drainage generated in the air source results in exhaust of air together with drainage.


● Refer to page 1143 for maintenance.

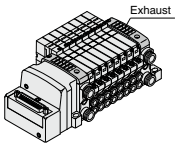


Dual flow fitting assembly
VVQ1000-52A-$^{C8}_{N9}$

This is a fitting to multiply the flow rate by combining the outputs of 2-valve stations. It is used for driving a large bore cylinder. This is a One-touch fitting for a port size of ø8 or ø5/16".

* The port size of the manifold part number is "MM".
  Clearly indicate the dual flow fitting assembly part number and specify the mounting positions by means of the manifold specification sheet.
* In dual flow fitting assembly, a special clip which is combined in one-piece of 2 stations is attached as a holding clip.

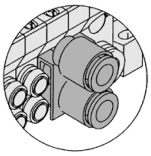


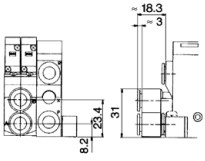

Silencer (For EXH port)

This silencer is to be inserted into the EXH port (One-touch fittings) of the common exhaust type.

* When mounting elbow fitting assembly (VVQ1000-F-L□) on the edge of manifold station, select a silencer, AN15-C08. A silencer (AN200-KM8) is interfered with fittings.

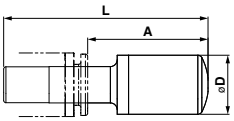

Dimensions


Series	Applicable fitting size ød	Model	A	L	D	Effective area (mm²)	Noise reduction (dB)
VQC1000	8	AN15-C08	26.5	45	13	20	30

Double check block (Separated) for VQC1000
VQ1000-FPG-□□-□

It is used on the outlet side piping to keep the cylinder in the intermediate position for long periods of time. Combining the double check block with a built-in pilot type double check valve and a 3-position exhaust center solenoid valve will enable the cylinder to stop in the middle or maintain its position for a long time.
The combination with a 2-position single/double solenoid valve will permit this block to be used for preventing the dropping at the cylinder stroke end when the SUP residual pressure is released.


Specifications

Max. operating pressure	0.8 MPa
Min. operating pressure	0.15 MPa
Ambient and fluid temp.	–5 to 50°C
Flow rate characteristics: C	0.60 dm³/(s·bar)
Max. operating frequency	180 c.p.m

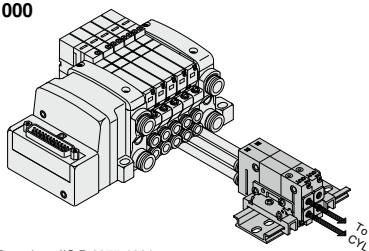

Note) Based on JIS B 8375-1981
(Supply pressure: 0.5 MPa)


<Circuit diagram>

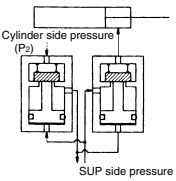


VVQ1000-FPG-02 1 set
∗ VQ1000-FPG-C6M5-D 2 pcs.


Dimensions

Single unit

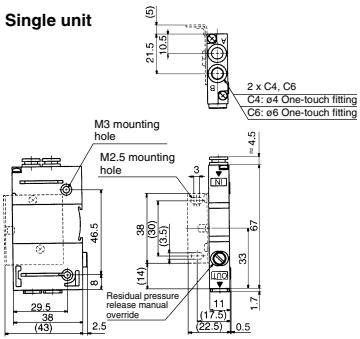

Manifold

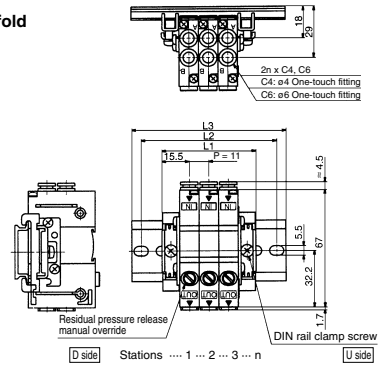


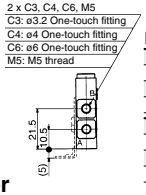

Dimensions Formula L1 = 11n + 20 n: Station (Maximum 24)

n	1	2	3	4	5	6	7	8	9	10	11	12
L1	31	42	53	64	75	86	97	108	119	130	141	152
L2	50	62.5	75	87.5	100	112.5	125	125	137.5	150	162.5	175
L3	60.5	73	85.5	98	110.5	123	135.5	135.5	148	160.5	173	185.5

n	13	14	15	16	17	18	19	20	21	22	23	24
L1	163	174	185	196	207	218	229	240	251	262	273	284
L2	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300
L3	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5

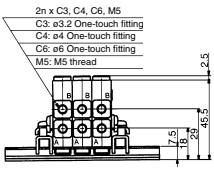

How to Order

Double check block

VQ1000-FPG-C4 M5 – F

IN side port size

M5	M5 thread
C3	ø3.2 One-touch fitting
C4	ø4 One-touch fitting
C6	ø6 One-touch fitting
N3	ø5/32" One-touch fitting
N7	ø1/4" One-touch fitting

OUT side port size

M5	M5 thread
C3	ø3.2 One-touch fitting
C4	ø4 One-touch fitting
C6	ø6 One-touch fitting
N3	ø5/32" One-touch fitting
N7	ø1/4" One-touch fitting

Option

Nil	None
F	With bracket
D	DIN rail mounting (For manifold)
N	Name plate

Note) When two or more symbols are specified, indicate them alphabetically. Example) -DN

Manifold (DIN rail mounting)

VVQ1000-FPG-06

Stations

01	1 station
⋮	⋮
16	16 stations

When ordering a double check block, order the DIN rail mounting [-D].


<Ordering example>
VVQ1000-FPG-06···6-station manifold
∗**VQ1000-FPG-C4M5-D, 3 sets**
∗**VQ1000-FPG-C6M5-D, 3 sets**
Double check block

Bracket Assembly


Part no.	Tightening torque
VQ1000-FPG-FB	0.22 to 0.25 N·m

<Example>

2-position



3-position exhaust center

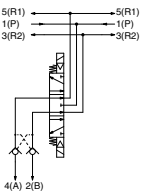

⚠ Caution


- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for long periods of time. Check the leakage using neutral household detergent, such as dish washing soap. Also, check the cylinder's tube gasket, piston packing and rod packing for air leakage.
- Since One-touch fittings allow slight air leakage, screw piping (with M5 thread) is recommended when stopping the cylinder in the middle for long periods of time.
- Combining double check block with 3-position closed center or pressure center solenoid valve will not work.
- M5 fitting assembly is attached, not incorporated into the double check block. After screwing in the M5 fittings, mount the assembly on the double check block. {Tightening torque: 0.8 to 1.2 N·m}
- If the exhaust of the double check block is restricted too much, the cylinder may not operate properly and may not stop intermediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.


VQC2000: Manifold Optional Parts

Blanking plate assembly
VVQ2000-10A-1

Symbol

It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

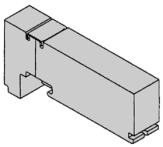





Individual SUP spacer
VVQ2000-P-1- $\frac{C8}{N9}$

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.)
Block both sides of the station, for which the supply pressure from the individual SUP spacer is used, with SUP block plates. (Refer to the application example.)

- Specify the spacer mounting position and SUP passage blocking position by means of the manifold specification sheet.
  The block plate is used in one or two places for one set.
  (Two SUP block plates for blocking SUP passage are attached to the individual SUP spacer.)
- As a standard, electric wiring is connected to the position of the manifold station where the individual SUP spacer is mounted.
- If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.

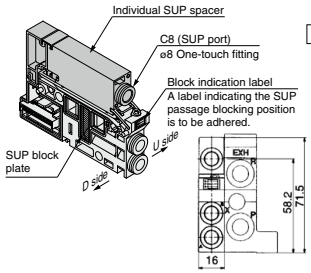


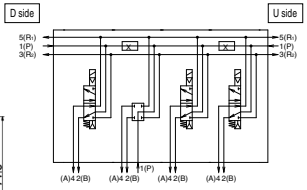


Individual EXH spacer
VVQ2000-R-1- $\frac{C8}{N9}$

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.)
Block both sides of the individual valve EXH station. (Refer to the application example.)

- Specify the spacer mounting position, as well as the EXH passage blocking position by means of the manifold specification sheet. The block plate is used in one or two places for one set. (Four EXH block plates (2 sets) for blocking EXH passage are attached to the individual EXH spacer.)
- As a standard, electric wiring is connected to the position of the manifold station where the individual EXH spacer is mounted.
- If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.
- Do not install any back pressure check valve on the manifold station, on which the spacer is to be mounted. When installing the back pressure check valve on other manifold station, be sure to specify the manifold station position on the manifold specification sheet instead of ordering by specifying the manifold option symbol "B".

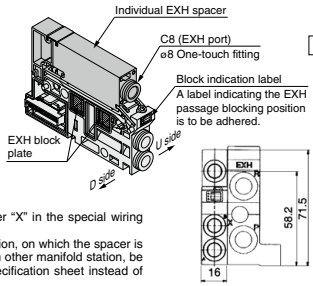


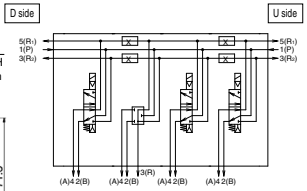

SUP block plate
VVQ2000-16A

When different pressures are supplied to a manifold, a SUP block plate is used to block the stations under different pressures.

- Specify the mounting position by means of the manifold specification sheet.

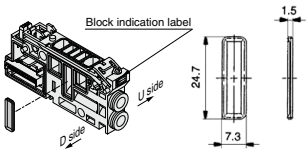

<Block indication label>
Indication labels to confirm the blocking position are attached. (Each for SUP passage and SUP/EXH passage blocking positions)




SUP passage blocked **SUP/EXH passage blocked**

- When ordering a block plate incorporated with a manifold, a block indication label is attached to the manifold.

EXH block plate
VVQ2000-19A

The EXH block plate is used between stations for which exhaust is desired to be divided when valve exhaust affects other stations configuration. It is also used in combination with an individual EXH spacer for individual exhaust.

- Specify the mounting position by means of the manifold specification sheet.

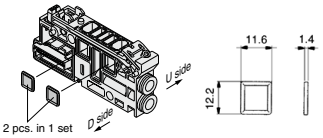

<Block indication label>
Indication labels to confirm the blocking position are attached. (Each for EXH passage and SUP/EXH passage blocking positions)



EXH passage blocked **SUP/EXH passage blocked**


- When ordering a block plate incorporated with a manifold, a block indication label is attached to the manifold.

Back pressure check valve assembly [-B]
VVQ2000-18A

It prevents cylinder malfunction caused by other valve exhaust entry. Insert it into R (EXH) port on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used or an exhaust center type solenoid valve is used.

- When ordering this option incorporated with a manifold, suffix "-B" to the end of the manifold part number.

Note) When a back pressure check valve is desired, and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting position by means of the manifold specification sheet.

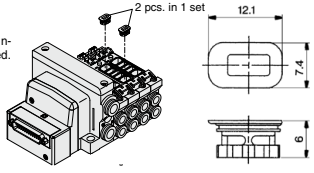

<Precautions>

1. The manifold installed type back pressure check valve assembly is assembly parts with a check valve structure. However, since slight air leakage against the back pressure is allowed due to its structure, adverse effects of the back pressure due to increase in exhaust resistance cannot be prevented if the manifold exhaust port and other exhaust ports are put together for piping or if the piping diameter is narrowed. As a result, this may cause the actuator and air operated equipment to malfunction. So, be careful not to restrict the exhaust air.
2. When a back pressure check valve is mounted, the effective area of the valve will decrease by about 20%.


Name plate [-N]


VVQ2000-N-Station (1 to Max. stations) (-X4)

-X4: For mounting slide locking type manual valve

It is a transparent resin plate for placing a label that indicates solenoid valve function, etc.
Insert it into the groove on the side of the end plate and bend it as shown in the figure.

* When the slide locking type manual valve is mounted, it automatically will be "VVQ2000-N-n-X4"
* When ordering this option incorporated with a manifold, suffix "-N" to the end of the manifold part number.

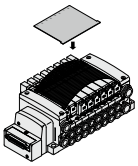


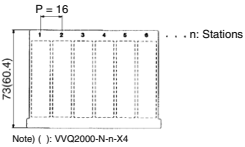


Blanking plug (For One-touch fittings)

KQ2P-□

It is inserted into an unused cylinder port and SUP/EXH ports.
Purchasing order is available in units of 10 pieces.



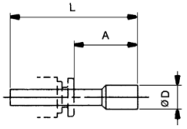

Dimensions


Applicable fitting size ød	Model	A	L	D
4	**KQ2P-04**	16	32	6
6	**KQ2P-06**	18	35	8
8	**KQ2P-08**	20.5	39	10
10	**KQ2P-10**	22	43	12
5/32"	**KQ2P-03**	16	32	6
1/4"	**KQ2P-07**	18	35	8.5
5/16"	**KQ2P-09**	20.5	39	10
3/8"	**KQ2P-11**	22	43	11.5


Port plug

VVQ1000-58A

The plug is used to block the cylinder port.

* When ordering this option incorporated with a manifold, indicate "CM" for the port size of the manifold part number, as well as, the mounting station and cylinder port mounting positions, A and B, by means of the manifold specification sheet.






DIN rail mounting bracket [-D]


VVQC2000-57A
{For F/L/M/P/S (EX500) kit}
VVQC2000-57A-S
{For S (EX250) kit}
VVQC2000-57A-T (For T kit)

It is used for mounting a manifold on a DIN rail.

* When ordering this option incorporated with a manifold, suffix "-D" to the end of the manifold part number.

1 set of DIN rail mounting bracket is used for 1 manifold (2 DIN rail mounting brackets).

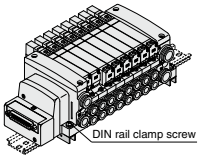




Direct EXH outlet with built-in silencer [-S]

This is a type with an exhaust outlet atop the manifold end plate. The built-in silencer exhibits an excellent noise suppression effect. (Noise reduction: 30 dB)

* When ordering this option incorporated with a manifold, suffix "-S" to the end of the manifold part number.


Note) A large quantity of drainage generated in the air source results in exhaust of air together with drainage.

● Refer to page 1143 for maintenance.

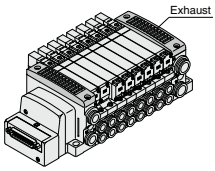

Silencer (For EXH port)

This silencer is to be inserted into the EXH port (One-touch fittings).



Dimensions


Series	Applicable fitting size ød	Model	A	L	D	Effective area (mm²) (Cv factor)	Noise reduction (dB)
VQC2000	10	AN20-C10	36.5	57.5	16.5	30	30

Elbow fitting assembly

VVQ2000-F-L(C4/C6/C8/N3/N7/N9)

It is used for piping that extends upward or downward from the manifold.
When installing it only in some manifold stations, specify the elbow fitting assembly part number and the mounting position by means of the manifold specification sheet.



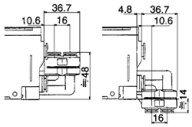


Dual flow fitting assembly

VVQ2000-52A-$^{C10}_{N11}$

This is a fitting to multiply the flow rate by combining the outputs of 2-valve stations. It is used for driving a large bore cylinder. This is a One-touch fitting for a port size of ø10 or ø3/8".

* The port size of the manifold part number is "MM". Clearly indicate the dual flow fitting assembly part number and specify the mounting position by means of the manifold specifications.







VQC2000: Manifold Optional Parts

Double check block (Separated) for VQC2000
VQ2000-FPG-□□-□

It is mounted on the outlet side piping to keep the cylinder in the intermediate position for long periods of time. Combining with a 3-position exhaust center solenoid valve will enable the cylinder to stop in the middle or maintain its position for a long time. Combining with a 2-position single/double solenoid valve will prevent a cylinder from dropping at the stroke end when the residual pressure of SUP is released.

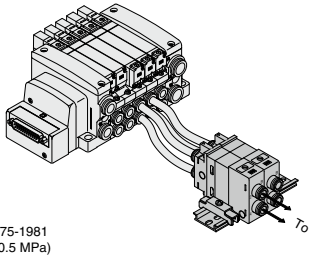

<Circuit diagram>

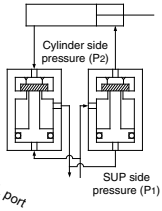


Specifications

Max. operating pressure	0.8 MPa
Min. operating pressure	0.15 MPa
Ambient and fluid temp.	–5 to 50°C
Flow rate characteristics: C	3.0 dm³/(s·bar)
Max. operating frequency	180 c.p.m


Note) Based on JIS B 8375-1981
(Supply pressure: 0.5 MPa)

Dimensions

Single unit

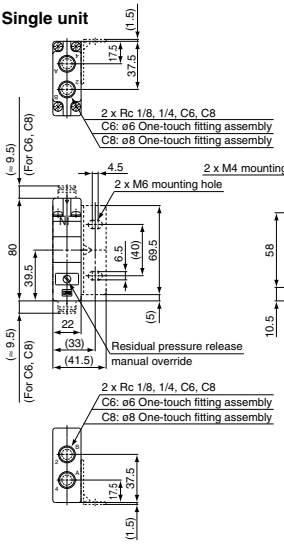

Manifold

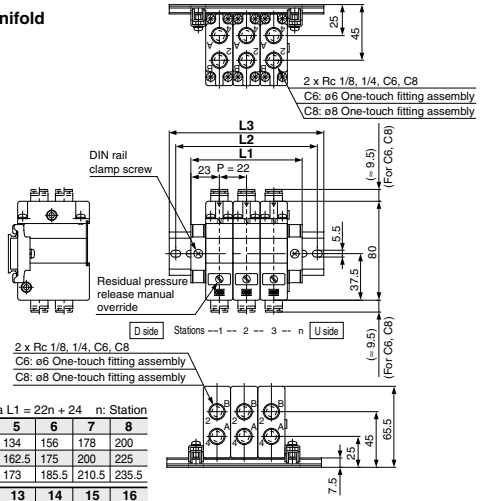

Dimensions Formula L1 = 22n + 24 n: Station

L \ n	1	2	3	4	5	6	7	8
L1	46	68	90	112	134	156	178	200
L2	75	87.5	112.5	137.5	162.5	175	200	225
L3	85.5	98	123	148	173	185.5	210.5	235.5

L \ n	9	10	11	12	13	14	15	16
L1	222	244	266	288	310	332	354	376
L2	250	262.5	287.5	312.5	337.5	362.5	375	400
L3	260.5	273	298	323	348	373	385.5	410.5

How to Order

Double check block

VQ2000-FPG- 01 | 01 **-** F

IN side port size

01	Rc 1/8
02	Rc 1/4
C6	ø6 One-touch fitting
C8	ø8 One-touch fitting
N7	ø1/4" One-touch fitting
N9	ø5/16" One-touch fitting

OUT side port size


01	Rc 1/8
02	Rc 1/4
C6	ø6 One-touch fitting
C8	ø8 One-touch fitting
N7	ø1/4" One-touch fitting
N9	ø5/16" One-touch fitting

Option

Nil	None
D	DIN rail mounting (For manifold)
F	With bracket
N	Name plate

Note) When two or more symbols are specified, indicate them alphabetically.
Example) -DN

<Example>

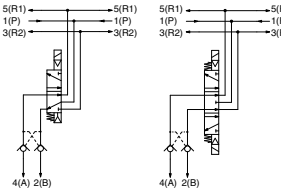

Manifold (DIN rail mounting)

VVQ2000-FPG- 06

Stations

When ordering a double check block, order the DIN rail mounting [-D].

01	1 station
⋮	⋮
16	16 stations

<Ordering example>
VVQ2000-FPG-06···6-station manifold

- ∗**VQ2000-FPG-C6C6-D, 3set**
- ∗**VQ2000-FPG-C8C8-D, 3set**

} **Double check block**

Bracket Assembly

Part no.	Tightening torque
VQ2000-FPG-FB	0.8 to 1.0 N·m

⚠ Caution

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for long periods of time. Check the leakage using neutral household detergent, such as dish washing soap. Also, check the cylinder's tube gasket, piston packing and rod packing for air leakage.
- Since One-touch fittings allow slight air leakage, screw piping is recommended when stopping the cylinder in the middle for long periods of time.
- Combining double check block with 3-position closed center or pressure center solenoid valve will not work.
- When fittings, etc. are being screwed to the double check block, tighten them with the torque below.

Connection thread	Proper tightening torque (N·m)
Rc 1/8	7 to 9
Rc 1/4	12 to 14

- If the exhaust of the double check block is restricted too much, the cylinder may not operate properly and may not stop intermediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.

VQC1000/2000 Series
Specific Product Precautions 1


Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Manual Override

⚠Warning

Connected actuator is started by manual operation. Use the manual override after confirming that there is no danger. Push type is standard. (Tool required) Locking type is semi-standard. (Tool required)


Non-locking push type (Tool required)



VQC1000 **VQC2000**

Push down on the manual override with a small screwdriver until it stops. Release the screwdriver and the manual override will return.


Locking type (Tool required) <Semi-standard>

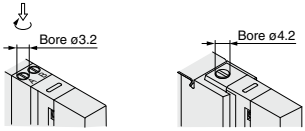

VQC1000 **VQC2000**

Push down on the manual override with a small flat head screwdriver until it stops. Turn it clockwise by 90° to lock it. Turn it counterclockwise to release it.

Locking type (Manual) <Semi-standard>

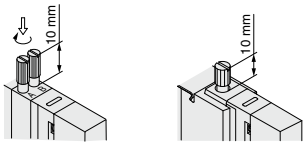

VQC1000 **VQC2000**


Push down on the manual override with a small screwdriver or with your fingers until it stops. Turn it clockwise by 90° to lock it. Turn it counterclockwise to release it.

⚠Caution

Do not apply excessive torque when turning the locking type manual override. (0.1 N·m or less)

⚠Warning


Slide locking type (Manual) <Semi-standard>

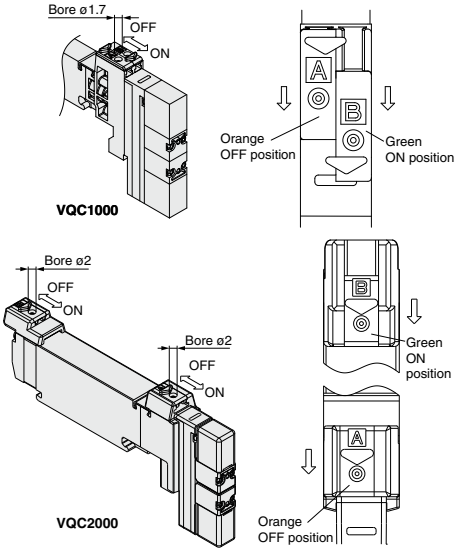

The manual override is locked by sliding it all the way to the pilot valve side (ON side) with a small flat head screwdriver or with your fingers. Slide it to the fitting side (OFF side) to release it. In addition, it can also be used as a push type by using a screwdriver, etc., of ø1.7 or less. (ø2 or less for VQC2000)

How to Mount/Remove Solenoid Valves

⚠Caution

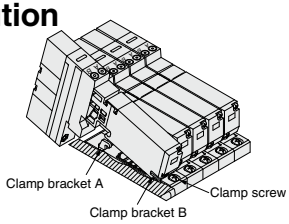

Removing

1. Loosen the clamp screw until it turns freely. (The screw is captive.)
2. Lift the coil side of the valve body while pressing down slightly on the screw head and remove it from the clamp bracket B. When the screw head cannot be pressed easily, gently press the area near the manual override of the valve.

Mounting

1. Press down on the clamp screw. Clamp bracket A opens. Diagonally insert the hook on the valve end plate side into clamp B.
2. Press the valve body downward. (When the screw is released, it will be locked by clamp bracket A.)
3. Tighten the clamp screw. (Proper tightening torque: VQC1000, 0.25 to 0.35 N·m; VQC2000, 0.5 to 0.7 N·m)

⚠Caution

Dust on the sealing surface of the gasket or solenoid valve can cause air leakage.


Specific Product Precautions 2

Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Cylinder Port Fittings Replacement

⚠Caution

One-touch fittings on the cylinder port are a cassette for easy replacement. The fittings are blocked by a clip. After removing the corresponding valve and take out the clip with a flat head screwdriver, etc., then replace the fittings.
For mounting, insert the fitting until it strikes against the inside wall and then insert the clip to the specified position.

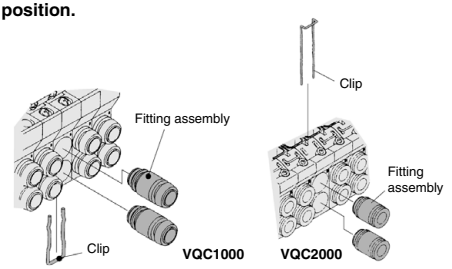

Applicable tubing O.D.	Fitting assembly part no.	
	VQC1000	**VQC2000**
Applicable tubing ø3.2	VVQ1000-50A-C3	——
Applicable tubing ø4	VVQ1000-50A-C4	VVQ1000-51A-C4
Applicable tubing ø6	VVQ1000-50A-C6	VVQ1000-51A-C6
Applicable tubing ø8	——	VVQ1000-51A-C8
M5	VVQ1000-50A-M5	——
Applicable tubing ø1/8"	VVQ1000-50A-N1	——
Applicable tubing ø5/32"	VVQ1000-50A-N3	VVQ1000-51A-N3
Applicable tubing ø1/4"	VVQ1000-50A-N7	VVQ1000-51A-N7
Applicable tubing ø5/16"	——	VVQ1000-51A-N9

∗ Refer to "Manifold Optional Parts" on pages 1136 and 1139 for other types of fittings.


⚠Caution

1) Use caution that O-rings must be free from scratches and dust. Otherwise, air leakage may result.
2) After screwing in the fittings, mount the M5 fitting assembly on the manifold base. (Tightening torque: 0.8 to 1.2 N·m)
3) Purchasing order is available in units of 10 pieces.

Light/Surge Voltage Suppressor

⚠Caution


The lighting positions are concentrated on one side for both single solenoid type and double solenoid type. In the double solenoid type, A side and B side energization are indicated by two colors which match the colors of the manual overrides.

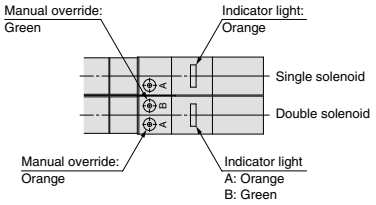


(Drawing shows a VQC1000 case.)

DC circuit diagram

Single solenoid

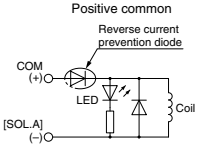

Double solenoid

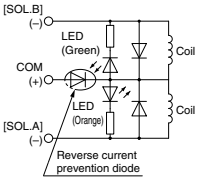

Note) A-side energization:
A light (Orange) illuminates. With wrong wiring prevention (stop diode) mechanism
B-side energization:
B light (Green) illuminates. With a surge absorption (surge absorption diode) mechanism

Continuous Duty

⚠Caution

If a valve is energized continuously for long periods of time, the rise in temperature due to heat-up of the coil assembly may cause a decline in solenoid valve performance, reduce service life, or have adverse effects on peripheral equipment. In particular, if three or more adjacent stations on the manifold are energized simultaneously for extended periods of time or if the valves on A side and B side are energized simultaneously for long periods of time, take special care as the temperature rise will be greater. In such cases, if it is possible to select a valve with a power-saving circuit, be sure to do so.

UL Approved Product

⚠Caution

When conformity to UL is required, the product should be used with a UL1310 Class 2 power supply.

The product is a UL approved product only if it has a c UL us mark on the body.

VQC1000/2000 Series
Specific Product Precautions 3

Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com


How to Mount/Remove DIN Rail

⚠Caution

Removing

1. Loosen the clamp screw on side (a) of the end plate on both sides.


2. Lift side (a) of the manifold base and slide the end plate in the direction of (2) shown in the figure to remove.

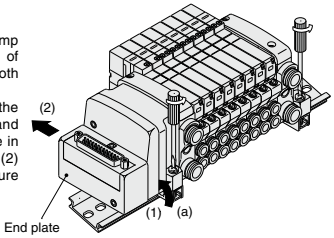

Mounting

1. Hook side (b) of the manifold base on the DIN rail.

2. Press down side (a) and mount the end plate on the DIN rail. Tighten the clamp screw on side (a) of the end plate. (Proper tightening torque: VQC1000, 1.1 to 1.3 N·m; VQC2000, 1.4 to 1.6 N·m.)

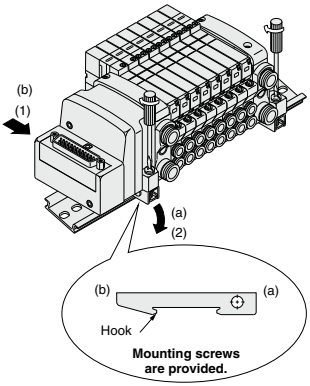

IP67 Enclosure

⚠Caution

Wiring connection for models conforming to IP67 should also have enclosures equivalent to or of stricter than IP67.

Built-in Silencer Element

⚠Caution


A filter element is incorporated in the end plate on both sides of the manifold base. A dirty and choked element may reduce cylinder speed or cause malfunction. Clean or replace the dirty element.

Element Part No.

Type	Element part no.	
	VQC1000	**VQC2000**
Direct EXH outlet with built-in silencer	VVQ1000-82A-1	VVQ2000-82A-1 (D-side end plate) VVQC2000-82A-1 (U-side end plate)

The minimum order quantity is 10 pcs.

Remove the cover from the top of the end plate and remove the old element with a flat head screwdriver, etc.

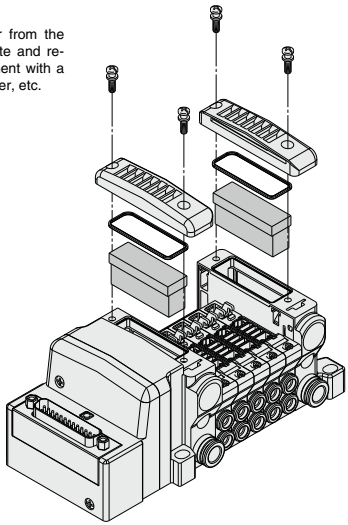

How to Calculate Flow Rate

Refer to the **Web Catalog** for obtaining the flow rate.

VQC1000/2000 Series
Specific Product Precautions 4

Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

EX500/EX260/EX250/EX126 Precautions

⚠Warning

1. **These products are intended for use in general factory automation equipment.**
   Avoid using these products in machinery/equipment which affects human safety, and in cases where malfunction or failure can result in extensive damage.
2. **Do not use in explosive environments, in the presence of inflammable gases, or in corrosive environments. This can cause injury or fire.**
3. **Work such as transporting, installing, piping, wiring, operation, control and maintenance should be performed by knowledgeable and qualified personnel only. As handling involves the risk of a danger of electrocution, injury or fire.**
4. **Install an external emergency stop circuit that can promptly stop operation and shut off the power supply.**
5. **Do not modify these products. Modifications done to these products carry the risk of injury and damage.**

⚠Caution

1. **Read the Operation Manual carefully, strictly observe the precautions and operate within the range of the specifications.**
2. **Do not drop these products or submit them to strong impacts. This can cause damage, failure or malfunction.**
3. **In locations with poor electrical conditions, take steps to ensure a steady flow of the rated power supply. Use of a voltage outside of the specifications can cause malfunction, damage to the unit, electrocution or fire.**
4. **Do not touch connector terminals or internal circuit elements when current is being supplied. There is a danger of malfunction, damage to the unit or electrocution if connector terminals or internal circuit elements are touched when current is being supplied.**
   Be sure that the power supply is OFF when adding or removing manifold valves or input blocks or when connecting or disconnecting connectors.
5. **Operate at an ambient temperature that is within the specifications. Even when the ambient temperature range is within the specifications, do not use in locations where there are rapid temperature changes.**
6. **Keep wire scraps and other extraneous materials from getting inside these products. This can cause fire, failure or malfunction.**
7. **Give consideration to the operating environment depending on the type of enclosure being used.**
   To achieve IP65 and IP67 protection class, provide appropriate wiring between all units using electrical wiring cables, communication connectors and cables with M12 connectors. Also, provide waterproof caps when there are unused ports, and perform proper mounting of input units, input blocks, SI units and manifold valves. Provide a cover or other protection for applications in which there is constant exposure to water.
8. **Use the proper tightening torques.**
   There is a possibility of damaging threads if tightening exceeds the tightening torque range.
9. **Provide adequate protection when operating in locations such as follows:**
   - Where noise is generated by static electricity
   - Where there is a strong electric field
   - Where there is a danger of exposure to radiation
   - When in close proximity to power supply lines

⚠Caution

10. **When these products are installed in equipment, provide adequate protection against noise by using noise filters.**
11. **Since these products are components whose end usage is obtained after installation in other equipment, the customer should confirm conformity to EMC directives for the finished product.**
12. **Do not remove the name plate.**
13. **Perform periodic inspections and confirm normal operation, otherwise it may be impossible to guarantee safety due to unexpected malfunction or erroneous operation.**
14. **Do not use in places where there are cyclic temperature changes.**
    In case that the cyclic temperature is beyond normal temperature changes, the inside product is likely to be adversely effected.
15. **Do not use in direct sunlight.**
    Do not use in direct sunlight. It may cause malfunction or damage.
16. **Do not use in places where there is radiated heat around it.**
    Such a place is likely to cause malfunction.

Safety Instructions on Power Supply

⚠Caution

1. **Operation is possible with a single power supply or a separate power supply. However, be sure to provide two wiring systems (one for solenoid valves, and one for input and control units).**
2. **When it is UL compliant, use a class 2 power supply unit in accordance with UL1310 for a combined direct current power supply.**

Safety Instructions on Cable

⚠Caution

1. **Avoid miswiring, as this can cause malfunction, damage and fire in the unit.**
2. **To prevent noise and surge in signal lines, keep all wiring separate from power lines and high-voltage lines. Otherwise, this can cause malfunction.**
3. **Check wiring insulation, as defective insulation can cause damage to the unit when excessive voltage or current is applied.**
4. **Do not bend or pull cables repeatedly, and do not place heavy objects on them or allow them to be pinched. This can cause broken lines.**

VQC1000/2000 Series
Specific Product Precautions 5

Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

EX600 Precautions

Design/Selection

⚠Warning

1. Use this product within the specification range.
Using beyond the specified specifications range can cause fire, malfunction, or damage to the system.
Confirm the specifications when operating.

2. When using for an interlock circuit:
- **Provide a multiple interlock system which is operated by another system (such as mechanical protection function).**
- **Perform an inspection to check that it is working properly.**


This may cause possible injury due to malfunction.

⚠Caution

1. When it is UL compliant, use a class 2 power supply unit in accordance with UL1310 for a combined direct current power supply.

2. Use this product within the specified voltage range.
Using beyond the specified voltage range is likely to cause the units and connecting devices to be damaged or to malfunction.

3. The power supply for the unit should be 0 V as the standard for both power supply for output as well as power supply for control/input.



4. Do not install a unit in a place where it can be used as a foothold.
Applying any excessive load such as stepping on the unit by mistake or placing a foot on it, will cause it to break.

5. Keep the surrounding space free for maintenance.
When designing a system, take into consideration the amount of free space needed for performing maintenance.

6. Do not remove the name plate.
Improper maintenance or incorrect use of the Operation Manual can cause failure and malfunction. Also, there is a risk of losing conformity with safety standards.

7. Beware of inrush current when the power supply is turned on.
Some connected loads can apply an initial charge current which will trigger the over current protection function, causing the unit to malfunction.

Mounting

⚠Caution

1. When handling and assembling units:
- **Do not touch the sharp metal parts of the connector or plug.**
- **Do not apply excessive force to the unit.**
The connecting portions of the unit are firmly joined with seals.
- **When joining units, take care not to get fingers caught between units.**
Injury can result.

2. Do not drop, bump, or apply excessive impact.
Otherwise, the unit can become damaged, malfunction, or fail to function.

3. Observe the tightening torque range.
Tightening outside of the allowable torque range will likely damage the product.
IP67 protection class cannot be guaranteed if the screws are not tightened to the specified torque.

4. When lifting a large size manifold solenoid valve unit, take care to avoid causing stress to the valve connection joint.
The connection parts of the unit may be damaged.
Because the unit may be heavy, carrying and installation should be performed by more than one operator to avoid strain or injury.

5. When placing a manifold, mount it on a flat surface.
Torsion in the whole manifold can lead to trouble such as air leakage or defective insulation.

Wiring

⚠Caution

1. Confirm grounding to maintain the safety of the reduced wiring system and for anti-noise performance.
Provide a specific grounding as close to the unit as possible to minimize the distance to grounding.

2. Avoid repeatedly bending or stretching the cable and applying a heavy object or force to it.
Wiring applying repeated bending and tensile stress to the cable can break the circuit.

3. Avoid miswiring.
If miswired, there is a danger of malfunction or damage to the reduced wiring system.

4. Do not wire while energizing the product.
There is a danger of malfunction or damage to the reduced wiring system or input/output equipment.

■ **Trademark**
DeviceNet® is a registered trademark of ODVA, Inc.
EtherNet/IP® is a registered trademark of ODVA, Inc.
EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

VQC1000/2000 Series
Specific Product Precautions 6

Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

EX600 Precautions

Wiring

⚠Caution

5. Avoid wiring the power line and high-pressure line in parallel.

Noise or surge produced by signal line resulting from the power line or high pressure line could cause malfunction.
Wiring of the reduced wiring system or input/output device and the power line or high-pressure line should be separated from each other.

6. Confirm the wiring insulation.

Defective insulation (contact with other circuits, improper insulation between terminals, etc.) may cause damage to the reduced wiring system or input/output device due to excessive voltage or current.

7. When a reduced wiring system is installed in machinery/equipment, provide adequate protection against noise by using noise filters, etc.

Noise in signal lines may cause malfunction.

8. When connecting wires of input/output device or handheld terminal, prevent water, solvent or oil from entering inside from the connecter section.

This can cause damage, equipment failure, or malfunction.

9. Avoid wiring patterns in which excessive stress is applied to the connector.

This may cause malfunction or damage to the unit due to contact failure.

Operating Environment

⚠Warning

1. Do not use in an atmosphere containing an inflammable gas or explosive gas.

Use in such an atmosphere is likely to cause a fire or explosion. This system is not explosion-proof.

⚠Caution

1. Select the proper type of enclosure according to the environment of operation.

IP65/67 protection class is achieved when the following conditions are met.

1) The units are connected properly with wiring cable for power supply, communication connector, and cable with M12 connector.
2) Suitable mounting of each unit and manifold valve.
3) Be sure to mount a seal cap on any unused connectors.
If using in an environment that is exposed to water splashes, please take measures such as using a cover.

For IP40 protection class, do not use in atmospheres with corrosive gas, chemicals, sea water, water, steam, or where there is direct contact with any of these.
When EX600-D□□E or EX600-D□□F are connected, the enclosure of the manifold should be IP40.
Also, the Handheld Terminal confirms to IP20, so prevent foreign matter from entering inside, and water, solvent or oil from coming in direct contact with it.

Operating Environment

⚠Caution

2. Provide adequate protection when operating in locations such as the following.

Failure to do so may cause damage or malfunction.
The effect of countermeasures should be checked in individual equipment and machine.

1) Where noise is generated by static electricity, etc.
2) Where there is a strong electric field
3) Where there is a danger of exposure to radiation
4) When in close proximity to power supply lines

3. Do not use in an environment where oil and chemicals are used.

Operating in environments with coolants, cleaning solvents, various oils or chemicals may cause adverse effects (damage, malfunction) to the unit even in a short period of time.

4. Do not use in an environment where the product could be exposed to corrosive gas or liquid.

This may damage the unit and cause it to malfunction.

5. Do not use in locations with sources of surge generation.

Installation of the unit in an area around the equipment (electromagnetic lifters, high frequency induction furnaces, welding machine, motors etc.), which generates the large surge voltage could cause to deteriorate an internal circuitry element of the unit or result in damage. Implement countermeasures against the surge from the generating source, and avoid touching the lines with each other.

6. Use the product type that has an integrated surge absorption element when directly driving a load which generates surge voltage by relay, solenoid valves or lamp.

When a surge generating load is directly driven, the unit may be damaged.

7. The product is CE/UKCA marked, but not immune to lightning strikes. Take measures against lightning strikes in your system.

8. Keep dust, wire scraps and other extraneous material from getting inside the product.

This may cause malfunction or damage.

9. Mount the unit in such locations, where no vibration or shock is affected.

This may cause malfunction or damage.

10. Do not use in places where there are cyclic temperature changes.

In case that the cyclic temperature is beyond normal temperature changes, the internal unit is likely to be adversely effected.

11. Do not use in direct sunlight.

Do not use in direct sunlight. It may cause malfunction or damage.

12. Use this product within the specified ambient temperature range.

This may cause malfunction.

13. Do not use in places where there is radiated heat around it.

Such a place is likely to cause malfunction.

VQC1000/2000 Series
Specific Product Precautions 7

Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

EX600 Precautions

Adjustment/Operation

⚠Warning

1. Do not perform operation or setting with wet hands.
There is a risk of electrical shock.

<Handheld Terminal>

2. Do not apply pressure to the LCD display.
There is a possibility of the crack of LCD display and injuring.

3. The forced input/output function is used to change the signal status forcibly. When operating this function, be sure to check the safety of the surroundings and installation.
Otherwise, injury or equipment damage could result.

4. Incorrect setting of parameters can cause malfunction. Be sure to check the settings before use.
This may cause injury or equipment damage.

⚠Caution

1. Use a watchmaker's screwdriver with thin blade for the setting of each switch of the SI unit.
When setting the switch, do not touch other unrelated parts.
This may cause parts damage or malfunction due to a short circuit.

2. Provide adequate setting for the operating conditions.
Failure to do so could result in malfunction.
Refer to the Operation Manual for setting of the switches.


3. For the details of programming and address setting, refer to the manual from the PLC manufacturer.
The content of programming related to protocol is designed by the manufacturer of the PLC used.

<Handheld Terminal>

4. Do not press the setting buttons with a sharp pointed object.
This may cause damage or malfunction.

5. Do not apply excessive load and impact to the setting buttons.
This may cause damage, equipment failure or malfunction.

When the order does not include the SI unit, the valve plate to connect the manifold and SI unit is not mounted. Use attached valve fixing screws and mount the valve plate.
(Tightening torque: 0.6 to 0.7 N·m)

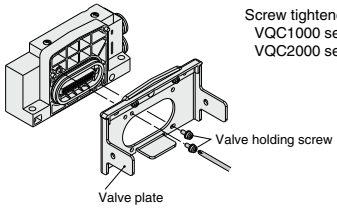

Maintenance

⚠Warning

1. Do not disassemble, modify (including circuit board replacement) or repair this product.
Such actions are likely to cause injuries or breakage.

2. When an inspection is performed,
- **Turn off the power supply.**
- **Stop the air supply, exhaust the residual pressure in piping and verify that the air is released before performing maintenance work.**

Unexpected malfunction of system components and injury can result.

⚠Caution

1. When handling and replacing the unit:
- **Do not touch the sharp metal parts of the connector or plug.**
- **Do not apply excessive force to the unit.**
The connecting portions of the unit are firmly joined with seals.
- **When joining units, take care not to get fingers caught between units.**
Injury can result.

2. Perform periodic inspection.
Unexpected malfunction in the system composition devices is likely to occur due to malfunction of machinery or equipment.

3. After maintenance, make sure to perform an appropriate functionality inspection.
In cases of abnormality such as faulty operation, stop operation. Unexpected malfunction in the system composition devices is likely to occur.

4. Do not use benzene and thinner for cleaning units.
Damage to the surface or erasure of the display can result. Wipe off any stains with a soft cloth.
If the stain is persistent, wipe off with a cloth soaked in a dilute solution of neutral detergent and wrung out tightly, and then finish with a dry cloth.

■ **Trademark**
DeviceNet® is a registered trademark of ODVA, Inc.
EtherNet/IP® is a registered trademark of ODVA, Inc.
EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.